

GP5128 and GP5128-BSP Spare Parts List

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	13266	Crankcase	1	31	13284	Radial Shaft Seal	3
2	13000	Oil Filler Plug Assembly	1	35	04286	Seal Sleeve	3
3	05943	Oil Sight Glass Assembly	1	35B	08183	O-Ring	3
4	13267	Crankcase Cover	1	36	13228	Grooved Ring	3
5	13268	O-Ring	1	37	04287	Seal Case	3
7	04334	Drip Pan	1	37A	07700	O-Ring	6
8	07105	Oil Dip Stick	1	39	13197	Pressure Ring	3
9	01009	O-Ring, Dip Stick	1	40	13115	V-Sleeve	6
10	07008	Inner Hexagon Screw	4	41	13198	Sleeve Support Ring	3
11	06725	Spring Washer	4	42	07173	Tension Spring	3
12	07703	Drain Plug, 3/4" BSP	1	43	04288-NPT	Valve Casing (GP5128)	1
13	07704	Gasket, Drain Plug	1	43	04288	Valve Casing (GP5128-BSP)	1
14	13271	Bearing Cover	2	44	07150	O-Ring	6
15	13272	Radial Shaft Seal	2	45	07109	Plug, 1/2" BSP (GP5128 only)	1
16	08182	O-Ring	2	45A	06272	Copper Seal Ring, 1/2" (GP5128 only)	1
17	13358	Hexagon Screw	8	46	07060	Valve Assembly	6
18	06725	Spring Washer	8	46A	07064	Valve Seat	6
20	13206	Taper Roller Bearing	2	46B	07063	Valve Plate	6
20A*	13207	Shim, 0.1mm	1-5	46C	07062-0100	Valve Spring	6
20B*	04723	Shim, 0.15mm	1-5	46D	07066	Spacer Pipe	6
20C*	04724	Shim, 0.2mm	1-5	47	04295	Spacer Ring	3
21	13273	Shaft Protector	1	48	04289	Plug	3
22	13274	Crankshaft	1	48A	07008	Inner Hexagon Screw	12
23	13275	Fitting Key	1	48B	13012	O-Ring	3
24	13276	Connecting Rod Assembly	3	48C	06078	Tension Spring	3
25	13279	Crosshead Assembly	3	49	13339	Inner Hexagon Screw	8
28	13281	Crosshead Pin	3	52	13362	Disc for Crankshaft	1
29A	07125	Centering Sleeve	3	53	13358	Hexagon Screw	1
29B	13220	Plunger Pipe (GP5128/GP5128-BSP)	3	54	06626	Plug, 1" NPT (GP5128/GP5128-SSP)	1
29B	13220-SS	Plunger, HM Coating, GP5128-SSP		54	13321	Plug, 1" BSP (GP5128-BSP)	1
29C	13031	Tensioning Screw	3	55	06627	Plug, 1-1/2" NPT (GP5128/GP5128-SSP)	2
29D	07755	Copper Ring	3	55	13322	Plug, 1-1/2" BSP (GP5128-BSP)	2
30	13282	Oil Scraper	3	56	07623	Eye Bolt	1
30A	05889	Washer for Drip Shield	3				

*May not be present

GP5128 and GP5128-BSP Repair Kits

Plunger Packing Kit - #09761

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
35B	08183	O-Ring	3
36	13228	Grooved Ring	3
37A	07700	O-Ring	6
40	13115	V-Sleeve	6

Valve Assembly Kit - #09762

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
44	07150	O-Ring	6
46	07060	Valve Assembly	6
48B	13012	O-Ring	3

Oil Seal Kit - #09230

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	13284	Oil Seal	3