

GP5132 and GP5132-SSP SPARE PARTS LIST

ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	13266A	Crankcase	1	35	13359	Seal Sleeve	3
1A	05225	Head of Oil Dipstick	1	35A	08183	O-Ring	3
1B	01009	O-Ring	1	36	13360	Grooved Ring	3
2	13000	Oil Filler Plug Assembly	1	37	13361	Seal Case	3
3	05943	Oil Sight Glass Assembly	1	37A	07700	O-Ring	3
4	13267	Crankcase Cover	1	37B	07653	O-Ring	3
5	13268	O-Ring	1	39	13026	Pressure Ring	3
6A	07223-0100	Spring Washer	2	40	13027	V-Sleeve	6
6B	05051	Hexagon Screw	2	41	13028	Sleeve Support Ring	3
7	04334	Drip Pan	1	42	07173	Tension Spring	3
8	07603	Oil Dip Stick Assembly	1	43	13300	Valve Casing	1
9	01009	O-Ring, Dip Stick	1	44	07109	Plug, 1/2" BSP	1
10	07008	Inner Hexagon Screw	4	45	06272	Copper Washer, 1/2" BSP	1
11	06725	Spring Washer	4	46	13302	Suction Valve Assembly	3
12	07703	Drain Plug, 3/4" BSP	1	46A	12055	O-Ring	3
13	07704	Gasket, Drain Plug	1	46B	08059	O-Ring	3
14	13271	Bearing Cover	2	46C	13304	Suction Valve Seat	3
15	13272	Radial Shaft Seal	2	46D	13306	Valve Plate	3
16	08182	O-Ring	2	46E	13307	Valve Spring	3
17	13358	Hexagon Screw	8	46F	13308	Spring Tension Cap	3
18	06725	Spring Washer	8	46G	13309	Spacer Pipe	3
20	13206	Taper Roller Bearing	2	47	13311	Discharge Valve Assembly	3
20A	13207	Shim, 0.1mm	1-5	47A	13289	O-Ring	3
20B	04723	Shim, 0.15mm	1-5	47B	07700	O-Ring	3
20C	04724	Shim, 0.2mm	1-5	47C	13314	Discharge Valve Seat	3
21	13273	Shaft Protector	1	47D	13306	Valve Plate	3
22	13274	Crankshaft	1	47E	13307	Valve Spring	3
23	13275	Fitting Key	1	47F	13308	Spring Tension Cap	3
24	13276	Connecting Rod Assembly	3	48	13316	Plug	3
25	13279	Crosshead Assembly	3	48A	07008	Inner Hexagon Screw	12
28	13281	Crosshead Pin	3	48B	07740	O-Ring	3
29A	07125	Centering Sleeve	3	48C	07232	Pressure Spring	3
29B	13022	Plunger Pipe (GP5132)	3	49	13339	Inner Hexagon Screw	8
29B	13022-SS	Plunger Pipe (GP5132-SSP)	3	52	13362	Disc for Crankshaft	1
29C	13031	Tensioning Screw	3	53	13358	Hexagon Screw	1
29D	07755	Copper Ring	3	54	06626	Plug, 1" NPT	1
30	13282	Oil Scraper	3	55	06627	Plug, 1-1/2" NPT	2
30A	05889	Washer for Drip Shield	3	56	07623	Eye Bolt	1
31	13284	Radial Shaft Seal	3	56A	22610	Plug, 1/4" NPT	3

GP5132 and GP5132-SSP Pumps Torque Specifications and Lubrication Information				
Position	Item #	Description	Lubricatin Info	Torque Amount
1	13266	Crankcase	Molycote Cu-Paste	
3	05943	Oil Sight Glass Assembly	Loctite 572	22 ft.-lbs. (30 Nm)
10	07008	Inner Hexagon Screw		33 ft.-lbs. (45 Nm)
12	07703	Drain Plug, 3/4" BSP		74 ft.-lbs. (100 Nm)
17	13358	Hexagon Screw		33 ft.-lbs. (45 Nm)
24	13276	Connecting Rod Assembly		22 ft.-lbs. (30 Nm)
29C	13031	Tension Screw, Plunger	Loctite 243	22 ft.-lbs. (30 Nm)
31	13284	Radial Shaft Seal	Loctite 403	
48A	07008	Inner Hexagon Screw, Plug	Pro Pack 550	35 ft.-lbs. (47 Nm)
49	13339	Inner Hexagon Screw, Valve Casing		89 ft.-lbs. (120 Nm)

GP5132 and GP5132-SSP REPAIR KITS

Plunger Packing Kit - #09290

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
35B	08183	O-Ring	3
36	13360	Grooved Ring	3
37A	07700	O-Ring	3
37B	07653	O-Ring	3
40	13027	V-Sleeve	6

Oil Seal Kit - #09230

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	13284	Oil Seal	3

Valve Assembly Kits

Inlet Valve Kit, GP5100 Series, #09231

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
46A	12055	O-Ring	1
46B	08059	O-Ring	1
46C	13304	Valve Seat	1
46D	13306	Valve Plate	1
46E	13307	Valve Spring	1

Discharge Valve Kit, GP5100 Series, # 09232

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
47A	13289	O-Ring	1
47B	07700	O-Ring	1
47C	13314	Valve Seat	1
47D	13306	Valve Plate	1
47E	13307	Valve Spring	1

Complete Valve Repair Kit, #09812

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
46A	12055	O-Ring	3
46B	08059	O-Ring	3
46C	13304	Inlet Valve Seat	3
46D	13306	Valve Plate	3
46E	13307	Valve Spring	3
46F	13308	Spring Tension Cap	3
46G	13309	Spacer Pipe	3
47A	13289	O-Ring	3
47B	07700	O-Ring	3
47C	13314	Discharge Valve Seat	3
47D	13306	Valve Plate	3
47E	13307	Valve Spring	3
47F	13308	Spring Tension Cap	3
48B	07740	O-Ring	3