

GP7150A and GP7155A Repair Instructions

Maintenance and Servicing

For the type of threadlocker used and the required tightening torques, observe the table in the exploded view.

Special tools required

The following special tools are required for assembly:

- Extraction tool (part no. 07662)
- Pull-out tool size 5
- Snap-ring tongs

Suction and Discharge Valves

Screw off plugs (58).

Take out tension spring (57).

Remove the complete valve (51, 52) and valve holder (55) using either a valve tool or an M16 hexagon screw.

To dismantle valves:

Screw valve seat (51E, 52E) out of spring tension cap (51A, 52A).

Check sealing surfaces and replace worn parts.

Check O-rings and support rings.

Tighten plugs (58) to the required torque.



If worn, the discharge valve seat (52E) can be turned 180° round and refitted.

Seals and Plunger

Loosen nuts (49A) and remove pump head.

Separate plunger connection (36A) from crosshead (25) by means of an open-end wrench (size 36).

Pull seal sleeves (39) out of their fittings in the crankcase.

Take seal case (38) out of seal sleeve (39).

For P71/145 and P71/200 remove tension spring (45).

Examine plunger parts (36A-36D), seals (42,39A) and O-rings. When replacing plunger pipe (36B), tighten tension screws (36C) to the required torque.

Replace worn parts; grease seals with Silicone before installing.



Don't loosen the 3 plunger connections (36A) before the valve casing has been removed. Otherwise the tension screw (36C) could hit against the Spring Tension Cap (51A) when the pump is being turned.

Seal life can be increased if the pretensioning allows for a little leakage.

This assists lubrication and keeps the seals cool.

It is therefore not necessary to replace seals before the leakage becomes too heavy and causes output and operating pressure to drop.

When reassembling, tighten plunger screws (36A) to the required torque.

Mounting Valve Casing:

Check O-rings on seal case (38).

Clean surfaces of seal sleeves in gear box and sealing surfaces of valve casing.

Push valve casing carefully onto O-rings of seal case and centring studs (50A).

Tighten nuts (49A) to the required torque.

If required, supplementary assembly instructions can be requested from the manufacturer Giant Industries.

Spare Parts

When **ordering spare parts**, please specify **pump type, pump number, year of manufacture, and parts code number**.

This data can be found on the nameplate and in the spare parts list

Malfunctions / Remedy

For informations, see assembly instructions Giant Industries.

Materials Used

Valve Casing:	Aluminum Bronze
G-versions:	Spheroidal Cast Iron
Plunger:	Solid ceramic
Valves:	High-Grade Stainless Steel
Seals:	Nitrile with fabric reinforcing
O-rings:	Nitrile

Paint

The pump drive is painted in RAL 3001 as standard.