

LP121A, LP200, LP250, and LP250W-MT Parts List

ITEM	PART	DESCRIPTION	QTY	ITEM	PART	DESCRIPTION	QTY
1	07759	Crankcase	1	35	07170	Seal Sleeve (LP121A)	3
2	13000	Oil filler Plug Assy.	1	36	13228	Leakage Seal (LP200)	3
3	05940	Cover Plate	1	36	13291	Leakage Seal (LP121A)	3
3A	07223-0100	Spring Ring	2	36	13360	Leakage Seal (LP250, LP200)	3
3B	05051	Hexagon Screw	2	36	13025	Leakage Seal (LP250W-MT)	3
4	06085	Crankcase Cover	1	37	07170	Seal Case (except LP121A)	3
5	07104	O-ring, Crankcase Cover	1	37	07139	Seal Case (LP121A only)	3
6	05943	Oil Sight Glass	1	38	07140	O-Ring (except LP121A)	3
8	06086	Oil Dipstick Assy.	1	38	07140	O-Ring (except LP121A only)	6
9	01009	O-Ring, Dipstick Assy.	1	38A	12055	O-Ring (except LP121A)	3
10	01010	Cylinder Screw	4	39	13197	Pressure Ring (LP200)	3
11	01011-0400	Spring Ring	5	39	13026	Pressure Ring (LP250, LP250W-MT)	3
12	07109	Plug, 1/2" BSP	1	39	07142	Pressure Ring (LP121A)	3
13	07182	Gasket	1	40	13115	V-Sleeve (LP200)	6
14	07111	Bearing Cover	2	40	13027	V-Sleeve (LP250, LP250W-MT)	6
15	07112	Radial Shaft Seal	2	40	07144	V-Sleeve (LP121A)	6
16	07113	O-Ring	2	41	13198	Support Ring (LP200)	3
17	07114	Hexagon Screw	8	41	13028	Support Ring (LP250, LP250W-MT)	3
20	07116	Taper Roller Bearing	2	41	07146	Support Ring (LP121A)	3
20A	07117	Fitting Disc	1-3	42	07173	Tension Spring (except LP121A)	3
20B	13001	Fitting Disc	1-3	42	07147	Tension Spring (LP121A only)	3
21	05376	Shaft Protector	1	43	13029	Valve Casing	1
21A	05377	Shaft Guard Holder	1	44A	07150	O-Ring	9
22	13242	Crankshaft	1	44B	06266	Support Ring for O-Ring	3
23	13243	Fitting Key	1	45	06078	Compression Spring	3
24	13340	Connecting Rod Assy.	3	46A	07064	Valve Seat	6
24A	13227	Hex Screw	3	46B	07063	Valve Plate	6
24B	13278	Spring Washer	3	46C	07750-0100	Valve Spring	6
25	13341	Crosshead / Plunger Assy.	3	46D	07066	Spacer Pipe	6
28	13232	Crosshead Pin	3	48	06077	Plug	3
29A	07125	Centering Sleeve	3	49	07157	Stud Bolt	8
29B	13220	Plunger Pipe (LP200)	3	49A	07158	Hexagon Nut	8
29B	13022	Plunger Pipe (LP250, LP250W-MT)	3	49B	07159	Disc	8
29B	07130	Plunger Pipe (LP121A)	3	50	07423	Plug	1
29C	13031	Tension Screw	3	50A	07161	Copper Ring	1
29D	07755	Copper Ring	3	52	13020	Disc for Crankshaft	1
30	07779	Drip Shield	3	53	06607	Hexagon Screw	1
31	07133	Radial Shaft Seal	3	54	13321	Plug, 1" BSP*	2
35	13196	Seal Sleeve (LP200)	3	55	13322	Plug 1-1/2" BSP*	2
35	13024	Seal Sleeve (LP250, LP250W-MT)	3				

*BSP to NPT Adapters/Seals (sold separately)

Inlet = 13375 (Adapter) / 13374 (Seal)

Discharge = 13373 (Adapter) / 13372 (Seal)

LP121A, LP200, LP250 SERIES & LP250W-MT REPAIR KITS

LP200 - #9307				LP250 Series - #9308			
Item	Part#	Description	Qty.	Item	Part#	Description	Qty.
36	13228	Leakage Seal	3	36	13360	Grooved Ring	3
38	07140	O-Ring	3	38	07140	O-Ring	3
38A	12055	O-Ring	3	38A	12055	O-Ring	3
40	13115	V-Sleeve	6	40	13027	V-Sleeve	6

LP121A - #09720				LP250W-MT - #9308-MT			
Item	Part#	Description	Qty.	Item	Part#	Description	Qty.
36	13291	Leakage Seal	3	36	13025	Leakage Seal	3
38	07140	O-Ring	6	38	07140	O-Ring	3
40	07144	V-Sleeve	6	38A	12055	O-Ring	3
				40	13027	V-Sleeve	6

Valve Kit - #09196			
Item	Part#	Description	Qty.
44A	07150	O-Ring	9
44B	06266	Support Ring	3
46A	07064	Valve Seat	3
46B	07063	Valve Plate	3
46C	07062	Valve Spring	3

Oil Seal Kit - #09577			
Item	Part#	Description	Qty.
31	07133	Oil Seal Kit	3