

LP122A-3100 & LP250-3100 Spare Parts List

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>	<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
1	07759	Crankcase	1	31	07133	Radial Shaft Seal	3
2	13000	Oil Filler Plug Assembly	1	35	13342-0100	Seal Sleeve (LP122A-3100)	3
3	05940	Cover Plate	1	35	04138	Seal Sleeve (LP250-3100)	3
3A	07223-0100	Spring Washer	2	35A	06619	O-Ring	3
3B	05051-0100	Hexagon Screw	2	35B	13141-0001	O-Ring (LP250-3100)	3
4	06085	Crankcase Cover	1	36	13415	Grooved Ring (LP122A-3100)	3
5	07104	O-Ring	1	36	13025	Grooved Ring (LP250-3100)	3
6	05943	Oil Sight Glass with Gasket	1	36A	13416A-0100	Pressure Ring (LP122A-3100)	3
8	06086	Oil Dipstick Assembly	1	36A	06700	Pressure Ring (LP250-3100)	3
9	01009	O-Ring	1	36B	06174	Drip Shield (LP122A-3100)	3
10	01010-0100	Screw	4	37	04124	Support Disc (LP250-3100)	3
11	01011-0400	Spring Washer	5	39	07744-0100	Pressure Ring (LP122A-3100)	3
12	07109-0400	Oil Drain Plug	1	39	13026-0100	Pressure Ring (LP250-3100)	3
13	06015	O-Ring	1	40	07745	Sleeve (LP122A-3100)	6
14	07111	Bearing Cover	2	40	13027	Sleeve (LP250-3100)	6
15	07112	Crankshaft Seal	2	41	07746-0100	Support Ring (LP122A-3100)	3
16	07113	O-Ring	2	41	06702	Support Ring (LP250-3100)	3
17	07114-0100	HexScrew	8	42	06589	Plug, 1/8" BSP	3
20	07116	Taper Roller Bearing	2	42A	07204-0100	Steel Ring	3
20A	07117	Fitting Disc, 0.1mm	1-3	43	13343-3000	Valve Casing	1
20B	13001	Fitting Disc, 0.15mm	1-3	44	07748-0500	Valve Seat	6
20C	04091	Fitting Disc, 0.2 mm (May not be present)	1-3	44A	07150-0001	O-Ring	6
21	05376	Shaft Protector	1	45	07749-0500	Valve Plate	6
21A	05377	Shaft Guard Holder	1	46	07750	Valve Spring	6
22	13242	Crankshaft	1	46A	07751-0100	Valve Assembly Complete	6
23	13243	Key	1	47	07752	Spring Tension Cap	6
24	13340	Connecting Rod Assembly	3	48	06089	Plug	6
25	13341	Crosshead Plunger Base Assembly	3	48A	06577	O-Ring	6
28	13232	Crosshead Pin	3	49	07157	Stud Bolt	8
29A	07735	Centering Sleeve	3	49A	07158	Nut	8
29B	07736	Plunger Pipe (LP122A-3100)	3	49B	07159	Washer	8
29B	13022	Plunger Pipe (LP250-3100)	3	50	07423-0100	Plug	1
29C	07737-0100	Plunger Bolt	3	50A	07755-0100	Gasket	1
29D	07161A-0100	Gasket for Bolt	3	52	13020	Disk for Crankshaft	1
29E	06618	Spacer Pipe	3	53	04561	Hexagon Screw (LP122A-3100)	1
30	07779	Flinger	3	53	06607	Hexagon Screw (LP250-3100)	1
				54	13044-0100	Plug 1" BSP	1
				55	13322-0100	Plug, 1" BSP	1

LP122A-3100 & LP250-3100 Repair Kits

Plunger Packing Kit LP122A-3100 # 09575

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
35A	06619	O-Ring	3
36	13415	Grooved Ring	3
36B	06174	Drip Shield	3
39	07744-0100	Pressure Ring	3
40	07745	Sleeve	6

LP250-3100 # 09739

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
35A	06619	O-Ring	3
35B	13141-0001	O-Ring	3
36	13025	Grooved Ring	3
39	13026-0100	Pressure Ring	3
40	13027	Sleeve	6

Valve Assembly Kit #09136-0100

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
46A	07751-0100	Valve Assembly	6
48A	06577	O-Ring	6

Oil Seal Kit # 09577

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Radial Shaft Seal	3