

## LP460 Parts List

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>	<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
1	07759	Crankcase	1	29D	07258	Copper Ring	3
2	13000	Oil Filler Plug Assembly	1	30	07779	O-Ring	3
3	05940	Cover Plate	1	31	07133	Oil Seal	3
3A	07223-0100	Spring Ring	2	35	03213	Seal Sleeve	3
3B	05051	Hexagon Screw	2	36	03214	Pressure Ring	3
4	06085	Crankcase Cover	1	37	07322	Sleeve	3
5	07104	O-Ring, Crankcase Cover	1	37A	07322-0020	Sleeve, Teflon	3
6	05943	Oil Sightglass with Gasket	1	38	07270	Sleeve Support Ring	3
8	06086	Oil Dipstick Assembly	1	38A	13423	Spring	3
9	01009	O-Ring, Dipstick	1	40	04118	O-Ring	3
10	01010	Cylinder Screw	4	40A	05523	O-Ring	3
11	01011-0400	Spring Ring	5	42	04146	Seal Case	3
12	07109	Plug	1	43	13426	Valve Retainer	3
13	06015	O-Ring	1	44	04394	Valve Assembly (44A-44E)	6
14	07111	Bearing Cover	2	44A	04395	Spring Tension Cap	6
15	07112	Radial Shaft Seal	2	44B	04396	Valve Spring	6
16	07113	O-Ring	2	44C	04147	Valve Plate	6
17	07114	Hexagon Screw	8	44D	04121	Valve Seat	6
20	07116	Taper Roller Bearing	2	44E	04123	O-Ring	6
20A	07117	Fitting Disc	1-3	45	04148	Valve Casing	1
20B	13001	Fitting Disc	1-3	46	07157	Stud Bolt	8
21	05376	Shaft Protector	1	47	07158	Hexagon Nut	8
21A	05377	Shaft Guard Holder	1	47A	07159	Disc	8
22	13242	Crankshaft	1	48	07161	Copper Washer	1
23	13243	Fitting Key	1	49	07423	Plug, 1/4" BSP	1
24	13340	Connecting Rod Assembly	3	50	04122	Valve Plug	3
24A	13277	Inner Hexagon Screw	6	51	05972	O-Ring	3
24B	13278	Spring Washer	6	52	13020	Disc for Crankshaft	1
25	13244	Crosshead and Plunger Assembly	3	53	04561	Hexagon Screw	1
28	13232	Crosshead Pin	3	55	13434	Plug, 1/2" BSP	1
29A	07256	Centering Sleeve	3	55A	06272	Copper Washer	1
29B	07262	Plunger Pipe	3	56	07703	Plug, 3/4" BSP	1
29C	13007	Tensioning Screw	3	56A	07704	Copper Washer	1

## LP460 Repair Kits

### Plunger Packing Kit - # 09743

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
37	07322	Sleeve	3
37A	07322-0020	Sleeve, Teflon	3

### Valve Assembly Kit - # 09744

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
40	04118	O-Ring	3
40A	05523	O-Ring	3
44	04394	Valve Assembly	6

### Oil Seal Kit - # 09577

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Oil Seal	3