

P55-5100 and P56-5100 Pump Parts List

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>	<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
1	07180	Crankcase	1	24A	06066	Ceramic Plunger (P56-5100)	3
2	07181	Oil Filler Plug w/Gasket	1	24B	08456-0100	Bolt	3
2A	07182	Gasket, Oil Filler Cap	1	24C	07204-0100	Steel Ring	3
3	07183	Cover, Crankcase	1	24D	07023	O-Ring	3
4	07184	O-Ring, Crankcase Cover	1	24E	07203	Support Ring	3
5	07185	Oil Dip Stick Assembly	1	25	07205	Flinger	3
6	01009	O-Ring, Dip Stick	1	26	07206	Crankcase Oil Seal	3
7	07186	Oil Sight Glass w/Gasket	1	26A	13346	Oil Seal Retainer	3
9	07188	Screw, Crankcase Cover	4	28	07207	Shim, Manifold Stud	2
10	07189	Spring Washer	4	29	07369-5000	Manifold Head	1
11	07190-0100	Oil Drain Plug w/Gasket	2	30	07010-0100	Pressure Ring (P55-5100)	3
11A	07191	Gasket, Oil Drain Plug	2	30	07221-0100	Pressure Ring (P56-5100)	3
12	07192	Bearing Cover	2	31	07011	V-Sleeve (P55-5100)	3
13	07193	O-Ring, Bearing Cover	2	31	06076	V-Sleeve (P56-5100)	3
14	01166	Radial Shaft Seal	2	32	07012-0100	Support Ring (P55-5100)	3
15	01086	Ball Bearing	2	32	07209-0100	Support Ring (P56-5100)	3
16	07196	Screw, Bearing Cover	6	33	07210-0100	Pressure Spring	3
16A	01011-0400	Spring Washer	6	34	07325-0100	Retainer, Spring	6
17	05023	Shaft Protector	1	35	06017-0100	Valve Spring	6
18	12128	Crankshaft, P55-5100	1	36	06016-0100	Valve Plate	6
18	03665	Crankshaft, P56-5100	1	37	06014-0100	Valve Seat	6
19	01024	Key	1	38	06015	O-Ring, Valve Seat	6
20	07199	Connecting Rod w/ Screws	3	39	07211-0100	Adapter, Inlet Valve	3
21	01027	Connecting Rod Screw and Washer	6	40	07212	O-Ring, Adapter	3
22	07201	Plunger Base w/ S.S. Crosshead	3	41	07213-0100	Plug, Manifold	6
23	01031	Crosshead Pin	3	42	07214	O-Ring, Manifold Plug	6
24A	07021	Ceramic Plunger (P55-5100)	3	45	07215	Stud, Manifold	4
				46	08040-0100	Hex Nut, Manifold Stud	4
				47	08041	Spring Washer, Stud	4
				52	12250	Inlet Plug, 1/2" BSP	1
				53	12138	Discharge Plug, 3/8" BSP	1

P55-5100 and P56-5100 Pump Repair Kits

Plunger Packing Kits

P55-5100 - #09572

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	07011	V-Sleeve	3
38	06015	O-Ring, Valve Seat	3
40	07212	O-Ring, Adapter	3
42	07214	O-Ring, Manifold Plug	3

P56-5100 - #09573

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	06076	V-Sleeve	3
38	06015	O-Ring, Valve Seat	3
40	07212	O-Ring, Adapter	3
42	07214	O-Ring, Manifold Plug	3

Valve Assembly Kit

#09041-0100

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
34	07325-0100	Retainer, Spring	6
35	06017-0100	Valve Spring	6
36	06016-0100	Valve Plate	6
37	06014-0100	Valve Seat	6
38	06015	O-Ring, Valve Seat	6
40	07212	O-Ring, Adapter	3
42	07214	O-Ring, Manifold Plug	6

Oil Seal Kit

#09202

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
26	07206	Oil Seal	3