

P56HT, P56HTK and P56W-HK Parts List

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	07180	Crankcase	1	28	07207	Shim, Manifold Stud	2
2	07181	Oil Filler Cap with Gasket	1	29	07369-NPT	Manifold Head	1
2A	07182	Gasket, Oil Filler Cap (not shown)	1	29A	11502	Set Screw (except P56W-HK)	2
3	07183	Cover, Crankcase	1	30	07221	Pressure Ring	3
4	07184	O-Ring, Crankcase Cover	1	31	13355	V-Sleeve (P56HT)*	3
5	07185	Oil Dip Stick Assembly	1	31	06076	Sleeve (P56HTK/HK)*	3
6	01009	O-Ring, Dip Stick	1	31A	06537	Sleeve**	3
7	07186	Oil Sight Glass Assembly	1	32	07209	Support Ring	3
8	07187	Gasket, Oil Sight Glass (not shown)	1	33	07210	Pressure Spring	3
9	07188	Screw, Crankcase Cover	4	34	05593	Retainer, Spring	6
10	07223-0100	Spring Washer	4	35	06017-0100	Valve Spring	6
11	07190	Oil Drain Plug Assembly	2	36	06016	Valve Plate	6
11A	13262	Gasket, Oil Drain Plug	2	37	06014	Valve Seat	6
12	07192	Bearing Cover	2	38	06015	O-Ring, Valve Seat	6
13	07193	O-Ring, Bearing Cover	2	39	13356	Adapter Inlet Valve	3
14	01166	Radial Shaft Seal	2	40	07212	O-Ring, Adapter	3
15	01086	Grooved Ball Bearing	2	41	07213	Plug, Manifold (Inlet)	3
16	07114	Screw, Bearing Cover	6	42	07214	O-Ring, Manifold Plug (Inlet)	3
17	05375	Shaft Protector	1	43	07792	Plug (Discharge)	3
18	13330	Crankshaft	1	44	07035	O-Ring, Manifold Plug (Discharge)	3
19	13331	Straight Key, 8mm	1	45	07215	Stud, Manifold	4
20	07199	Connecting Rod Assembly	3	46	08040	Hex Nut, Manifold Stud	4
21	01027	Conn. Rod Screw w/ Washer	6	47	08041	Spring Washer, Stud	4
22	07201	Plunger Base w/ S.S. Crosshead	3	48	07036	Housing, Rear V-Sleeve (P56HT/HK)	1
23	01031	Crosshead Pin	3	48	07036A	Housing, Rear V-Sleeve (P56HTK)	1
24A	06066	Ceramic Plunger	3	49	07218	O-Ring, Rear V-Sleeve Housing	1
24B	08456	Tension Screw	3	50	08358	Grooved Seal Ring, Black	3
24C	07676	Copper Gasket	3	51	06240	Support Ring	3
25	06648	Flinger	3				
26	07206	Crankcase Oil Seal	3				
26A	07764	Spacer Sleeve	3				

* Seal Height ≈ 5.3 mm
 ** Seal Height ≈ 3.6 mm

P56HT and P56HTK REPAIR KITS

Plunger Packing Kits

P56HT, #09457

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	13355	V-Sleeve	3
31A	06537	High Temperature Seal	3
40	07212	O-Ring Adaptor	3
42	07214	O-Ring Manifold Plug (Inlet)	3
44	07035	O-Ring Manifold Plug (Discharge)	3
49	07218	O-Ring	1
50	08358	Grooved Seal Ring	3
51	06240	Support Ring	3

Valve Assembly Kit, #09458

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
34	05593	Retainer, Valve Spring	6
35	06017-0100	Valve Spring, S.S.	6
36	06016	Valve Plate	6
37	06014	Valve Seat	6
38	06015	O-Ring	6

Oil Seal Kit, #09202

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
26	07206	Crankcase Oil Seal	3

P56HTK and P56W-HK, #09815

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	06076	V-Sleeve	3
31A	06537	High Temperature Seal	3
40	07212	O-Ring Adaptor	3
42	07214	O-Ring Manifold Plug (Inlet)	3
44	07035	O-Ring Manifold Plug (Discharge)	3
49	07218	O-Ring	1
50	08358	Grooved Seal Ring	3
51	06240	Support Ring	3