

## LP121A-5100, LP200-5100, and LP250-5100 Parts List

ITEM	PART	DESCRIPTION	QTY	ITEM	PART	DESCRIPTION	QTY
1	07759	Crankcase	1	36	13228	Leakage Seal (LP200)	3
2	13000	Oil filler Plug Assembly	1	36	13360	Leakage Seal (LP250)	3
3	05940	Cover Plate	1	36	13291	Leakage Seal (LP121A)	3
3A	07223-0100	Spring Ring	2	37	07170-0100	Seal Case (LP200, LP250)	3
3B	05051-0100	Hexagon Screw	2	37	07139-0100	Seal Case (LP121A)	3
4	06085	Crankcase Cover	1	38	07140	O-Ring (LP200, LP250)	3
5	07104	O-ring, Crankcase Cover	1	38	07140	O-Ring (LP121A only)	6
6	05943	Oil Sight Glass Assembly	1	38A	12055	O-Ring (LP200, LP250)	3
8	06086	Oil Dipstick Assembly	1	39	13197-0100	Pressure Ring (LP200)	3
9	01009	O-Ring, Dipstick Assembly	1	39	13026-0100	Pressure Ring (LP250)	3
10	01010-0100	Cylinder Screw	4	39	07142-0100	Pressure Ring (LP121A)	3
11	01011-0400	Spring Ring	5	40	13115	V-Sleeve (LP200)	6
12	07109-0400	Plug, 1/2" BSP	1	40	13027	V-Sleeve (LP250)	6
13	06015	O-Ring	1	40	07144	V-Sleeve (LP121A)	6
14	07111	Bearing Cover	2	41	13198-0100	Support Ring (LP200)	3
15	07112	Radial Shaft Seal	2	41	13028-0100	Support Ring (LP250)	3
16	07113	O-Ring	2	41	07146-0100	Support Ring (LP121A)	3
17	07114-0100	Hexagon Screw	8	42	07173	Tension Spring (LP200, LP250)	3
20	07116	Taper Roller Bearing	2	42	07147	Tension Spring (LP121A)	3
20A	07117	Fitting Disc	1-3	43	13018-5000	Valve Casing	1
20B	13001	Fitting Disc	1-3	44A	07150	O-Ring	9
21	05376	Shaft Protector	1	44B	06266	Support Ring for O-Ring	3
21A	05377	Shaft Guard Holder	1	45	06078	Compression Spring	3
22	13242	Crankshaft	1	46A	07064-0100	Valve Seat	6
23	13243	Fitting Key	1	46B	07063-0100	Valve Plate	6
24	13340	Connecting Rod Assembly	3	46C	07062-0100	Valve Spring	6
24A	13227	Hex Screw	3	46D	07066	Spacer Pipe	6
24B	13278	Spring Washer	3	48	06077-0100	Plug	3
25	13341	Crosshead / Plunger Assembly	3	49	07157	Stud Bolt	8
28	13232	Crosshead Pin	3	49A	07158	Hexagon Nut	8
29A	07125	Centering Sleeve	3	49B	07159	Disc	8
29B	13220	Plunger Pipe (LP200)	3	50	07423-0100	Plug	1
29B	13022	Plunger Pipe (LP250)	3	50A	07755-0100	Steel Ring	1
29B	07130	Plunger Pipe (LP121A)	3	52	13020	Disc for Crankshaft	1
29C	07131-0100	Tension Screw	3	53	04561	Hexagon Screw	1
29D	07161A-0100	Steel Ring	3	54	13044-0100	Plug, 1" BSP*	2
30	07779	Drip Shield	3	55	13322-0100	Plug 1-1/2" BSP*	2
31	07133	Radial Shaft Seal	3				
35	13228-0100	Seal Sleeve (LP200)	3				
35	13024-0100	Seal Sleeve (LP250)	3				
35	07135-0100	Seal Sleeve (LP121A)	3				

\*BSP to NPT Adapters/Seals (sold separately)  
 Inlet = 13375-0100 (Adapter) / 13374-0100 (Seal)  
 Discharge = 13373-0100 (Adapter) / 13372-0100 (Seal)

## LP121A-5100, LP200-5100, and LP250-5100 REPAIR KITS

Plunger Packing Kits							
LP200-5100 - #9307				LP250-5100 - #9308			
Item	Part#	Description	Qty.	Item	Part#	Description	Qty.
36	13228	Leakage Seal	3	36	13360	Grooved Ring	3
38	07140	O-Ring	3	38	07140	O-Ring	3
38A	12055	O-Ring	3	38A	12055	O-Ring	3
40	13115	V-Sleeve	6	40	13027	V-Sleeve	6

  

LP121A-5100 - #09720			
Item	Part#	Description	Qty.
36	13291	Leakage Seal	3
38	07140	O-Ring	6
40	07144	V-Sleeve	6

Valve Kit - #09196-0100			
Item	Part#	Description	Qty.
44A	07150	O-Ring	9
44B	06266	Support Ring	3
46A	07064-0100	Valve Seat	6
46B	07063-0100	Valve Plate	6
46C	07062-0100	Valve Spring	6

Oil Seal Kit - #09577			
Item	Part#	Description	Qty.
31	07133	Oil Seal Kit	3