


# Model

# 22733/22734

# Pulsator Valve

FOR USE ON MP4130 (22733)  
& MP4120/4124 (22734)

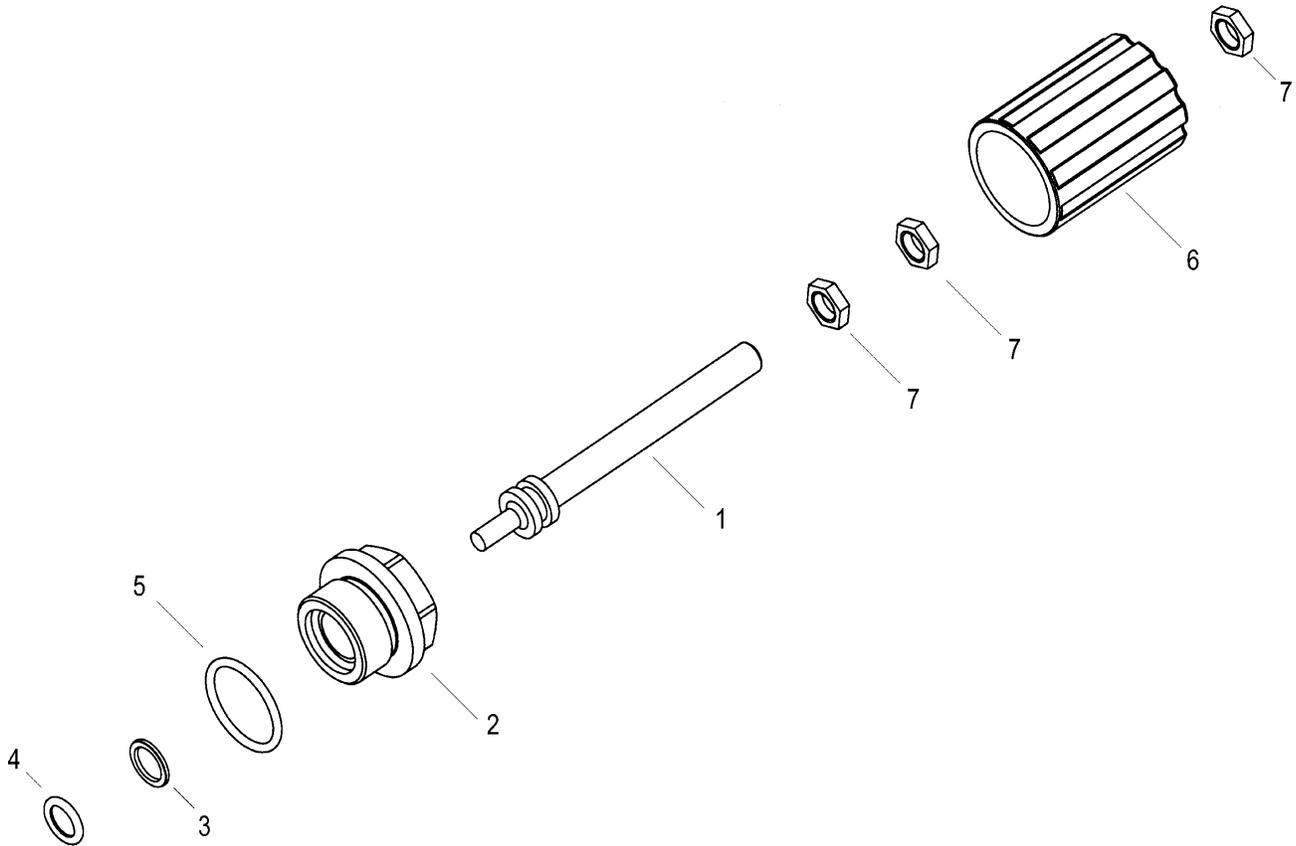

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Quantity</u>
1	06551	Pulsator Rod	1
2	06552	Pulsator Cap (MP4130)	1
2	06553	Pulsator Cap (MP4120/MP4124)	1
3	08324	Back-up Ring	1
4	03001	O-Ring	1
5	07354	O-Ring (MP4130)	1
5	07332	O-Ring (MP4120/MP4124)	1
6	13263	Handwheel	1
7	12320	Limiting Nut	3



**Giant Industries, Inc.**  
900 N. Westwood Ave.  
P.O. Box 3187  
Toledo, Ohio 43607  
(419) 531-4600  
FAX (419) 531-6836  
www.giantpumps.com

© Copyright 2001 Giant Industries, Inc.

# INSTALLATION INSTRUCTIONS

## 22733/22734 Pulsator Valve

For use on MP series pumps

- 1). Remove center inlet valve plug from the front of the pump manifold.
- 2). Adjust the hand wheel (6) on the pulsator until it is all the way out by turning it counter clockwise. (Note: the handwheel will stop when it is all the way out.)
- 3). Install the pulsator assembly into the center inlet valve port and tighten with a 27 mm wrench.

# OPERATING INSTRUCTIONS

- 1). To use the pump as a pulsating pump, turn the handwheel (6) clockwise until it is tight.
- 2). To use the pump as a pressure washer, turn the hand wheel counterclockwise until it stops.