
# **Model 22738**

### **Pulsator Valve**

# FOR USE ON P54, P58, P59 Pumps

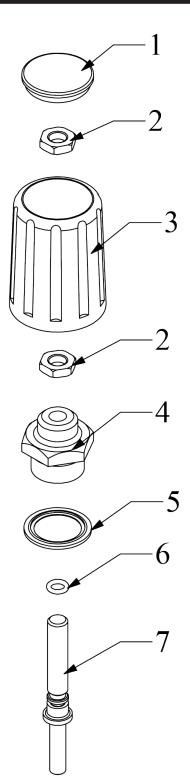

<u>Item</u>	Part #	Description	Quantity
1	07046	Сар	1
2	07044	Lock Nut	2
3	07045	Hand Wheel	1
4	06499	Сар	1
5	08541	Seal Ring	1
6	07937	O-Ring	1
7	06209	Adjusting Screw	1

# **GIANT**

**Performance Under Pressure** 

Giant Industries, Inc. 900 N. Westwood Ave. P.O. Box 3187 Toledo, Ohio 43607 (419) 531-4600 FAX (419) 531-6836 www.giantpumps.com

© Copyright 2020 Giant Industries, Inc.

## **INSTALLATION INSTRUCTIONS**

#### 22738 Pulsator Valve

For use on P54, P58 & P59 pumps

- 1). Remove center plug from the front of the pump manifold.
- 2). Adjust the hand wheel (3) on the pulsator until it is all the way out by turning it counter clockwise. (Note: the handwheel will stop when it is all the way out.)
- 3). Install the pulsator assembly into the center port and tighten with a wrench.

### **OPERATING INSTRUCTIONS**

- 1). To use the pump as a pulsating pump, turn the handwheel (3) clockwise until it is tight.
- 2). To use the pump as a pressure washer, turn the hand wheel counterclockwise until it stops.