Model 22746

Pulsator Valve

ltem	Part #	Description	Quantity	For Use On Pump Models
1	07046	Cover	1	GP7145, GP7150, GP7255A,
2	07044	Lock Nut	3	GP7645, GP7650, GP7655
3	07045	Handwheel	1	31 7043, 31 7030, 31 7033
4	06499	Cap	1	
5	08541	Seal Ring	1	
6	07937	O-Ring	1	
7	06498	Adjusting Screw	1	
8	03274	Extension	1	<u></u>
		7		

<u>Installation</u>

- 1. Remove plug (12) and copper ring (59A).
- 2. Screw pulsator valve into the open part.

Operation

Turn clockwise to disengage inlet valve; this will induse the pulsation. Turn counterclockwise to re-engage inlet valve; this removes the pulsation.



WARNING: This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



Giant Industries, Inc. 900 N. Westwood Ave. Toledo, Ohio 43607 (419) 531-4600 www.giantpumps.com