

## LP121A-5123 Parts List

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	05198	Crankcase	1	30	07779	Drip Shield	3
2	13000	Oil filler Plug Assembly	1	31	07133	Radial Shaft Seal	3
3	05940	Cover Plate	1	35	03272	Seal Sleeve	3
3A	07223-0100	Spring Ring	2	35A	03273	PVC Tubing	1
3B	05051-0100	Hexagon Screw	2	35B	04785	Push-In Fitting	6
4	06085	Crankcase Cover	1	36	13291-0020	Leakage Seal, Teflon	3
5	07104	O-ring, Crankcase Cover	1	36A	05204-0100	Pressure Ring	3
6	05943	Oil Sight Glass Assembly	1	37	07139-0100	Seal Case	3
8	06086	Oil Dipstick Assembly	1	38	07140-0003	O-Ring, EPDM	6
9	01009	O-Ring, Dipstick	1	39	07142-0100	Pressure Ring	3
10	01010-0100	Cylinder Screw	4	40	07144-0020	V-Sleeve, Teflon	6
11	01011-0400	Spring Ring	12	40A	07146-0100	Sleeve Support Ring	3
12	07109-0400	Plug, 1/2" BSP	1	41	06918	Support Ring	3
13	06015	O-Ring	1	42	07147	Tension Spring	3
14	07111	Bearing Cover	2	43	13018-5000	Valve Casing	1
15	07112	Radial Shaft Seal	2	44A	07150-0003	O-Ring, EPDM	9
16	07113	O-Ring	2	44B	06266	Support Ring for O-Ring	3
17	07114-0100	Hexagon Screw	8	45	06078	Compression Spring	3
20	07116	Taper Roller Bearing	2	46	07060-0100	Valve Assembly (46A-46D)	6
20A	07117	Fitting Disc, 0.1 mm	1-3	46A	07064-0100	Valve Seat	6
20B	13001	Fitting Disc, 0.15 mm	1-3	46B	07063-0100	Valve Plate	6
20C	04091	Fitting Disc, 0.2 mm	1-3	46C	07062-0100	Valve Spring	6
21	05376	Shaft Protector	1	46D	07066	Spacer Pipe	6
21A	05377	Shaft Guard Holder	1	48	06077	Plug	3
22	13242	Crankshaft	1	49	07157	Stud Bolt	8
23	13243	Fitting Key	1	49A	07158	Hexagon Nut	8
24	13340	Connecting Rod Assembly	3	49B	07159	Disc	8
24A	13227	Hex Screw	3	50	07423-0100	Plug	1
24B	13278	Spring Washer	3	50A	07755-0100	Steel Ring	1
25	13341	Crosshead / Plunger Assembly	3	52	13020	Disc for Crankshaft	1
28	13232	Crosshead Pin	3	53	04561	Hexagon Screw	1
29A	07125	Centering Sleeve	3	54	13044	Plug, 1" BSP*	2
29B	07130	Plunger Pipe	3	55	13322-0100	Plug 1-1/2" BSP*	2
29C	07131-0100	Tension Screw	3				
29D	07161A-0100	Steel Ring	3				

\*BSP to NPT Adapters/Seals (sold separately)  
 Inlet = 13375-0100 (Adapter) / 13374-0100 (Seal)  
 Discharge = 13373-0100 (Adapter) / 13372-0100 (Seal)

## LP121A-5123 REPAIR KITS

### Plunger Packing Kits

#### LP121A-5100 - #09720-0023

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
36	13291-0020	Leakage Seal	3
38	07140-0003	O-Ring	6
40	07144-0020	V-Sleeve	6

### Oil Seal Kit - #09577

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Oil Seal Kit	3

### Valve Kit - #09196-0123

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
44A	07150-0003	O-Ring	9
44B	06266	Support Ring	3
46A	07064-0100	Valve Seat	6
46B	07063-0100	Valve Plate	6
46C	07062-0100	Valve Spring	6