

## LP200-SS Parts List

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	07759	Crankcase	1	30	07779	Drip Shield	3
2	13000	Oil filler Plug Assembly	1	31	07133	Radial Shaft Seal	3
3	05940	Cover Plate	1	35	13196	Seal Sleeve	3
3A	07223-0100	Spring Ring	2	36	13228	Leakage Seal	3
3B	05051	Hexagon Screw	2	37	07170	Seal Case	3
4	06085	Crankcase Cover	1	38	07140	O-Ring	3
5	07104	O-ring, Crankcase Cover	1	38A	12055	O-Ring	3
6	05943	Oil Sight Glass	1	39	13197	Pressure Ring	3
8	06086	Oil Dipstick Assembly	1	40	13115	V-Sleeve	6
9	01009	O-Ring, Dipstick Assembly	1	41	13198	Support Ring	3
10	01010	Cylinder Screw	4	42	07173	Tension Spring	3
11	01011-0400	Spring Ring	5	43	13040	Valve Casing	1
12	07109	Plug, 1/2" BSP	1	44A	07150	O-Ring	9
13	06015	O-Ring	1	44B	06266	Support Ring for O-Ring	3
14	07111	Bearing Cover	2	45	06078	Compression Spring	3
15	07112	Radial Shaft Seal	2	46	07060	Valve Assy, Complete	6
16	07113	O-Ring	2	46A	07064	Valve Seat	6
17	07114	Hexagon Screw	8	46B	07063	Valve Plate	6
20	07116	Taper Roller Bearing	2	46C	07062-0100	Valve Spring	6
20A	07117	Fitting Disc, 0.1 mm	1-3	46D	07066	Spacer Pipe	6
20B	13001	Fitting Disc, 0.15 mm	1-3	48	06077	Plug	3
20C	04091	Shim, 0.2 mm (may not be present)	1-3	49	07157	Stud Bolt	8
21	05376	Shaft Protector	1	49A	07158	Hexagon Nut	8
21A	05377	Shaft Guard Holder	1	49B	07159	Disc	8
22	13242	Crankshaft	1	50	12250	Plug 1/2" BSP	1
23	13243	Fitting Key	1	50A	07661	Copper Seal	1
24	13340	Connecting Rod Assembly	3	52	13020	Disc for Crankshaft	1
24A	13227	Hex Screw	3	53	04561	Hexagon Screw	1
24B	13278	Spring Washer	3	54	13044	Plug, 1" BSP	1
25	13341	Crosshead/Plunger Assembly	3	55	13151	Plug 1-1/4" BSP	1
28	13232	Crosshead Pin	3		03055	Plunger Conversion Assembly (29B-D, 35-42)	
29A	07125	Centering Sleeve	3				
29B	13220	Plunger Pipe	3				
29C	13031	Tension Screw	3				
29D	07755	Copper Ring	3				

\*BSP to NPT Adapters/Seals (sold separately)  
 Inlet Port = 13377 (Adapter) / 13376 (Seal)  
 Discharge Port = 13373+ (Adapter) / 13372 (Seal)

## LP200-SS Pump Repair Kits

### Plunger Packing Kits - #9307

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
36	13228	Leakage Seal	3
38	07140	O-Ring	3
38A	12055	O-Ring	3
40	13115	V-Sleeve	6

### Valve Kit - #09196

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
44A	07150	O-Ring	9
44B	06266	Support Ring	3
46A	07064	Valve Seat	3
46B	07063	Valve Plate	3
46C	07062-0100	Valve Spring	3

### Oil Seal Kit - #09577

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Oil Seal Kit	3