

## LP350, LP400 & LP450 PARTS LIST

<u>ITEM #</u>	<u>PART #</u>	<u>DESCRIPTION</u>	<u>QTY</u>	<u>ITEM #</u>	<u>PART #</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	07759	Crankcase	1	37	06651	Seal Case (LP350/LP450)	3
2	13000	Oil Filler Plug Assembly	1	38	07140	O-Ring (LP400)	3
3	05940	Cover Plate	1	38	07700	O-Ring (LP350/LP450)	6
3A	07223-0100	Spring Ring	2	38A	12055	O-Ring (LP400)	3
3B	05051	Hexagon Screw	2	39	07271	Pressure Ring (LP350)	3
4	06085	Crankcase Cover	1	39	13366	Pressure Ring (LP400)	3
5	07104	O-Ring, Crankcase Cover	1	39	13013	Pressure Ring (LP450)	3
6	05943	Oil Sightglass with Gasket	1	40	13016	V-Sleeve (LP350)	6
8	06086	Oil Dipstick	1	40	06083	V-Sleeve (LP400)	6
9	01009	O-Ring, Dipstick	1	40	13015	V-Sleeve (LP450)	6
10	01010	Cylinder Screw	4	41	07273	Support Ring (LP350)	3
11	01011-0400	Spring Ring	5	41	13367	Support Ring (LP400)	3
12	07109	Plug	1	41	06652	Support Ring (LP450)	3
13	06015	O-Ring	1	42	07338	Pressure Spring (LP400)	3
14	07111	Bearing Cover	2	42	14084	Pressure Spring (LP350/LP450)	3
15	07112	Radial Shaft Seal	2	43	13018	Valve Casing	1
16	07113	O-Ring	2	44A	07150	O-Ring	9
17	07114	Hexagon Screw	8	44B	06266	Support Ring	3
20	07116	Taper Roller Bearing	2	45	06078	Compression Spring	3
20A	07117	Fitting Disc	1-3	46	07060	Valve Assembly	6
20B	13001	Fitting Dis (May not be present)	1-3	46A	07064	Valve Seat	6
21	05376	Shaft Protector	1	46B	07063	Valve Plate	6
21A	05377	Shaft Guard Holder	1	46C	07750-0100	Valve Spring	6
22	13242	Crankshaft	1	46D	07066	Spacer Pipe	6
23	13243	Fitting Key	1	48	06077	Plug	3
24	13340	Connecting Rod Assembly	3	49	07754	Stud bolt	8
24A	13277	Inner Hexagon Screw	6	49A	07158	Hexagon Nut	8
24B	13278	Spring Washer	6	49B	07159	Disc	8
25	13244	Crosshead / Plunger Assembly	3	50	07423	Plug, 1/4" BSP	1
28	13232	Crosshead Pin	3	50A	07161	Copper Ring	1
29A	07256	Centering Sleeve	3	52	13020	Disc for Crankshaft	1
29B	13046	Plunger Pipe (LP400)	3	53	06607	Hexagon Screw	1
29B	13005	Plunger Pipe (LP450)	3		04165	Crankcase Assembly (1-29A/30/31/49/49A-B/52/53)	
29B	07261	Plunger Pipe (LP350)	3		04276	Plunger Replacement Kit, LP350 (29B-D/35-42)	
29C	13007	Tensioning Screw	3		04274	Plunger Replacement Kit, LP400 (29B-D/35-42)	
29D	07258	Copper Ring	3		04275	Plunger Replacement Kit, LP450 (29B-D/35-42)	
30	07779	O-Ring	3		03189	Manifold Assembly (43-48/50/50A)	
31	07133	Oil Seal	3				
35	13392	Seal Sleeve (LP400)	3				
35	06650	Seal Sleeve (LP350, LP450)	3				
37	13393	Seal Case (LP400)	3				

### LP350, LP400 & LP450 REPAIR KITS

#### LP350 Packing Kit #09546

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
38	07700	O-Ring	6
40	13016	V-Sleeve	6

#### LP400 Packing Kit #09548

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
38	07140	O-Ring	3
38A	12055	O-Ring	3
40	06083	V-sleeve	6

#### LP450 Packing Kit #09549

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
38	07700	O-Ring	6
40	13015	V-Sleeve	6

#### Valve Kit #09196

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
44A	07150	O-Ring	6
44B	06266	Support Ring	3
46A	07064	Valve Seat	3
46B	07063	Valve Plate	3
46C	07750-0100	Valve Spring	3

#### Oil Seal Kit #09577

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
31	07133	Oil Seal	3