

## P54W, P58W, P59W & P59MT-0020 PUMP PARTS LIST

A= P54W    B= P58W    C= P59W    D= P59MT-0020

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	07180	Crankcase	1	30	07766	Pressure Ring (A)	3
2	07181	Vent/Filler Plug with Seal	1	30	12123	Pressure Ring (B)	3
3	07183	Crankcase Cover	1	30	13385	Pressure Ring (C,D)	3
4	07184	O-Ring	1	31	07767	Automatic Seal Ring (A)	3
5	07185	Oil Dipstick	1	31	08477	Grooved Seal (B)	3
6	01009	O-Ring	1	31	06250	Automatic Seal Ring (C,D)	3
7	07186	Sight Glass (A,B,D)	1	32	07768	Support Ring (A)	3
7	12249	Plug, 1" BSP (C)	1	32	07929	Pressure Ring (B)	3
9	07188	Cylinder Screw with Slot	4	32	06253	Support Ring (C,D)	3
10	07223-0100	Spring Washer	4	33	07769	Support Ring (A)	3
11	07190	Oil Drain Plug	2	33	12124	Support Ring (B)	3
12	07192	Bearing Cover (A,B,C)	2	34	07492	Discharge Valve Cage (A,B)	6
12	13402	Bearing Cover (D)	2	34	07326-0100	Discharge Valve Cage (C,D)	6
13	07193	O-Ring	2	35	07906	Valve Spring (A,B)	6
14	01166	Radial Shaft Seal (B)	1	35	07312-0100	Valve Spring (C,D)	6
14	01166	Radial Shaft Seal (A,C,D)	2	36	05542	Valve Plate (A,B)	6
14A	08439	Lid (B)	1	36	07327	Valve Plate (C,D)	6
15	07760	Cylinder Roller Bearing (A,B,C)	2	37	05541	Valve Seat (A,B)	6
15	01086	Grooved Ball Bearing (D)	2	37	06014	Valve Seat (C,D)	6
15A	06245	Shim 0.2mm	1	38	07770	O-Ring (A,B)	6
15B	06330	Shim 0.1mm	1	38	06015	O-Ring (C,D)	6
16	07196	Countersunk Screw (A,B,C)	6	39	07771	Seal Case (A)	3
16	07114	Hexagon Screw (D)	6	39	12125	Seal Case (B)	3
17	05023	Shaft Protector (D)	1	39	13386	Seal Case (C,D)	3
17	05375	Shaft Protector (A,C)	1	40	07489	O-Ring (A)	6
18	05637	Crankshaft (D)	1	40	07489	O-Ring (B)	3
18	05638	Crankshaft (B)	1	40	07234	O-Ring (C,D)	6
18	13330	Crankshaft (A,C)	1	40A	12126	O-Ring (B Only)	3
19	13331	Woodruff Key (A,B,C)	1	43	07772	Plug (A,B)	3
19	01024	Woodruff Key (D)	1	43	07213	Plug (C,D)	3
20	07199	Connecting Rod Assembly	3	44	07035	O-Ring (A,B)	3
22	07777	Crosshead Assembly (A,B,C)	3	44	07214	O-Ring (C,D)	3
22	07201	Crosshead Assembly (D)	3	45	07773	Inner Hexagon Screw	4
23	01031	Crosshead Pin	3	46	07774	Inner Hexagon Screw (A,B)	2
24	07763	Crosshead/Plunger Assy. (A)	3	46	13388	Inner Hexagon Screw (C,D)	2
24	05639	Crosshead/Plunger Assy. (B)	3	48	07775	Intermediate Casing (A)	1
24	13382	Crosshead/Plunger Assy.(C,D)	3	48	12127	Intermediate Casing (B)	1
24A	07778	Plunger Pipe (A)	3	48	13389	Intermediate Casing (C,D)	1
24A	07021	Plunger Pipe (B)	3	49	01009	O-Ring	1
24A	13383	Plunger Pipe (C,D)	3	50	07767	Automatic Seal Ring (A)	3
24B	08456	Tension Screw	3	50	08477	Grooved Seal (B)	3
24C	07676	Copper Gasket	3	50	13390	Grooved Seal (C,D)	3
25	06648	Oil Scraper	3	52	13338	Plug, 3/8" BSP (A,B)	3
26	07206	Radial Shaft Seal	3	52	07109	Plug, 1/2" BSP (C,D)	3
26A	07764	Spacer Sleeve	3	52A	12007	O-Ring (A,B)	2
29	07765	Valve Casing (A, B)	1	52A	07182	Gasket (C,D)	2
29	13384	Valve Casing (C,D)	1	58	08486	Copper Crush Washer (A,B)	1