

PARTS LIST - LP121-5100HT(C) PUMPS

Item	Part	Description	Qty.	Item	Part	Description	Qty.
1	05198	Crankcase	1	31A	06118	Oil Seal	3
2	13000	Oil Filler Plug Assembly	1	32	06116	Oil Seal Retainer	3
3	05940	Cover Plate	1	32A	05596	O-Ring	3
3A	07223-0100	Spring Washer	2	33	06117	Compact Ring	3
3B	05051-0100	Hexagon Screw	2	35	03343	Seal Sleeve	3
4	06085	Crankcase Cover	1	36	07137	Leakage Seal	3
5	07104	O-Ring	1	37	07139-0100	Seal Case	3
6	07186	Oil Sight Glass Assembly	1	38	07140	O-Ring	6
8	06086	Oil Dipstick Assembly	1	39	03344	Pressure Ring	3
9	01009	O-Ring	1	40	06917	Spring Ring	3
10	01010-0100	Hexagon Socket Screw	4	40A	06916	Support Ring	6
11	01011-0400	Spring Washer	13	41	03345	Support Ring	3
12	07109-0400	Oil Drain Plug	1	42	07147	Tension Spring	3
13	06015	O-Ring	1	43	13018-5000	Valve Casing	1
14	07111	Bearing Cover	2	44A	07150	O-Ring	9
15	07112	Crankshaft Seal	2	44B	06266	Support Ring	3
16	07113	O-Ring	2	45	06078	Spring	3
17	07114-0100	Hexagon Screw	8	46	07060-0100	Valve Assembly (46A-D)	6
20	07116	Taper Roller Bearing	2	46A	07064-0100	Valve Seat	6
20A	07117	Shim, 0.1 mm	1-3	46B	07063-0100	Valve Plate	6
20B	13001	Shim, 0.15 mm	1-3	46C	07062-0100	Valve Spring	6
20C	04091	Shim, 0.2 mm	1-3	46D	07066	Spring Retainer	6
21	05376	Shaft Protector	1	48	06077-0100	Plug	3
21A	05377	Shaft Guard Holder	1	49	07157	Stud Bolt	8
22	03367	Crankshaft	1	49A	07158	Nut	8
23	08091	Key	1	49B	07159	Washer	8
24	13340	Connecting Rod Assembly	3	50	07423-0100	Plug, 1/4" BSP	1
25	13341	Crosshead Plunger	3	50A	07755-0100	Steel Ring, 1/4" BSP	1
		Base Assembly	3	52	13020	Disc for Crankshaft	1
28	13232	Crosshead Pin	3	53	04561	Hexagon Screw	1
29A	07125	Sleeve	3	54	13044	Plug, 1" BSP	2
29B	07130	Plunger Pipe	3	55	13322-0100	Plug, 1-1/2" BSP	2
29C	07131-0100	Plunger Bolt	3	56	03311	Threaded Pipe, LP121HTC	3
29D	07161A-0100	Steel Ring	3	57	06588	Push-In Fitting, LP121HTC	6
30	07779	Flinger	3	58	06587	Elbow	2
31	06120	Seal Retainer, Complete (31A-33)	3				

LP121-4000HT(C) PUMP REPAIR KITS

Plunger Packing Kit #09844

Item	Part No.	Description	Qty
36	07137	Leakage Seal	3
38	07140	O-Ring	6
39	03344	Pressure Ring	3
40	06917	Spiral Ring	3

Valve Assembly Kit #09196-0100

Item	Part No.	Description	Qty
44A	07150	O-Ring	9
44B	06266	Support Ring	3
46A	07064-0100	Valve Seat	6
46B	07063-0100	Valve Plate	6
46C	07062-0100	Valve Spring	6

Oil Seal Kit #09571

Item	Part No.	Description	Qty
31A	06118	Oil Seal	3
32A	05596	O-Ring	3
33	06117	Compact Ring	3