

LP200GBHS-SS Parts List

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	03190	Crankcase	1	44A	07150	O-Ring	9
2	13000	Oil filler Plug Assembly	1	44B	06266	Support Ring for O-Ring	3
3	05940	Cover Plate	1	45	06078	Compression Spring	3
3A	07223-0100	Spring Ring	2	46	07060	Valve Assy, Complete	6
3B	05051	Hexagon Screw	2	46A	07064	Valve Seat	6
4	06085	Crankcase Cover	1	46B	07063	Valve Plate	6
5	07104	O-ring, Crankcase Cover	1	46C	07062-0100	Valve Spring	6
6	05943	Oil Sight Glass Assembly	1	46D	07066	Spacer Pipe	6
7	03191	Plug	2	48	06077	Plug	3
7A	01009	O-Ring	2	49	07157	Stud Bolt	8
8	06086	Oil Dipstick Assembly	1	49A	07158	Hexagon Nut	8
9	01009	O-Ring	1	49B	07159	Disc	8
10	01010	Cylinder Screw	4	50A	07661	Copper Seal Ring	1
11	01011-0400	Spring Ring	4	54	13044	Plug, 1" BSP	1
12	07109	Plug, 1/2" BSP	2	55	13151	Plug 1-1/4" BSP	1
13	06015	O-Ring	1	56	03328	Protective Plug	1
14	07111	Bearing Cover	1	58	03194	Bottom Casing for Gear	1
15	08439	Lid	1	59	03195	Top Casing for Gear	1
16	07113	O-Ring	1	60	03196	O-Ring	1
17	07114	Hexagon Screw	4	61	03197	Centering Ring for Gear	1
20	07116	Taper Roller Bearing	2	62	03329	Gear Wheel Set 1 : 2.0	1
20A	07117	Fitting Disc, 0.1 mm	1-3	64	03199	Cylinder Roller Bearing	1
20B	13001	Fitting Disc, 0.15 mm	1-3	65	03200	Cylinder Roller Bearing	1
20C	04091	Fitting Disc, 0.2 mm (may not be present)	1-3	66	03201	Shim, 0.1 mm	1-3
22	03192	Crankshaft	1	67	05058	Radial Shaft Seal	1
23	13243	Fitting Key	2	68	04744	Cylindrical Pin	4
24	13340	Connecting Rod Assembly	3	69	03202	Hexagon Socket Screw	8
24A	13227	Hex Screw	3	70	03203	Spacer Ring for Gear	1
24B	13278	Spring Washer	3	71	07008	Hexagon Socket Screw	4
25	13341	Crosshead / Plunger Assy.	3	72	08041	Washer	3
28	13232	Crosshead Pin	3	73	03204	O-Ring	1
29A	07125	Centering Sleeve	3	75	03205	Disc for Crankshaft	1
29B	13220	Plunger Pipe	3	76	03206	Hexagon Screw	1
29C	13031	Tension Screw	3	77	07109	Plug, 1/2" BSP	2
29D	07755	Copper Ring	3	78	06272	Copper Seal Ring, 1/2"	2
30	07779	Drip Shield	3	80	03291	Flange for Hollow Shaft	1
31	07133	Radial Shaft Seal	3	81	03292	Centering Ring	1
35	13196	Seal Sleeve	3	82	03293	Hexagon Socket Screw	1
36	13228	Leakage Seal	3	83	03294	Ring for Speed Sensor	1
37	07170	Seal Case	3	84	03331	Magnet for Speed Sensor	1
38	07140	O-Ring	3	85	03296	Clip Ring	1
38A	12055	O-Ring	3	86	03297	Blanking Plug	1
39	13197	Pressure Ring	3		03055	Plunger Conversion Assembly (29B-D, 35-42)	
40	13115	V-Sleeve	6				
41	13198	Support Ring	3				
42	07173	Tension Spring	3				
43	13040	Valve Casing	1				

*BSP to NPT Adapters/Seals (sold separately)
 Inlet Port = 13377 (Adapter) / 13376 (Seal)
 Discharge Port = 13373+ (Adapter) / 13372 (Seal)

LP200GBHS-SS Pump Repair Kits

Plunger Packing Kits - #09307

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
36	13228	Leakage Seal	3
38	07140	O-Ring	3
38A	12055	O-Ring	3
40	13115	V-Sleeve	6

Valve Kit - #09196

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
44A	07150	O-Ring	9
44B	06266	Support Ring	3
46A	07064	Valve Seat	3
46B	07062-0100	Valve Plate	3
46C	07062	Valve Spring	3

Oil Seal Kit - #09577

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Oil Seal Kit	3