## Series 23000




**Turbo Nozzle** 

Model #	Nozzle Size	Repair Kits*
23000-020 23000-025	2.0 2.5	09620-020 09620-025
23000-025	3.0	09620-023
23000-035	3.5	09620-035
23000-040	4.0	09620-040
23000-045	4.5	09620-045
23000-050	5.0	09620-050
23000-055	5.5	09620-055
23000-060 6.0 09620-060 *Repair kits include items 2-12		

## MAINTENANCE NOTICE:

If turbo will not spin, take unit apart and clean the nozzle. If turbo still will not spin, have an authorized distributor repair nozzle.

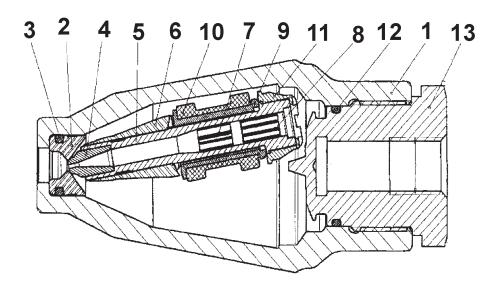

## **Operating Conditions**

Maximum Flow:	22.0 GPM (83 L/min)
Maximum Pressure:	3600 PSI (248 bar)
Maximum Temperature:	195 °F (90 °C)
Spray:	20°
Weight:	1.4 lbs. (0.64 g)
Connection:	1/4" FBSP⁺

<sup>+</sup> To convert from BSP to NPT threads order part numbers 06581 (1/4" MBSP x 1/4" FNPT) or 06581M (1/4" MBSPx1/4" MNPT)



**WARNING:** This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



Giant Industries, Inc. 900 N. Westwood Ave. Toledo, Ohio 43607 PHONE: 419-531-4600 FAX: 419-531-6836 www.giantpumps.com

© Copyright 2021 Giant Industries, Inc.



## **TURBO LASER REPAIR INSTRUCTIONS**

- 1. Using a 24 mm boxed end wrench and a 24 mm socket unscrew the drive plug (13) from the discharge casing (1).
- 2. Remove rotor assembly (4-11) and replace with items in kit.
- 3. Using a 5/16" wooden dowel rod press out ceramic seat and o-ring (2-3) from the top side of discharge casing (1). Replace with new ceramic seat and o-ring.
- 4. Inspect o-ring (12) for damage and replace if necessary.
- 5. Insert rotor assembly (4-11) into the bell cover (1) and reassemble & tighten the drive plug (13) and discharge casing (1).

**NOTE:** Gently shake nozzle to make sure the rotor assembly can freely move.