

Spare Parts List - GP7142-5121

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	07600	Crankcase	1	38	04321-0100	Seal Case	3
1A	05525	Head for Oil Dipstick	1	38A	13156-0001	O-Ring, Viton	3
1B	01009	O-Ring	1	38B	13141-0001	O-Ring, Viton	3
2	13000	Oil Filler Plug Assembly	1	39	04791	Seal Sleeve	3
4	07601	Crankcase Cover	1	39A	04780-0020	Grooved Seal Assembly, Teflon	3
5	05798	Gasket, Crankcase Cover	1	39B	04781	Support Disc	3
8	07603	Oil Dip Stick Assembly	1	39C	05474	Clip Ring	3
9	01009	O-Ring, Dip Stick	1	40	03513	Guide Ring	3
10	22706	Hexagon Screw	8	41	03518	Sleeve Support Ring	3
11	06725	Spring Washer	8	42	03519	Triple Coiled Ring	3
12	07109-0400	Drain Plug	2	43	04324	Spacer Ring	3
13	06272	Gasket, Drain Plug	2	45	13297	Pressure Spring	3
14	05644	Bearing Cover	2	49	13159	Stud Bolt	8
15	07608	Radial Shaft Seal	2	49A	06958	Hex Nut	8
16	07184	O-Ring	2	50	07790-5000	Valve Casing	1
17	05642	Inner Hexagon Screw	8	50A	13162	Cylinder Stud	2
18	05039	Spring Washer	8	50B	07790A-5000	Discharge Casing	1
20	07610	Taper Roller Bearing	2	51	03436	Valve Assembly (51A-F)	6
20A	07611	Fitting Disc (Shim), 0.1mm	1-5	51A	05595	Spring Tension Cap	6
20B	03431	Fitting Disc (Shim), 0.2mm	1	51B	07732-0100	Valve Spring	6
20C	03432	Fitting Disc (Shim), 0.15 mm	1-2	51C	03437	Valve Plate	6
21	05641	Holder for Shaft Protector	1	51D	05596-0001	O-Ring	6
21A	05646	Shaft Protector	1	51E	03438	Valve Seat	6
22	13405	Crankshaft	1	51F	05166-0001	O-Ring	6
23	07614	Key	1	55	05647	Valve Retainer	3
24	13182	Connecting Rod Assembly	3	56	13167-0100	Valve Adaptor	3
25	13183-0100	Crosshead Assembly	3	56A	07658-0001	O-Ring	3
28	13184	Crosshead Pin	3	56B	07635	Support Ring for 56A	3
30	07619	Cover Plate	1	56C	13166	Support Ring for 56D	3
30A	07225-0100	Hexagon Screw	8	56D	07653-0001	O-Ring	3
30B	13136	Grommet	4	57	13173	Tension Spring	3
30C	05053	Washer	8	58	05223	Hexagon Screw	12
30D	05714	Cover Plate	1	59	07109-0400	Plug, 1/2" BSP	2
31	07623	Eye Bolt	1	59A	06807	Steel Ring	3
32	07624	Radial Shaft Seal	3	59B	03439	Plug, 1/2" BSP to 1/4" BSP	1
33	06950	Seal Retainer	3	60	13151-0100	Plug, 1-1/4" BSP	1
33A	07627	O-Ring	3	61	12568	Plug, 2-1/2" BSP	1
33B	06951	Circlip	3	66	13362	Disc For Crankshaft	1
33C	07249	Fitting Disc	3	67	13358	Hexagon Screw	1
34	13137	Oil Scraper	3	68	04785	Push-In Fitting	4
36	04316-0100	Plunger Pipe Assy. (36A-F)	3	70	03440	L-Joint	4
36A	07667-0100	Plunger Connection	3	72	03441	Hose	1
36B	04317	Plunger Pipe	3	73	03442	Spiral Hose	1
36C	07664-0100	Tension Screw	3		07662	Valve Removal Tool (not shown)	1
36D	03435	Steel Ring	3				
36E	05871-0001	O-Ring	3				
36F	06015-0001	O-Ring	3				

Plunger Packing Kit - # 09766-0121

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
38A	13156-0001	O-Ring	3
38B	13141-0001	O-Ring	3
39A	04780-0020	Grooved Seal Assembly	3
39C	05474	Clip Ring	3
40	03513	Guide Ring	3
41	03518	Support Ring	3
42	03519	Triple Coiled Ring	3

Valve Kit - # 09847

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
51	03436	Valve Assembly	6
56A	07658-0001	O-Ring	3
56B	07635	Support Ring	3
56C	13166	Support Ring	3
56D	07653-0001	O-Ring	3

Oil Seal Kit - # 09221

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
32	07624	Radial Shaft Seal	3
33A	07627	O-Ring	3