

Spare Parts List - GP8265

<u>Item</u>	<u>Part</u>	<u>Description</u>	<u>Qty</u>	<u>Item</u>	<u>Part</u>	<u>Description</u>	<u>Qty</u>
1	05380	Crankcase	1	43	05118	Sleeve Support Ring	3
2	06893	Oil Filler Plug Assy with Vent	1	45	05119	Seal Tension Spring	3
5	22929	Copper Washer	2	49	05072	Stud Bolt	8
6	12256	Plug, 3/8" BSP	1	49A	05073	Hexagon Nut	8
7	05656	Plug for oil dipstick	1	50	03570	Valve Casing	1
8	05035	Oil Dipstick Assembly	1	50A	13162	Centering Stud	2
9	01009	O-Ring	1	50B	03571	Discharge Valve Casing	1
12	07109	Plug 1/2" BSP	2	51	03572	Valve Assembly	6
13	06272	Seal	2	51A	03573	Spring Tension Cap	6
14	05036	Bearing Cover Closed	1	51B	03574	Valve Seat	6
14A	05298	Bearing Cover Open	1	51C	03575	Valve Plate	6
15	05112	Radial Shaft Seal	1	51D	06560	O-Ring	6
16	05037	O-Ring	2	51E	05080	Valve Spring	6
17	05038	Hexagon Socket Screw	16	51F	03434	O-Ring	6
18	05039	Spring Ring	16	56	03576	Discharge Valve Adaptor	3
21	05044	Tapered Roller Bearing	2	56A	04955	O-Ring	3
21A	05042	Fitting Disc	1-5	56B	13156	O-Ring	3
21B	05043	Fitting Disc	1-5	57	05086	Pressure Spring	3
22	05299	Crankshaft	1	57A	07210-0100	Pressure Spring	3
23	05300	Fitting Key	1	58	05087	Hexagon Socket Screw	12
24	05047	Conneciting Rod Assembly	3	59	07109	Plug 1/2" BSP	2
25	05048	Crosshead c/w Plunger	3	59A	06272	Copper Seal	2
28	05049	Crosshead Pin	3	60	13322	Plug 1-1/2" BSP	1
29	05051	Hexagon Screw	5	61	05088	Plug 3" BSP	1
29A	05381	Bracket 1 for Cooling Hose	2	62	05302	Plug 1/4" BSP	6
29B	05383	Bracket 2 for Cooling Hose	2	62A	06934	Copper Gasket	6
30	05052	Cover Plate	1	66	05303	Disc for Crankshaft	1
30A	07225-0100	Hexagon Screw	5	67	13433	Hexagon Screw	1
30B	13136	Grommet	5	78	05025-0300	Oil Cooler Assembly	1
30C	08280	Washer	10	K1	05026	Cooling Vane Plate	1
30D	05050	Splash Cover	1	K2	05027	Seal for Gear Cover	2
31	07623	Eye Bolt	3	K3	05028-0300	Gear Cover	1
32	05058	Radial Shaft Seal	3	K4	05029	Hexagon Head Countersunk Screw	8
32A	03118	Scraper	3				
33	03119	Seal Retainer	3	K5	07381	Hexagon Socket Screw	6
33A	05056	O-Ring	3	K6	08041	Washer	6
33B	05054	Clip Ring	3	K7	05030	Connection for Oil Cooler	1
33C	05059	Fitting Disc	3	K8	06272	Copper Seal	6
34	03560	Oil Shield	3	K9	07109	Plug 1/2" BSP	2
36A	05063	Cover for Plunger Pipe	3	K10	05031	Connecting Branch	3
36B	05115	Plunger Pipe	3	K11	05032	Hose Adaptor	3
36C	05062	Tension Screw	3	K12	05033	Tube for Cooler	2
36D	07665	Copper Washer	3	K13	05402	Hose Clamp	4
36E	06900	Centering Sleeve	3	K14	05403	Hose Guard	2
38	03618	Seal Case	3	K15	05404	Hose Coupling Nut	1
38A	06667	O-Ring	6	K16	05405	Flat Gasket	4
39	05116	Seal Sleeve	3	K18	04158	Hexagon Socket Screw	4
39A	05066	O-Ring	3	K19	05053	Washer	4
40	06996	Seal Ring	3		05605	Gear End Assembly	
41	05117	Pressure Ring	3			(1-34,49,49A,50,66,67)	
42	06997	V Sleeve	9		05209	Plunger Replacement Kit	

GP8265 PUMP REPAIR KITS

Plunger Packing Kit - #09586

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
38A	06667	O-Ring	6
39A	05066	O-Ring	3
40	06996	Seal Ring	3
42	06997	V-Sleeve	9

Oil Seal Kit - #09584A

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
32	05058	Radial Shaft Seal	3
32A	03118	Scraper	3
33A	05056	O-Ring	3

Valve Repair Kit - #09865

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
51	03572	Valve Assembly	6
56A	04955	O-Ring	3
56B	13156	O-Ring	3