

# INSTALLATION INSTRUCTIONS

The stated figures are for maximum pressure and maximum speed (rpm) and apply for interval operation with cold water.

Required NPSH refers to water (specific weight 1kg/dm<sup>3</sup>, viscosity 1°E) at maximum permissible pump revolutions.

Fluid medium: Clean water filtered with 200µm.  
\*higher temperatures possible with separate crankcase cooling system; the manufacturer is to be contacted in this case.

## Operation and Maintenance

Check oil level prior to starting and ensure trouble-free water supply.

**IMPORTANT!** If there is a **danger of frost**, the water in the pump and in the pump fittings (particularly the unloader valve) must be emptied. The second discharge port can also be used and the pump run “dry” for 1-2 minutes for this purpose.

**Oil amount:** 4.2 gallons (16.0 litres). Only use **ISO VG 220 industrial gear oil** (e.g. Aral Degol BG220) or **automobile gear oil SAE 90 GL4 (Giant's p/n 01154)**. Initial change after 50 operating hours and then every 1000 operating hours after one year latest.

**IMPORTANT!** When operating in damp places or with high temperature fluctuations. Oil must be changed immediately should condensate (frothy oil) occur in the gear box.

**NPSH values must be observed.**

## Cooling the Gear Oil

**IMPORTANT!** The water input pressure must not exceed 29 PSI (2 bar) when using the integrated system for cooling the gear oil (standard version). If a **separate** cooling circuit (maximum 29 PSI [2 bar]) is installed, it is then possible to have an input pressure of up to maximum 145 PSI (10 bar) on the **suction side** of the pump.

Make sure that suction pulsation is sufficiently dampened – water column resonance must be avoided.

**IMPORTANT!** The pumps can be run without gear oil cooling in continuous operation **up to** a power rating of **93.9 HP (70 kW)** or with major intermittent operation at full performance. If operational power **exceeds 93.9 HP (70 kW)** or if continuous operation is the case, the pump must be run with the integrated oil cooling system. The max. temperature of the water being pumped and which is also fed through the cooling system must not exceed 86 °F (30 °C). The water amount which is fed into the cooling system depends on the pump speed and is approximately 1.9 GPM (7.0 L/min) at 580 pump rpm. The cooling water is sucked in by one of the pumping chambers and pumped away.

**Definition of intermittent operation:** operation at full performance for not more than altogether 20 minutes an hour, with the pump running with-out pressure or turned off in between. For example, this can be full load operation for 5 minutes four times an hour with 10 minute breaks in between or continuous full load operation for 20 minutes followed by a 40 minute break.

**IMPORTANT!** If higher medium temperatures or liquids other than water are involved or aggressive media such as seawater, demineralised water etc., the pump must be fitted with a separate cooling circuit. The separate cooler must have a cooling efficiency of 1700 watt. If there is a danger of frost, an appropriate amount of antifreeze must be mixed into the cooling circuit.

When starting up for work, the pump must run first at zero pressure for approximately 1 minute.

**IMPORTANT!** The GP8100 series has a black arrow on the reduction gear which shows the preferred direction of rotation. The pumps can be delivered either with the gear on the left side or right side which eases the planning of assembling units with regard to rotational direction.

Gear on right side from behind pump = optimal rotation: to the left

Gear on left side from behind pump = optimal rotation: to the right

The preferred/optimal direction of rotation ensures the motion of the connecting rods correctly shovels the oil on to the crosshead guides – which is a particular advantage where continuous operation is involved.

The pump can also be run against the recommended direction of rotation if operated periodically or at reduced pressure. If so, the pump has to be run in this direction to smoothen the bearing areas. This is done by a one-time operation at zero pressure for at least 30 minutes; thereafter the pressure must be slowly increased over the next hour to the desired maximum operating pressure; the pump is then run in. Check the oil temperature during this process.

**IMPORTANT!** The pump and cooling system must be emptied if there is a danger of frost. Travel wind can cause water in pumps fitted on open vehicles to freeze even if the outside temperature is above freezing point.

To empty the cooling circuit, remove the L-joints (K11) on the pump head (50). Blow out the circuit liquid at the joint connection (K11/K7) using compressed air.

The torque tension on the valve casing nuts (49A) is to be checked after approximately 200 operating hours. Please see the section 'Maintenance' concerning the torque values.

The pump must be at zero pressure when checking the torque tension.

**IMPORTANT!** The service life of the seals is maximized if a minimal amount of leakage is present. A few drops of water can drip from each plunger every minute. Leakage has to be examined every day; the plunger seals must be changed should leakage become excessive (=constant dripping).

# OPERATING INSTRUCTIONS

## Safety Rules

**The operating instructions must be read and adhered to before performing any work on the pump or complete assembled unit. No responsibility will be carried by us for damage to materials or persons caused by improper handling of our pumps.**

Access to the pump is not allowed for unauthorized personnel. A safety valve is to be installed in accordance with the guidelines for liquid spraying units so that the admissible operating pressure cannot be exceeded by more than 10%. Pump operation without a safety valve as well as any excess in temperature or speed limits automatically voids the warranty.

When the pump is in operation, the driven shaft side and its coupling must be covered by a protective guard. The plunger area must also be covered by the protective plate (30).

Do not step onto the protective plate (30) nor put weight on it.

Pressure in the discharge line and pump must be at zero before carrying out any maintenance work to the pump or unit. Close off suction line. Disconnect fuses to ensure that the driving motor cannot get switched on accidentally. Make sure that the pump, the cooling system and all parts on the pressure side of the unit are vented and refilled, with pressure at zero, before starting the pump.

In order to prevent air or an air/water-mixture being absorbed and cavitation occurring, the pump-npshr, positive suction head and water temperature must be respected.

**Cavitation and/or compression of gases lead to uncontrollable pressure-kicks which can ruin the pump and unit parts and also be dangerous to the operator or anyone standing nearby.**

Giant plunger pumps are suitable for pumping clean water and other non-aggressive or non-abrasive media with a specific weight similar to water.

**Before pumping other liquids - especially inflammable, explosive and toxic media - the pump manufacturer must be consulted with regard to the resistance of the pump material. It is the responsibility of the equipment manufacturer and/or operator to ensure that all pertinent safety regulations are adhered to.**

<b>GP8265GB-1000 TORQUE SPECIFICATIONS AND TOOL LIST</b>			
<b>Item</b>	<b>Description</b>	<b>Torque Ft.-lbs. (Nm)</b>	<b>Tool Needed</b>
17	Hexagon Socket Screw	64 (87)	10mm Allen Wrench
24	Connecting Rod Hex. Hd. Socket Screw	37 (50)	8mm Allen Wrench
33B	Clip Ring	N/A	Industrial Snap Ring Pliers
36C	Tension Screw	30 (40)	16mm Socket
49A	Hexagon Nut (Manifold)	265 (360)	30mm Socket
51 & 52	Valve Assemblies	N/A	Valve Puller (p/n 07662) included w/pump
58	Hexagon Socket Screw	13 (180)	12mm Allen Wrench
K5	Hexagon Socket Screw	N/A	8mm Allen Wrench