


# Model 22740

## Pulsator Valve

FOR USE ON  
LP350, LP400  
LP450 Pumps

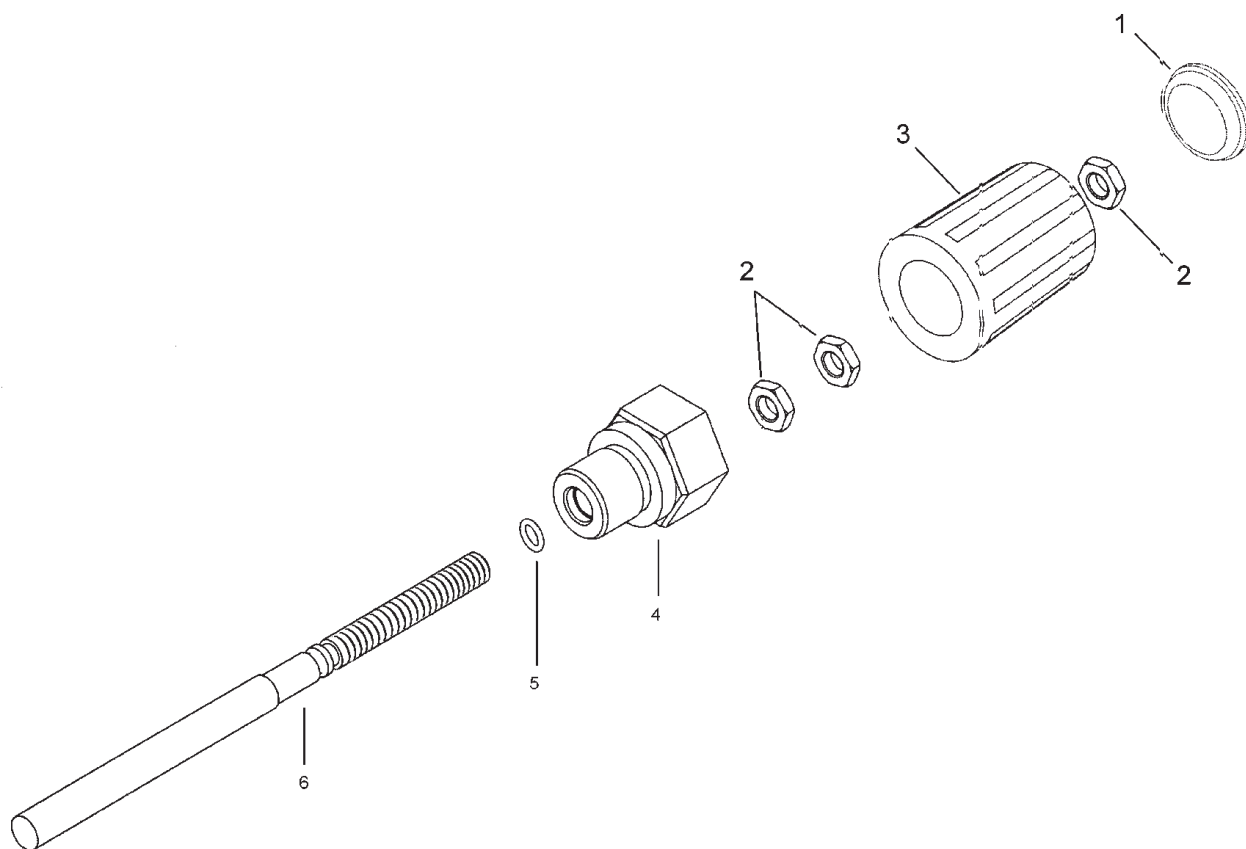

ITEM #	PART #	DESCRIPTION	QUANTITY
1	07046	Cover	1
2	07044	Lock Nut	3
3	07045	Handwheel	1
4	06858	Brass Pulsator Cap	1
5	07937	O-Ring	1
6	06859	Adjusting Screw	1



**Giant Industries, Inc.**  
900 N. Westwood Ave.  
Toledo, Ohio 43607  
PHONE: 419-531-4600  
FAX: 419-531-6836  
[www.giantpumps.com](http://www.giantpumps.com)

© Copyright 2004 Giant Industries, Inc.

# INSTALLATION INSTRUCTIONS

## 22740 Pulsator Valve

For use on LP350, LP400 and LP450 Pumps

- 1). Remove Plug (50A), and washer (50A) from the bottom of valve casing.
- 2). Place washer (50A) on brass plug (4). Secure the brass pulsator cap into the port. Adjust the handwheel (1) until it is all the way out by turning it counter clockwise. (Note: the handwheel will stop when it is all the way out.)

# OPERATING INSTRUCTIONS

- 1). To disable the inlet valve and engage the pulsator valve, turn the handwheel (3) clockwise until it is tight.
- 2). To disengage the pulsator valve, turn the handwheel (3) counterclockwise until it stops.



**WARNING:** This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.  
For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)