

Series 22200


Sand Blaster

22200-045 = 4.5 Nozzle

22200-055 = 5.5 Nozzle

22200-065 = 6.5 Nozzle

22200-075 = 7.5 Nozzle

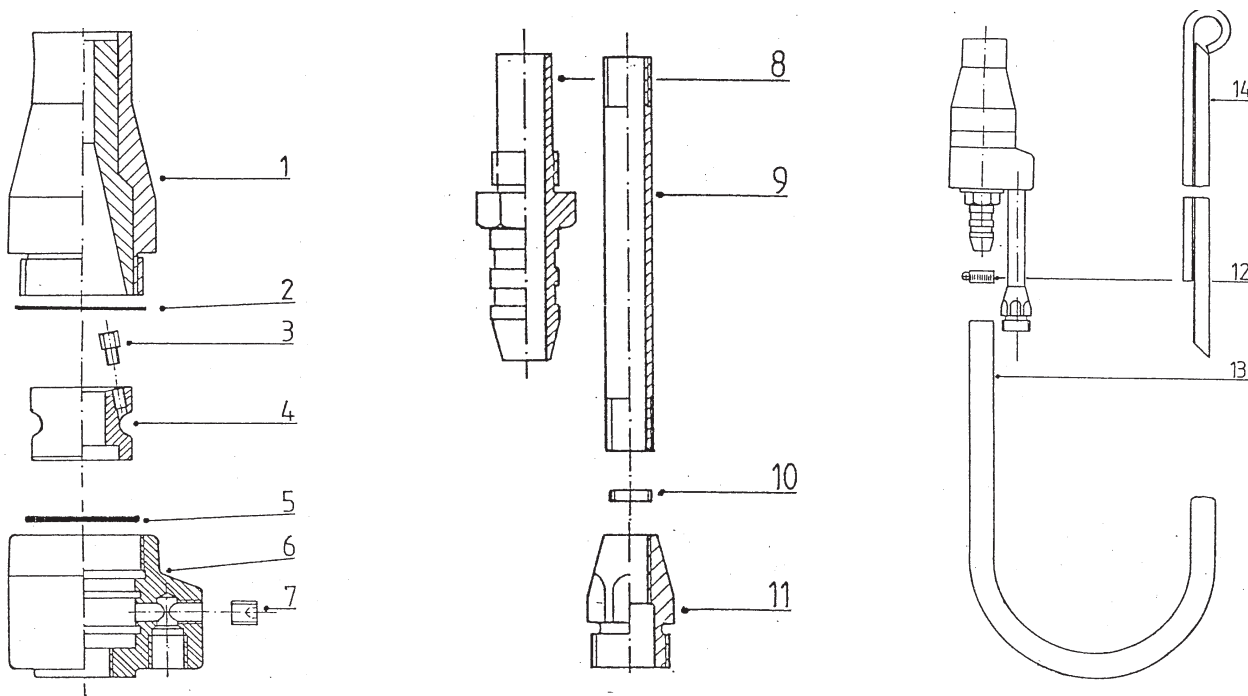

Parts List

Item	Part#	Description	Quantity
1	8920	Steel Blast Pipe	1
1	8921	Hard Metal Blast Pipe	1
2	8922	Flat Seal	1
3	8923	Nozzle 4.5 (3 pieces)	1 Set
3	8924	Nozzle 5.5 (3 pieces)	1 Set
3	8925	Nozzle 6.5 (3 pieces)	1 Set
3	8926	Nozzle 7.5 (3 pieces)	1 Set
4	8927	Nozzle Retainer	1
5	8928	O-Ring	2
6	8929	Mixer Head	1
7	8930	Stud Bolt	1
8	8931	Sand Tube Connection	1
9	8932	Pipe Piece	1
10	8933	Strainer	1
11	8934	Lance Connection Nipple	1
12	8935	Hose Clamp	1
13	8936	Sand Suction Hose 3m	1
14	8937	Suction Pipe	1

Operating Specifications

Maximum Flow:	8.5 gpm
Maximum Pressure:	7250 psi
Maximum Temperature:	140° F
Inlet Port:	1/4" MNPT



H WARNING H
HIGH PRESSURE
DO NOT POINT AT INDIVIDUAL
MAY CAUSE SERIOUS INJURY!



WARNING: This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov

GIANT

Giant Industries, Inc.
900 N. Westwood Ave.
Toledo, Ohio 43607
419-531-4600
FAX 419-531-6836
www.giantpumps.com

IMPORTANT

- n Various grades of abrasive can be used but it must have the correct grain-size 0.6 - 1.2 mm.
- n The grain can be finer or coarser as required. However, very fine blasting sand (0.2 - 0.4 mm) should not be used because it tends to block up the suction system.
- n It is important to do tests with various grades of blasting abrasive before sand-blasting large areas because the surface area coverage could differ by more than 50%.

IMPORTANT

- n Protective clothing which covers the whole body, must be worn.
- n Never aim the blast at humans or animals.
- n Protect glass from rebounding sand blast.
- n The blast pipe must be replaced when the inner bore has worn from 8 mm to 10 mm otherwise the performance will be reduced by 50%.
- n To avoid having to stop work because of a blocked nozzle, the inlet water to the pump should be filtered.
- n Check the strainer in the connection nipple of the blast pipe daily and remove any dirt particles.
- n If any one of the three ring-nozzles should become blocked up, it must be removed immediately and cleaned or replaced by a new one of the same size.