


Model 22747

Pulsator Valve

FOR USE ON SP100W

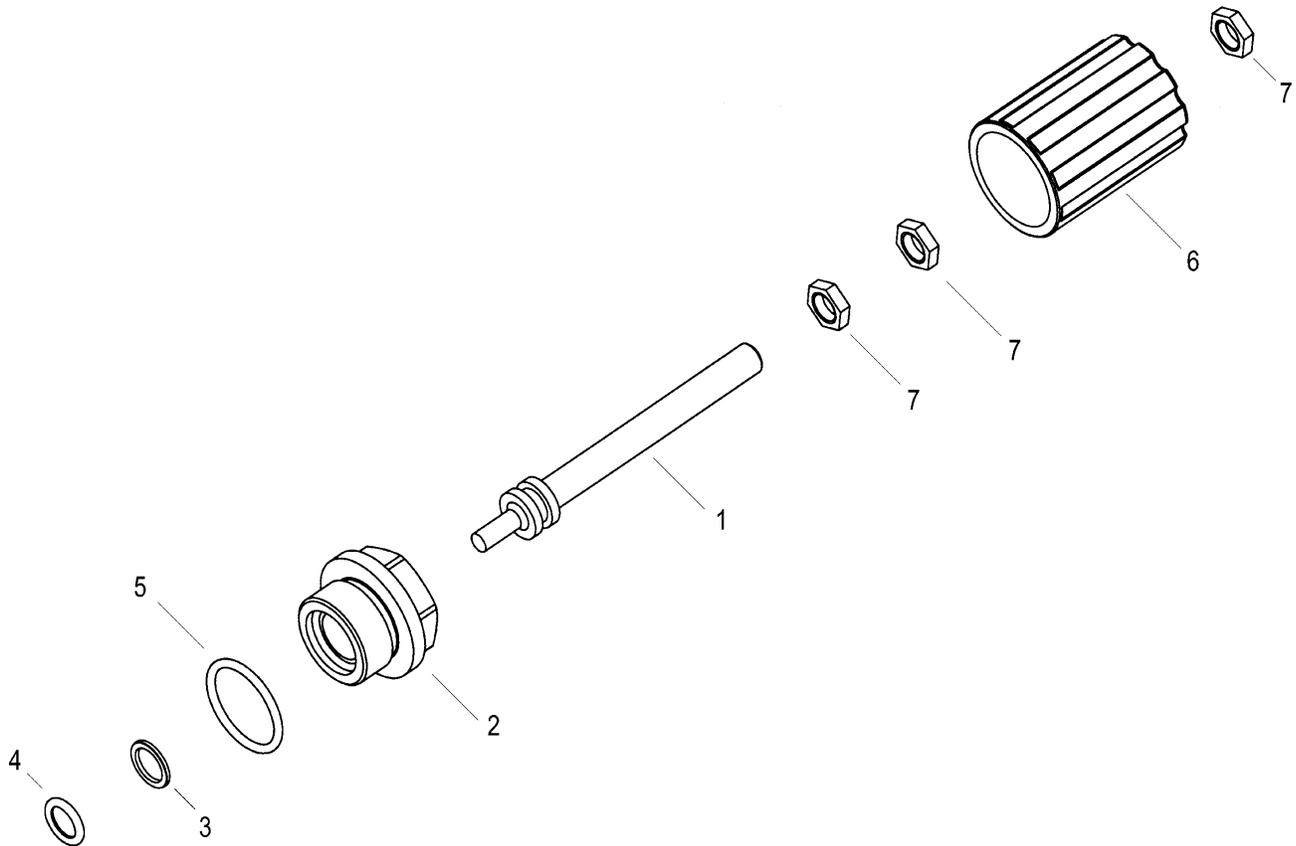

| Item | Part # | Description | Quantity |
|------|--------|--------------|----------|
| 1 | 03361 | Pulsator Rod | 1 |
| 2 | 03362 | Pulsator Cap | 1 |
| 3 | 08324 | Back-up Ring | 1 |
| 4 | 03001 | O-Ring | 1 |
| 5 | 07332 | O-Ring | 1 |
| 6 | 13263 | Handwheel | 1 |
| 7 | 12320 | Limiting Nut | 3 |

GIANT

Performance Under Pressure

Giant Industries, Inc.
900 N. Westwood Ave.
Toledo, Ohio 43607
(419) 531-4600
FAX (419) 531-6836
www.giantpumps.com

© Copyright 2021 Giant Industries, Inc.

02/21 22747.INDD

INSTALLATION INSTRUCTIONS

22747 Pulsator Valve

For use on SP100W series pumps

- 1). Remove center inlet valve plug from the front of the pump manifold.
- 2). Adjust the hand wheel (6) on the pulsator until it is all the way out by turning it counter clockwise. (Note: the handwheel will stop when it is all the way out.)
- 3). Install the pulsator assembly into the center inlet valve port and tighten with a 27 mm wrench.

OPERATING INSTRUCTIONS

- 1). To use the pump as a pulsating pump, turn the handwheel (6) clockwise until it is tight.
- 2). To use the pump as a pressure washer, turn the hand wheel counterclockwise until it stops.



WARNING: This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.
For more information go to www.P65Warnings.ca.gov