


Instructions for 23930 clutch assembly (For P46 pump)

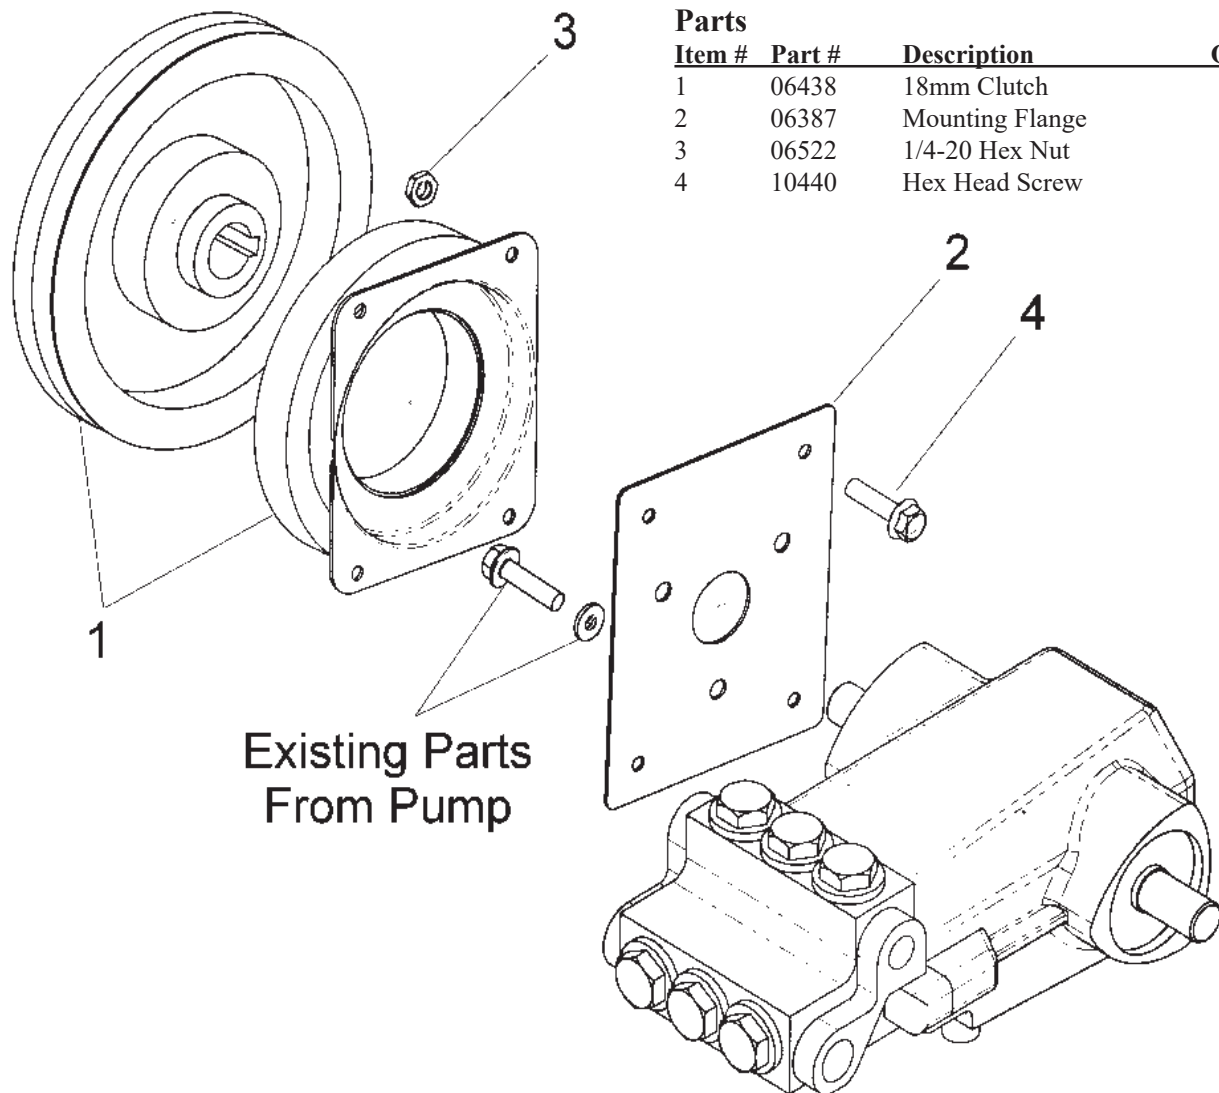

Parts

Item #	Part #	Description	Qty
1	06438	18mm Clutch	1
2	06387	Mounting Flange	1
3	06522	1/4-20 Hex Nut	4
4	10440	Hex Head Screw	4

Assembly Instructions

1. Remove the screws from the bearing cover on the pump with a 10mm hex wrench.
2. Place the mounting plate (2) over the crankshaft and secure with the existing bearing cover screws.
3. Secure clutch (1) to mounting flange by sliding clutch over crankshaft and attaching with screws (4) and hex nuts (3). Secure set screw on pulley shaft.
4. Attach lead wire to (+) or pressure flow switch as desired.
5. Attach "B section" belt of required length
6. Engage and disengage the clutch several times to ensure it is functioning properly. If full torque will be required from the pump immediately, the pump should be properly burnished. (Burnishing involves cycling the clutch at a reduced speed not more than 4 times per minute so the surfaces can mate together. In most applications, 20-50 cycles are required for burnishing.)



WARNING: This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.
For more information go to www.P65Warnings.ca.gov

NOTE: If an operation manual is needed for the above pump models, please consult your local distributor.