
## **Instructions for Kit Number 09842**

## **Accumulator Charging Kit**

| Items Included in the Kit |                   |                   |      |
|---------------------------|-------------------|-------------------|------|
| <u>Item</u>               | Part #            | Description       | Qty. |
| 1                         | 03332             | Bleeder Valve     | 1    |
| 2                         | 03333             | Air Chucks        | 1    |
| 3                         | 03336             | Schrader Valve    | 1    |
| 4                         | 03337             | Pressure Gauge    | 1    |
| 5                         | HYH-5652-02-02-02 | Hydraulic Adapter | 1    |
| 6                         | 03334             | Gland             | 1    |
| 7                         | 03335             | Nut               | 1    |
| 8                         | 03338             | Hose              | 1    |
| 9                         | 03339             | Schrader Coupler  | 1    |
| 10                        | 03340             | Case              | 1    |
| 11                        | HYH-5000-08-08    | Hydraulic Adapter | 1    |
| 12                        | HYH-5405-02-04    | Hydraulic Adapter | 1    |

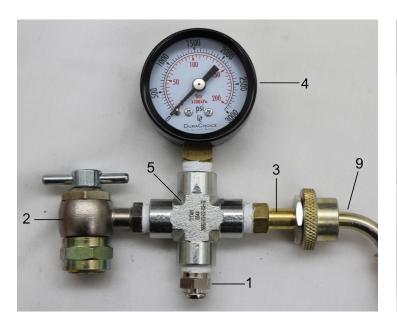





Instructions on back

## **Charging Instructions**

- 1. First check to make sure that every fitting is securely fastened to the hose assembly and there are no leaks.
- 2. Thread the nut (7) and gland assembly (6) into the nitrogen tank. (Pic. 1 &2)



(Picture 1)



(Picture 2)

3. Thread the charge kit assembly (Items 1-5) onto the Schrader coupler (9) on the hose assembly. Once connected ensure it is tight and there are no leaks. (see image at right)



- 4. Connect the accumulator to the air chuck. (see image at right)
- 5. Begin adding nitrogen to the accumulator until the desired pressure is achieved.
- 6. Once the required pressure is met, quickly remove the accumulator.

