


# Models P532, P533 and P536

---

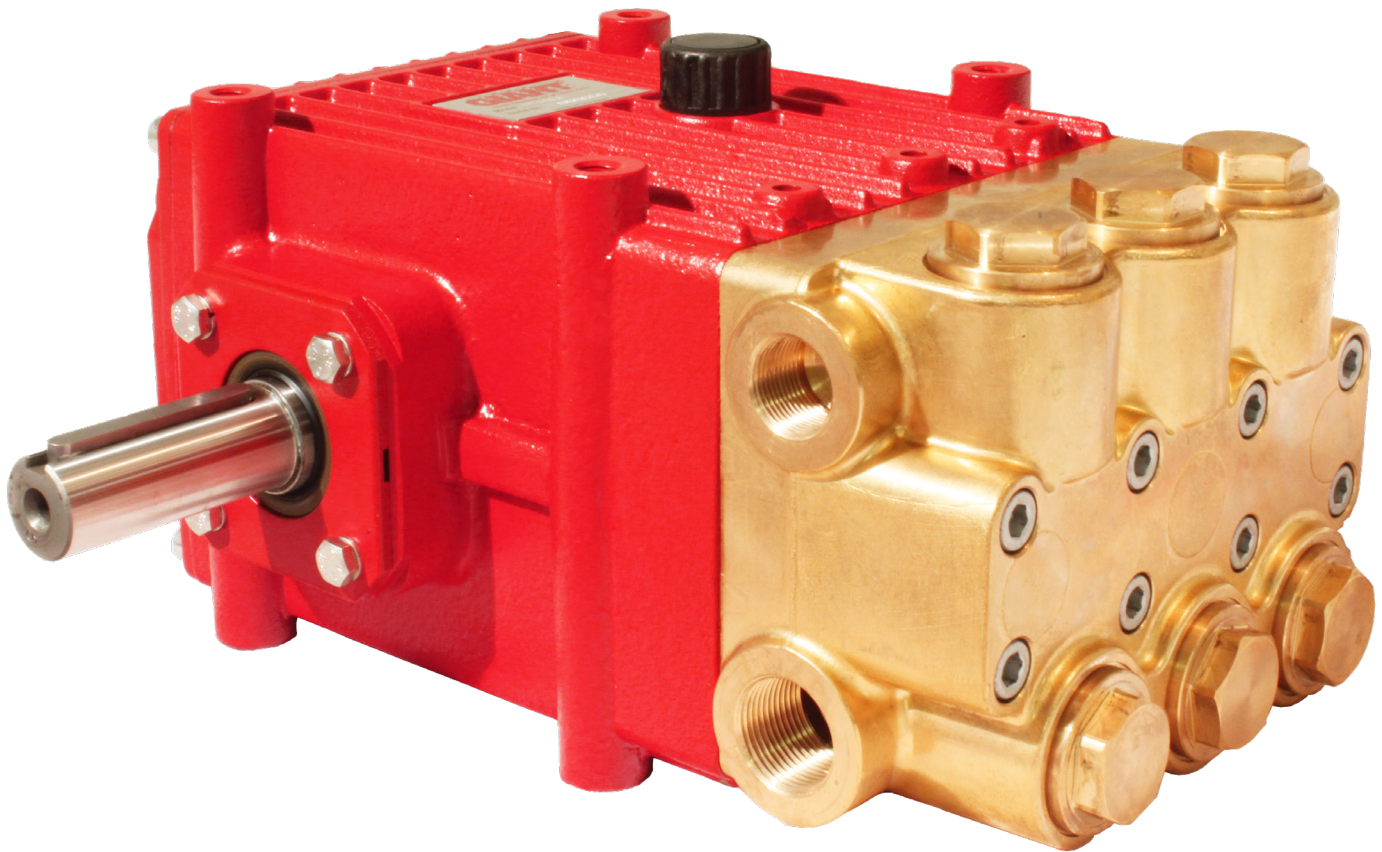

Updated 04/23

**Contents:**

Performance Information:	page 2
Installation Instructions:	page 3
Exploded View:	page 4
Parts List/Kits/Torque Specifications:	page 5
Repair Instructions:	page 6
Trouble Shooting Chart:	page 7
Recommended Spare Parts List:	page 7
Dimensions:	back page
Warranty Information:	back page

# P532/P533/P536

## 1. Performance

### U.S. Measurements

	Max. Flow	Pressure	Max. Speed	Power Req'd.	Plunger Diameter	Stroke
Model	GPM	PSI	RPM	BHP	In.	In.
P533	22.7	2175	1450	34.1	1.26	1.02
P532	24.4	2175	1450*	36.6	1.26	1.10
P536	26.4	1740	1450	31.6	1.42	0.945

### Metric Measurements

	Max. Flow	Pressure	Max. Speed	Power Req'd.	Plunger Diameter	Stroke
Model	LPM	Bar	RPM	kW	mm	mm
P533	86.0	150	1450	25.4	32	26
P532	92.5	150	1450*	27.3	32	28
P536	100	120	1450	23.6	36	24

\*Requires 15 PSI inlet pressure

### Common Specifications

	U.S.	(Metric)
Temperature of Pumped Fluids	Up to 104 °F	(40 °C)
Inlet Ports		2 x 1" BSP
Discharge Ports		2 x 3/4" BSP
Shaft Rotation		Top of pulley towards manifold
Crankshaft Diameter	1.18"	(30 mm)
Key Width	0.315"	(8 mm)
Shaft Mounting		Either side (specify when ordering)
Weight	64 lbs	(29 kg)
Crankcase Capacity	54 fl.oz.	(1.6 liters)
NPSHR (at ambient temperature)	26.9 ft. head	(8.2 mWs)

### Materials Used:

Valve Casing:.....Special Brass  
 Plungers: .....Solid Ceramic  
 Valves: .....High Grade Stainless Steel  
 Seals:.....Nitrile with Fabric Reinforcing  
 Crankshaft: .....Drop Forged and case-hardened

In order to drive the pump from the side opposite the present shaft extension, simply remove the valve casing from the crankcase and rotate the pumps 180 degrees to the desired position. Be certain to rotate the seal case (item #20) as well, so that the weep holes are down at the six o'clock position. Exchange the oil fill and the oil drain plugs, also. Refer to the repair instructions as necessary for the proper assembly sequence.

### SPECIAL NOTE:

#### P532-

The theoretical gallons per revolution (gal/rev) is 0.0168. To find specific outputs at various RPM, use the formula:  $GPM = 0.0168 \times RPM$

#### P533-

The theoretical gallons per revolution (gal/rev) is 0.0157. To find specific outputs at various RPM, use the formula:  $GPM = 0.0157 \times RPM$

#### P536-

The theoretical gallons per revolution (gal/rev) is 0.0182. To find specific outputs at various RPM, use the formula:  $GPM = 0.0182 \times RPM$

# P532/P533/P536

## 1.2 Pulley Information

Pulley selection and pump speed are based on a 1725 RPM motor and “B” section belts. When selecting desired GPM, allow for a ±5% tolerance on pumps output due to variations in pulleys, belts and motors among manufacturers.

1. Select GPM required, then select appropriate motor and pump pulley from the same line.
2. The desired pressure is achieved by selecting the correct nozzle size that corresponds with the pump GPM.

Performance data for intermittent operation, data for continuous operation on request.

For information on intermittent operation and calculating of the performance data, see the Giant Pumps assembly instructions.

### NPSHR / Inlet pressure

Required NPSH refers to water at 60 °F (20 °C) at max. permissible pump speed.

Maximum inlet pressure: 29 PSI (2 bar)

### Level of noise emission

Emission sound pressure level: ≤ 85 dB(A)

## 1.3 Horsepower Information

Horsepower ratings shown are the power requirements for the pump. Gas engine power outputs must be approximately twice the pump power requirements shown above.

We recommend that a 1.15 service factor be specified when selecting an electric motor as the power source.

To compute specific pump horsepower requirements, use the following formula:

$$(\text{GPM} \times \text{PSI}) / 1450 = \text{HP}$$

## 2. Fields of application

The fields of application of these pump types correspond to the specifications in the assembly instructions Giant Pumps.

## 3. Ambient conditions

Ambient temperature:  $41\text{ °F} < T_{\text{Amb.}} < 86\text{ °F}$

Ambient temperature:  $5\text{ °C} < T_{\text{Amb.}} < 30\text{ °C}$

## 4. Oil filling

- Filling quantity: **0.42 gallons (1.6 l)**
- Quality: Industrial gear oil **ISO VG 220** or automotive gear oil **SAE 90 GL4 (Giant's p/n 01154)**  
Intervals: first oil change after **50 operating hours** then every **500 operating hours**, but at the latest after **12 months**

## 5. Installation/ Putting into Operation

### 5.1 Direction of pump rotation

When looking at crankshaft with valve casing mounted on left-hand side, counterclockwise direction of rotation.

When looking at crankshaft with valve casing mounted on right-hand side, clockwise direction of rotation.


### 5.2 Suction line filter

Recommended mesh size 150 µm.

## 6. Operation

For informations, see assembly instructions Giant Pumps.

# EXPLODED VIEW - P532, P533 and P536

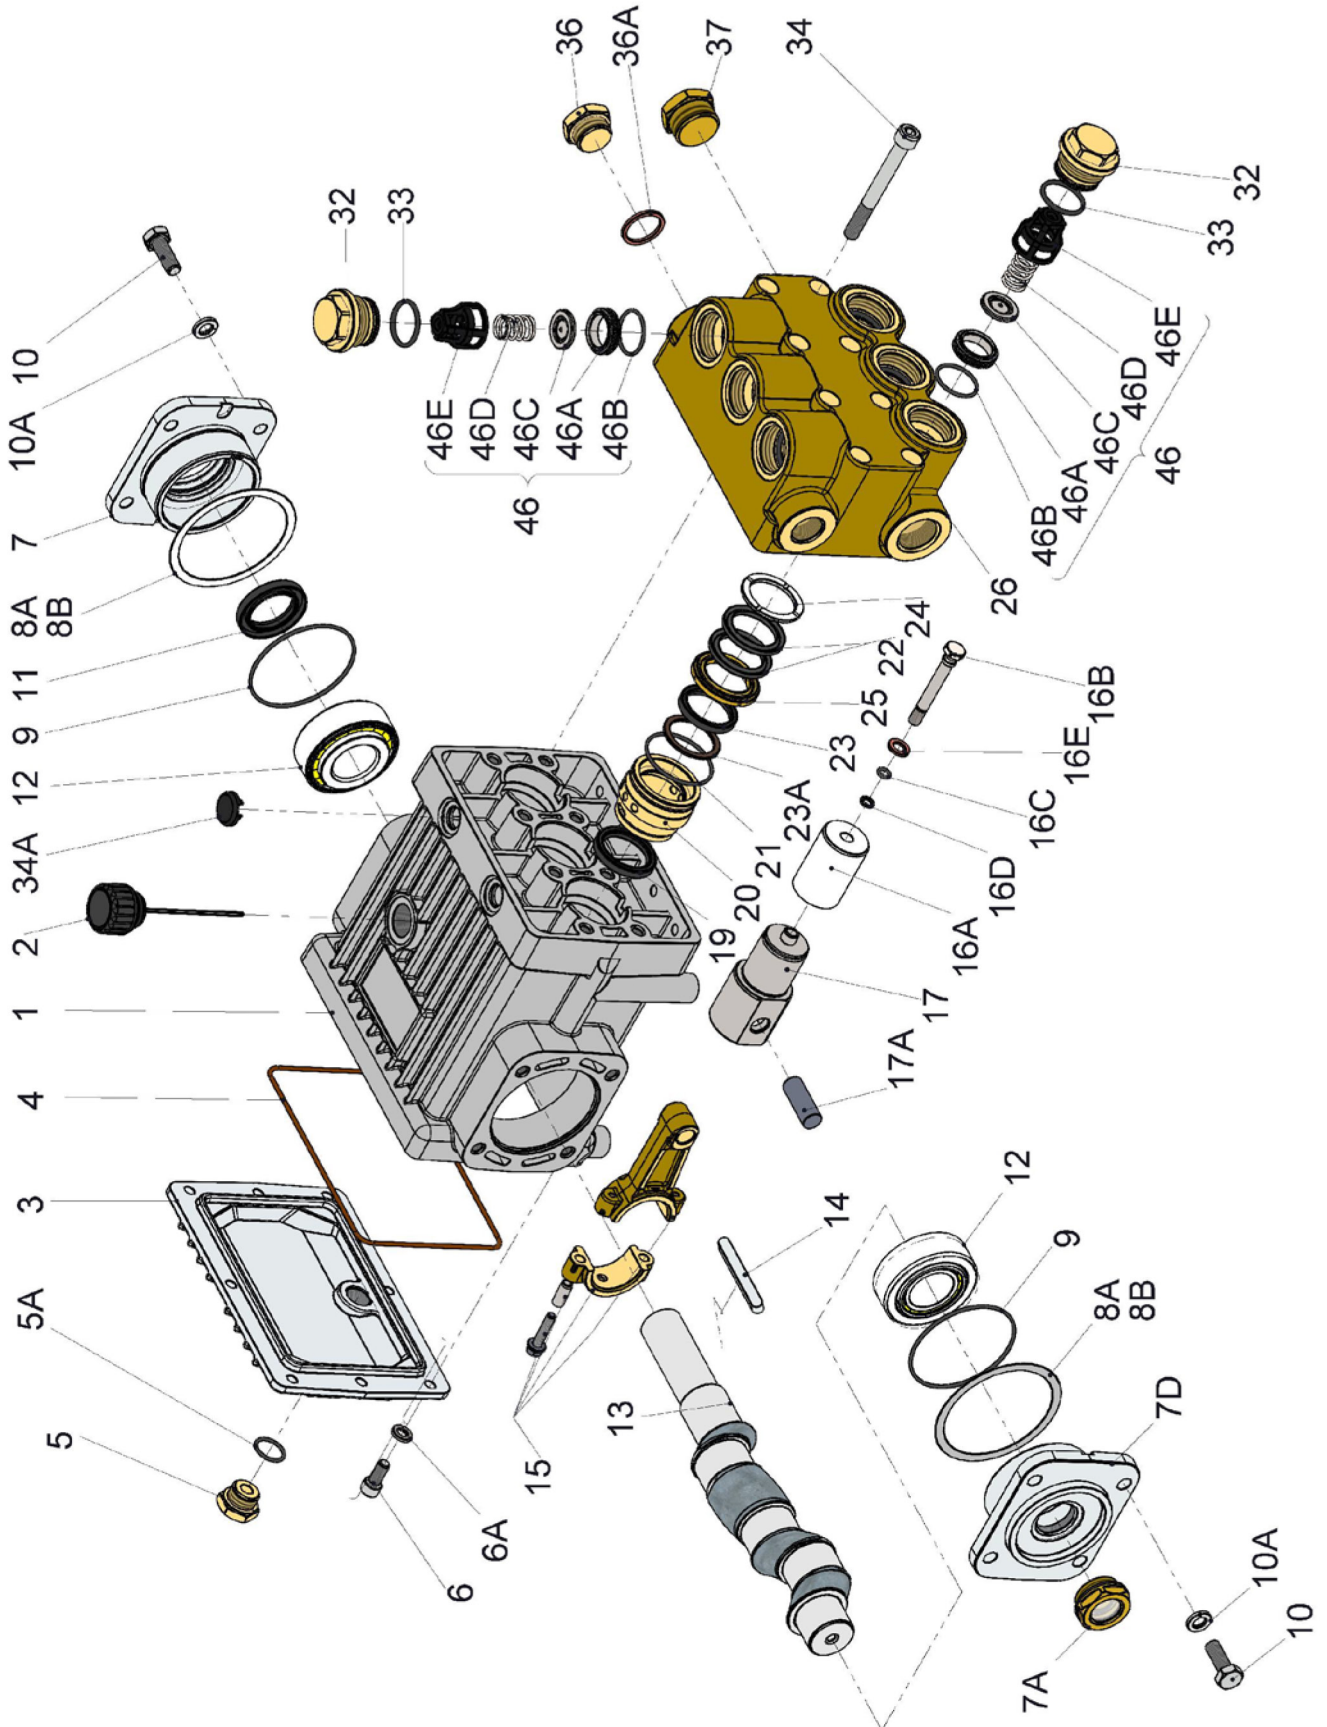

## P532, P533 and P536 SPARE PARTS LIST

ITEM	PART	DESCRIPTION	QTY.	ITEM	PART	DESCRIPTION	QTY.
1	04405	Crankcase, Aluminum	1	22	13027	Sleeve (P532/P533)	6
2	04234	Oil Dipstick Assembly	1	22	07144	Sleeve (P536)	6
3	04406	Crankcase Cover, Aluminum	1	23	04281	Grooved Ring (P532/P533)	3
4	04407	O-Ring	1	23	04248	Grooved Ring (P536)	3
5	07109	Oil Drain Plug	1	23A	04282	Scraper (P532/P533)	3
5A	06015	Gasket for Oil Drain Plug	1	23A	04249	Scraper (P536)	3
6	01010	Screw	4	24	06702	Sleeve Support Ring (P532/P533)	3
6A	01011-0400	Spring Washer	4				
7	04408	Bearing Cover	1	24	04250	Sleeve Support Ring (P536)	3
7A	05943	Oil Sight Glass	1	25	04862	Drip Return Ring (P532/P533)	3
7D	03545	Bearing Cover	1	25	04251	Drip Return Ring (P536)	3
8A	04409	Shim	1-3	26	04863	Valve Casing (P532/P533)	1
8B	04410	Shim	1	26	04416	Valve Casing (P536)	1
9	04411	O-Ring	2	32	04253	Plug	6
10	13133	Screw with Washer	8	33	12057	O-Ring	6
10A	06725	Spring Washer	8	34	08484	Cap Screw	8
11	04238	Radial Shaft Seal	1	34A	04417	Vent Cap	2
12	04239	Tapered Roller Bearing	2	36	07703	Plug, 3/4" BSP	1
13	04240	Crankshaft (P532)	1	36A	07704	Copper Ring	1
13	04425	Crankshaft (P533)	1	37	12249	Plug, 1" BSP	1
13	04420	Crankshaft (P536)	1	46	04254	Valve Assembly	6
14	04241	Fitting Key	1	46A	04255	Valve Seat	6
15	04242	Connecting Rod Assembly	3	46B	07281	O-Ring	6
16A	04279A	Plunger Pipe (P532/P533)	3	46C	04256	Valve Plate	6
16A	04864	Plunger Pipe (P536)	3	46D	04257	Valve Spring	6
16B	08399	Tension Screw (P533)	3	46E	04258	Spring Tension Cap	6
16B	04865	Tension Screw (P532/P536)	3		04418	Gear Assembly (P532)	
16C	07023	O-Ring	3			parts:1-19, 34	
16D	07203	Support Ring	3		04426	Gear Assembly (P533)	
16E	07258	Steel Washer	3			parts:1-19, 34	
17	04412	Crosshead w/Plunger Base	3		04423	Gear Assembly (P536)	
17A	07124	Crosshead Pin	3			parts:1-19, 34	
19	04860	Radial Shaft Seal	3		04419	Manifold Assembly (P532/P533)	
20	04861	Seal Retainer (P532/P533)	3			parts:20-46, without 34	
20	04866	Seal Retainer (P536)	3		04424	Manifold Assembly (P536)	
21	08492	O-Ring	3			parts:20-46, without 34	

## P532, P533 and P536 REPAIR KITS

### Plunger Packing Kit (P532/P533) - #09760

Item	Part #	Description	Qty
21	08492	O-Ring	3
22	13027	Sleeve	6
23	04281	Grooved Seal	3
23A	04282	Scraper	3

### Plunger Packing Kit (P536) - #09753

Item	Part #	Description	Qty
21	08492	O-Ring	3
22	07144	Sleeve	6
23	04248	Grooved Ring	3
23A	04249	Scraper	3

### Valve Assembly Kit - #09754

Item	Part #	Description	Qty
33	12057	O-Ring	6
46	04254	Valve Assembly	6

### Oil Seal Kit - #09755

Item	Part #	Description	Qty
19	04860	Radial Shaft Seal	3

## P523/P533/P536 Torque Specifications

Position	Item #	Description	Thread	Lubrication Info	Torque Specifications
5	07109	Oil Drain Plug	1/2" BSP		59 ft.-lbs. (80 Nm)
6	01010	Screw	M8		110 in.-lbs. (12.5 Nm)
7A	05943	Oil Sight Glass	1" BSP	Loctite 572	22 ft.-lbs. (40 Nm)
10	13133	Screw with Washer	M10		132 in.-lbs. (15 Nm)
15	04242	Connecting Rod Assembly	M6		97 in.-lbs. (11 Nm)
16B	08399	Tension Screw	M8	Loctite 243	247 in.-lbs. (28 Nm)
32	04253	Plug	M36x1.5		106 ft.-lbs. (145 Nm)
34	08484	Cap Screw	M10		59 ft.-lbs. (80 Nm)

## REPAIR INSTRUCTIONS - P532, P533 and P536

### 8. Maintenance and Servicing

For the type of threadlocker used and the required tightening torques, observe the table in the exploded view.

#### 8.1 Special tools required

The following special tools are required for assembly:

- Pull-out tool size 2 (Ø20mm)

#### 8.2 Suction and Discharge Valves

Screw out plugs (32) with a socket wrench.

Remove the exposed spring tension cap (46E or 47E) from the valve seat by pushing it sideways using a screwdriver.

Remove spring tension cap, valve spring (46D or 47D) and valve plate (46C or 47C).

Pull out valve seat (46A or 47A) with a size 2 (Ø20mm) extractor tool.

Examine valve components for wear and damage.

Check O-rings. Replace worn parts.

New O-rings slightly coated with oil should be preferably used.

Tighten the plugs (32) to the required torque.

Take care to reassemble in correct sequence.

#### 8.3 Seals and Plunger pipe

Loosen screws (34) and remove valve casing (26) by pulling it off over the plungers.

Remove seal adaptors (20) out of the valve casing (26) or crankcase (1).

Examine O-rings (21), grooved rings (23) and scraper (23A).

Remove drip return rings (25), V-sleeves (22) and support rings (24) from the valve casing.

Check that the bores in the leakage rings and the corresponding bores in the valve casing are free of obstruction.

When replace, wet new seals and O-rings thinly with silicone grease or mineral oil and insert carefully.

Take care to reassemble in correct sequence.

Check plunger surfaces (16A).

Damaged surfaces cause hard wear on seals.

Lime deposits or similar on the plunger must be carefully removed using a sharp knife.



Plunger surface must not be damaged in the process.

If plunger pipe (16A) is worn, remove tensioning screw (16B) with the plunger.

Examine and clean the crosshead mounting surface (17).

Check and mount the new plunger pipe.

Cover thread of tension screw (16B) with a thin coat of thread locker and tighten carefully to the required torque.



Under no circumstances should threadlocker get between the plunger pipe (16B) and the centering neck on the plunger (17) resp. centering sleeve (16F).

Tensioning of the plunger pipe due to eccentric tightening of the tensioning screw or due to dirt or damage to the contact surface can lead to breakage of the plunger pipe.

When reassembling, insert scraper (23A) and grooved ring (23) into seal retainer (20).

Carefully push the whole unit onto the ceramic plunger (if necessary use the drip return ring to hold the grooved ring in its seal retainer) and push it down into its crankcase fitting.

Slide on drip return ring (25) with its V-profile facing upwards.

Put sleeve support ring (24) into the valve casing.

Tilt V-sleeve (22) into its fitting.

Then carefully press it level using the flat side of a screwdriver.



Be careful not to scratch the valve casing!

Carefully push the whole pump head over the ceramic plungers and against the crankcase.

When assembling, tighten the screws (34) evenly and crosswise to the required torque.

If required, supplementary assembly instructions can be requested from the manufacturer Giant Industries, Inc.


# PUMP SYSTEM MALFUNCTION

MALFUNCTION	CAUSE	REMEDY
The Pressure and/ or the Delivery Drops	Worn packing seals Broken valve spring Belt slippage Worn or Damaged nozzle Fouled discharge valve Fouled inlet strainer Worn or Damaged hose Worn or Plugged relief valve on pump  Cavitation pump for restrictions Unloader	Replace packing seals Replace spring Tighten or Replace belt Replace nozzle Clean valve assembly Clean strainer Repair/Replace hose Clean, Reset, and Replace worn parts Check suction lines on inlet of  Check for proper operation
Water in crankcase	High humidity Worn seals	Reduce oil change interval Replace seals
Noisy Operation	Worn bearings  Cavitation	Replace bearings, Refill crankcase oil with recommended lubricant Check inlet lines for restrictions and/or proper sizing
Rough/Pulsating Operation with Pressure Drop	Worn packing Inlet restriction  Accumulator pressure Unloader Cavitation	Replace packing Check system for stoppage, air leaks, correctly sized inlet plumbing to pump Recharge/Replace accumulator Check for proper operation Check inlet lines for restrictions and/or proper size
Pump Pressure as Rated, Pressure Drop at Gun	Restricted discharge plumbing	Re-size discharge plumbing to Flow Rate of Pump
Excessive Leakage	Worn plungers Worn packing/seals Excessive vacuum Cracked plungers Inlet pressure too high	Replace plungers Adjust or Replace packing seals Reduce suction vacuum Replace plungers Reduce inlet pressure
High Crankcase Temperature	Wrong Grade of oil Improper amount of oil in crankcase	Giant oil is recommended Adjust oil level to proper amount

## Preventative Maintenance Check-List & Recommended Spare Parts List

Check	Daily	Weekly	50hrs	Every 500 hrs	Every 1500 hrs	Every 3000 hrs
Oil Level/Quality	X					
Oil Leaks	X					
Water Leaks	X					
Belts, Pulley		X				
Plumbing		X				
<b>Recommended Spare Parts</b>						
Oil Change (54.1 fl.oz) p/n 1154			X	X		
Seal Spare Parts (1 kit/pump) (See page 5 for kit list)					X	
Oil Seal Kit (1 kit/pump) (See page 5 for kit list)					X	
Valve Spare Parts (1 kit/pump) (See page 5 for kit list)						X

## DIMENSIONS - P532, P533 and P536 - INCHES (MM)

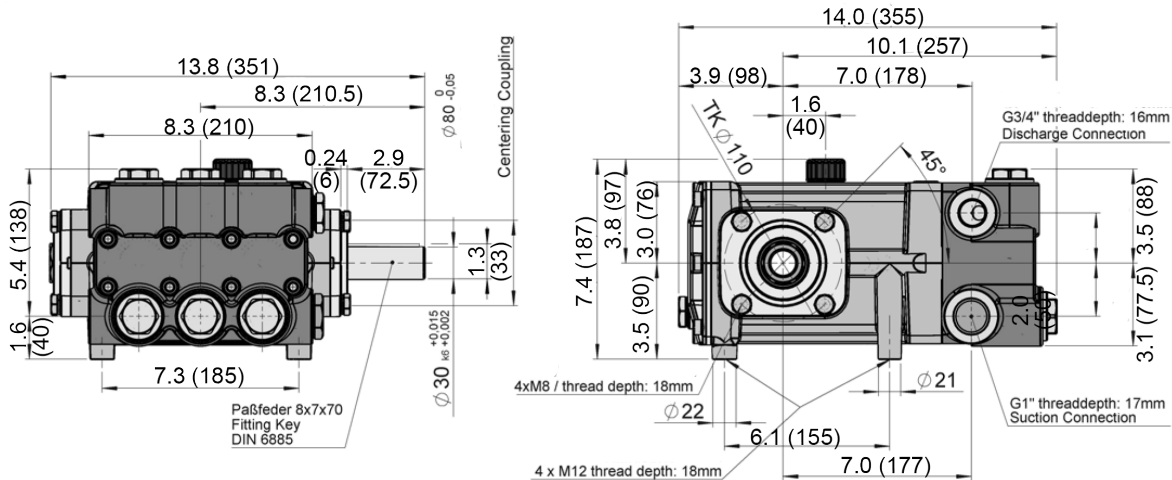

### GIANT INDUSTRIES LIMITED WARRANTY

Giant Industries, Inc. pumps and accessories are warranted by the manufacturer to be free from defects in workmanship and material as follows:

1. Five (5) years from the date of shipment for all pumps used in portable pressure washers with NON-SALINE, clean water applications.
2. Two (2) years from the date of shipment for Giant pumps used in car wash applications.
3. One (1) year from the date of shipment for all other Giant industrial and consumer pumps.
4. Six (6) months from the date of shipment for all rebuilt pumps
5. Ninety (90) days from the date of shipment for all Giant accessories.

This warranty is limited to repair or replacement of pumps and accessories of which the manufacturer's evaluation shows were defective at the time of shipment by the manufacturer. The following items are NOT covered or will void the warranty:

1. Defects caused by negligence or fault of the buyer or third party.
2. Normal wear and tear to standard wear parts.
3. Use of repair parts other than those manufactured or authorized by Giant.
4. Improper use of the product as a component part.
5. Changes or modifications made by the customer or third party.
6. The operation of pumps and or accessories exceeding the specifications set forth in the Operations Manuals provided by Giant Industries, Inc.

Liability under this warranty is on all non-wear parts and limited to the replacement or repair of those products returned freight prepaid to Giant Industries which are deemed to be defective due to workmanship or failure of material. A Returned Goods Authorization (R.G.A.) number and completed warranty evaluation form is required prior to the return to Giant Industries of all products under warranty consideration. Call (419)-531-4600 or fax (419)-531-6836 to obtain an R.G.A. number.

Repair or replacement of defective products as provided is the sole and exclusive remedy provided hereunder and the MANUFACTURER SHALL NOT BE LIABLE FOR FURTHER LOSS, DAMAGES, OR EXPENSES, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGES DIRECTLY OR INDIRECTLY ARISING FROM THE SALE OR USE OF THIS PRODUCT.

THE LIMITED WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATION, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ALL SUCH WARRANTIES ARE HEREBY DISCLAIMED AND EXCLUDED BY THE MANUFACTURER.



**WARNING:** This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.  
For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**GIANT**  
Performance Under Pressure

GIANT INDUSTRIES, INC., 900 N. Westwood Ave., Toledo, Ohio 43607  
PHONE (419) 531-4600, FAX (419) 531-6836, [www.giantpumps.com](http://www.giantpumps.com)  
© Copyright 2023 Giant Industries, Inc.