


P400-5100 Series 22mm & 25mm Versions

Triplex Ceramic
Plunger Pump
Operating Instructions/
Repair and Service Manual

316 Stainless Steel
Corrosion Resistant Pumps

Models: -5100 = Standard Seals
P420A-5100 -5111 = Viton Seals/Viton O-Rings
P420A-5111 -5121 = Teflon Seals/Viton O-Rings
P420A-5121
P422-5100
P423-5100
P425-5100
P425-5111
P425-5121

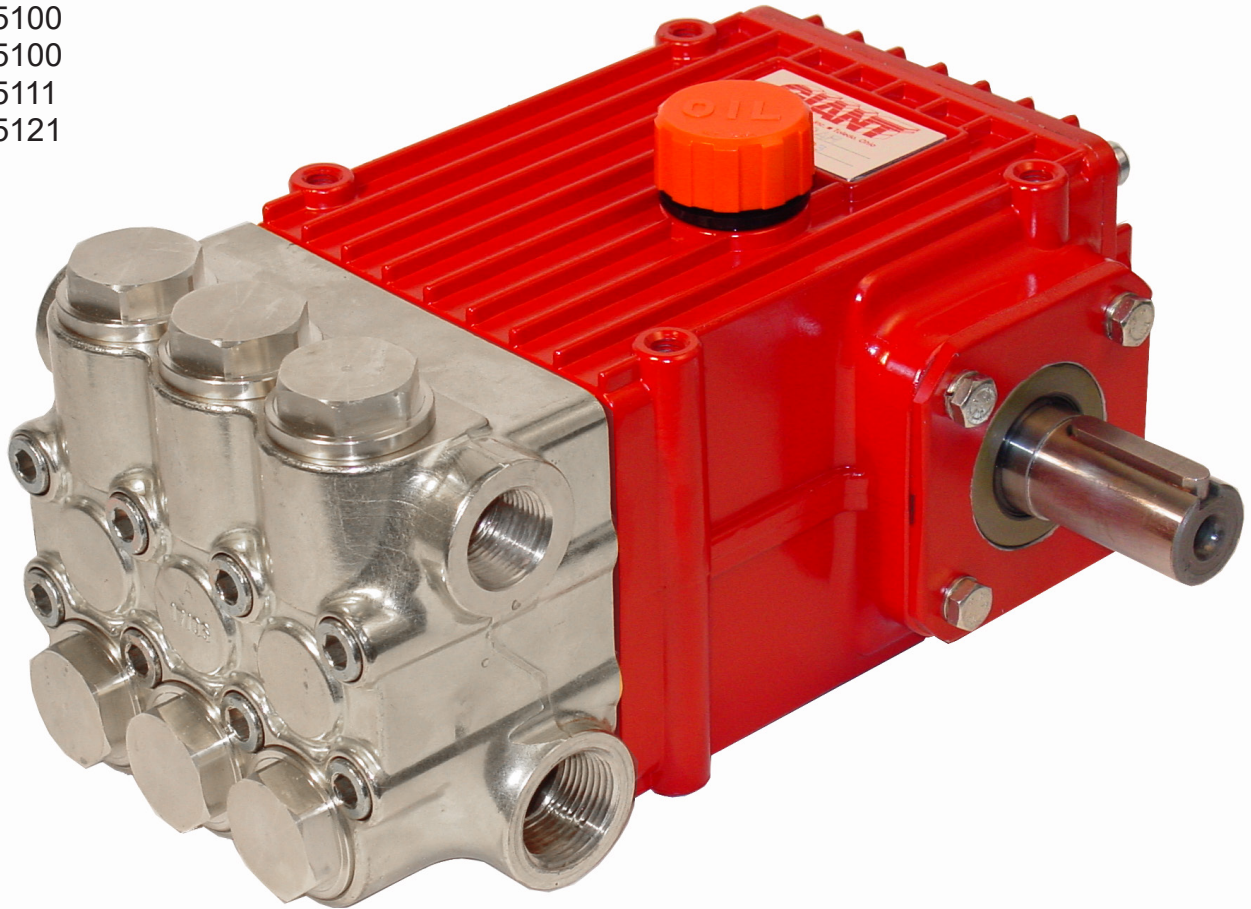

Contents:

Installation Instructions:	page 2
Pump Specifications (except P425-5100):	pages 3-5
Exploded View:	page 6
Parts List/Kits:	page 7
Pump Specifications (P425-5100 Only):	page 8
Repair Instructions/Torque Specs.:	pages 9-10
Trouble Shooting Chart:	page 11
Recommended Spare Parts List:	page 11
Dimensions:	back page
Warranty Information:	back page

Updated 07/20

INSTALLATION INSTRUCTIONS

Required NPSH refers to water (specific weight 1kg/dm³) at maximum permissible pump revolutions.

Operation and Maintenance

Check oil level prior to starting and ensure trouble-free water supply.

Important! If there is a **danger of frost**, the water in the pump and in the pump fittings (particularly the unloader valve) must be emptied. The second discharge port can also be used and the pump run "dry" for 1-2 minutes for this purpose.

Oil: Use only 30.4 ounces (0.9 liters) of ISO VG 220 GL4 (e.g. Aral Degol BG220) or SAE 90 GL4 gear oil (Giant's part number 01154). Initial oil change after 50 operating hours and then every 500 hours, after 1 year if used less. Caution when operating in damp places or with high temperature fluctuations. Oil must be changed immediately should condensate (frothy oil) occur in the gear box.

NPSH values must be observed.

Maximum input pressure 145 PSI (10 bar)
maximum suction head -4.35 PSI (-0.3 bar).
Make sure that suction pulsation is sufficiently dampened - water column resonance must be avoided.

Important! If the pump is not used for a long period of time, it is possible the seals (23/23B) could become hard or brittle thus causing the pump to leak when put into operation. If this is the case, we recommend these seals be replaced every 4 years.



Safety Rules

A safety valve is to be installed in accordance with the guidelines for liquid spraying units so that the admissible operating pressure cannot be exceeded by more than 10%. Pump operation without a safety valve as well as any excess in temperature or speed limits automatically voids the warranty.


When the pump is in operation, the drive shaft end and the coupling must be enclosed by a protective cover or a coupling bell.

Pressure in the discharge line and pump must be at zero before any maintenance to the pump takes place. Shut off suction line. Disconnect fuses to ensure that the driving motor does not get switched on accidentally. Make sure that all parts on the pressure side of the unit are vented before starting the pump. In order to prevent air, or an air-water mixture being absorbed and to prevent cavitation occurring, the pump NPSHR (=suction head) and water temperature must be respected.

Cavitation and/or compression of gases lead to uncontrollable pressure-kicks which can ruin pump and unit parts and also be dangerous to the operator or anyone standing nearby.

Giant Plunger Pumps are suitable for pumping clean water and other non-aggressive or non-abrasive media with a specific weight similar to water.

Before pumping other liquids - especially flammable, explosive and toxic media - the pump manufacturer must be consulted with regard to the resistance of the pump material. It is the responsibility of the equipment manufacture and/or operator to ensure that all pertinent safety regulations are adhered to.

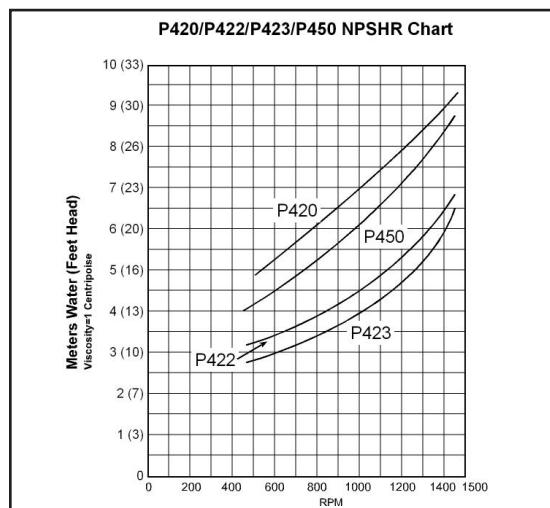

Specifications

Model P420A-5100

	<u>U.S.</u>	<u>(Metric)</u>
Volume.....	Up to 12.8 GPM	(48.4 LPM)
Discharge Pressure	Up to 2200 PSI	(150 bar)
Power Required.....	19.2 BHP	14.3 kW
Inlet Pressure	-4.35 to 145 PSI	(-0.3 to 10 bar)
Stroke	0.94"	(24mm)
Crankshaft Speed.....	Up to 1450 RPM
Plunger Diameter.....	0.98"	(25mm)
Temperature of Pumped Fluids	Up to 160 °F	(70 °C)
Inlet Ports	(2) 1" BSP
Discharge Ports.....	(2) 3/4" BSP
Shaft Rotation.....	Top of pulley towards fluid end
Crankshaft Diameter.....	1.10"	(28mm)
Key Width	0.315"	(8mm)
Shaft Mounting	Either side ¹
Weight	36.6 lbs.....	(16.6 kg)
Crankcase Capacity	30.4 fl.oz.	(0.9 liters)
Volumetric Efficiency @ 1450.....	(0.95)
Mechanical Efficiency @ 1450	(0.86)
NPSHR.....	30.5 ft. of head	9.3 mWs

Consult the factory for special requirements that must be met if the pump is to operate beyond one or more of the limits specified above.

¹NOTE:

In order to drive the pump from the side opposite the present shaft extension, simply remove the valve casing from the crankcase and rotate the pumps 180 degrees to the desired position. Be certain to rotate the seal case (item #20) as well, so that the weep holes are down at the six o'clock position. Exchange the oil fill and the oil drain plugs, also. Refer to the repair instructions as necessary for the proper assembly sequence.

P420A-5100 Horsepower Requirements					
RPM	GPM	1000 PSI	1500 PSI	1700 PSI	2200 PSI
785	6.9	4.8	7.1	8.1	10.5
900	7.9	5.4	8.2	9.3	12.0
1010	8.9	6.1	9.2	10.4	13.5
1120	9.9	6.8	10.2	11.6	15.0
1240	10.9	7.5	11.3	12.8	16.5
1450	12.8	9.0	13.2	15.1	19.4

HORSEPOWER RATINGS:

The rating shown are the power requirements for the pump. Gas engine power outputs must be approximately twice the pump power requirements shown above.

We recommend a 1.15 service factor be specified when selecting an electric motor as the power source. To compute specific pump horsepower requirements, use the following formula:

$$HP = (GPM \times PSI) / 1450$$

SPECIAL NOTE:
The theoretical gallons per revolution (gal/rev) is 0.00883. To find specific outputs at various RPM, use the formula:
GPM = 0.00883 x RPM

Specifications

Model P422-5100

	<u>U.S.</u>	<u>(Metric)</u>
Volume.....	Up to 9.9 GPM	(37.3 LPM)
Discharge Pressure	Up to 2600 PSI	(180 bar)
Power Required.....	17.7 BHP.....	13.2 kW
Inlet Pressure	-4.35 to 145 PSI	(-0.3 to 10 bar)
Stroke	0.94"	(24mm)
Crankshaft Speed.....	Up to 1450 RPM
Plunger Diameter.....	0.87"	(22mm)
Temperature of Pumped Fluids	Up to 160 °F	(70 °C)
Inlet Ports	(2) 1" BSP
Discharge Ports	(2) 3/4" BSP
Shaft Rotation.....	Top of pulley toward fluid end
Crankshaft Diameter.....	1.10"	(28mm)
Key Width	0.315"	(8mm)
Shaft Mounting	Either side ¹
Weight	36.6 lbs.....	(16.6 kg)
Crankcase Capacity	30.4 fl.oz.	(0.9 liters)
Volumetric Efficiency @ 1450.....	(0.95)
Mechanical Efficiency @ 1450	(0.83)
NPSHR.....	22.3 ft. of head	6.8 mWs

Consult the factory for special requirements that must be met if the pump is to operate beyond one or more of the limits specified above.

¹NOTE:

In order to drive the pump from the side opposite the present shaft extension, simply remove the valve casing from the crankcase and rotate the pumps 180 degrees to the desired position. Be certain to rotate the seal case (item #20) as well, so that the weep holes are down at the six o'clock position. Exchange the oil fill and the oil drain plugs, also. Refer to the repair instructions as necessary for the proper assembly sequence.

P422-5100 Horsepower Requirements				
RPM	GPM	1000 PSI	1500 PSI	2600 PSI
900	6.1	4.2	6.3	10.9
1050	7.1	4.9	7.3	12.7
1160	7.9	5.4	8.2	14.2
1300	8.8	6.1	9.1	15.8
1450	9.8	6.8	10.1	17.6

HORSEPOWER RATINGS:

The rating shown are the power requirements for the pump. Gas engine power outputs must be approximately twice the pump power requirements shown above.

We recommend a 1.15 service factor be specified when selecting an electric motor as the power source. To compute specific pump horsepower requirements, use the following formula:

$$HP = (GPM \times PSI) / 1450$$

SPECIAL NOTE:
 The theoretical gallons per revolution (gal/rev) is 0.00679. To find specific outputs at various RPM, use the formula: GPM = 0.00679 x RPM

Specifications

Model P423-5100

	<u>U.S.</u>	<u>(Metric)</u>
Volume.....	Up to 8.2 GPM	(31.1 LPM)
Discharge Pressure.....	Up to 3000 PSI	(200 bar)
Power Required.....	16.4 BHP.....	12.2 kW
Inlet Pressure	-4.35 to 145 PSI	(-0.3 to 10 bar)
Stroke	0.79"	(20mm)
Crankshaft Speed.....	Up to 1450 RPM
Plunger Diameter.....	0.87"	(22mm)
Temperature of Pumped Fluids	Up to 160 °F	(70 °C)
Inlet Ports	(2) 1" BSP
Discharge Ports.....	(2) 3/4" BSP
Shaft Rotation.....	Top of pulley towards manifold
Crankshaft Diameter.....	1.10"	(28mm)
Key Width	0.315"	(8mm)
Shaft Mounting	Either side ¹
Weight	36.6 lbs.....	(16.6 kg)
Crankcase Capacity	30.4 fl.oz.	(0.9 liters)
Volumetric Efficiency @ 1450.....	(0.95)
Mechanical Efficiency @ 1450	(0.83)
NPSHR.....	21 ft. of head	6.4 mWs

Consult the factory for special requirements that must be met if the pump is to operate beyond one or more of the limits specified above.

¹NOTE:

In order to drive the pump from the side opposite the present shaft extension, simply remove the valve casing from the crankcase and rotate the pumps 180 degrees to the desired position. Be certain to rotate the seal case (item #20) as well, so that the weep holes are down at the six o'clock position. Exchange the oil fill and the oil drain plugs, also. Refer to the repair instructions as necessary for the proper assembly sequence.

P423-5100 Horsepower Requirements					
RPM	GPM	1000 PSI	1500 PSI	2000 PSI	3000 PSI
900	5.1	3.6	5.3	7.1	10.6
1050	5.9	4.1	6.1	8.1	12.2
1160	6.6	4.6	6.9	9.1	13.7
1300	7.4	5.1	7.7	10.2	15.3
1450	8.2	5.7	8.5	11.2	17.0

SPECIAL NOTE:
The theoretical gallons per revolution (gal/rev) is 0.00566. To find specific outputs at various RPM, use the formula: GPM = 0.00566 x RPM


HORSEPOWER RATINGS:

The rating shown are the power requirements for the pump. Gas engine power outputs must be approximately twice the pump power requirements shown above.

We recommend a 1.15 service factor be specified when selecting an electric motor as the power source. To compute specific pump horsepower requirements, use the following formula:

$$HP = (GPM \times PSI) / 1450$$

EXPLODED VIEW - P400-5100 Series - 22mm & 25mm

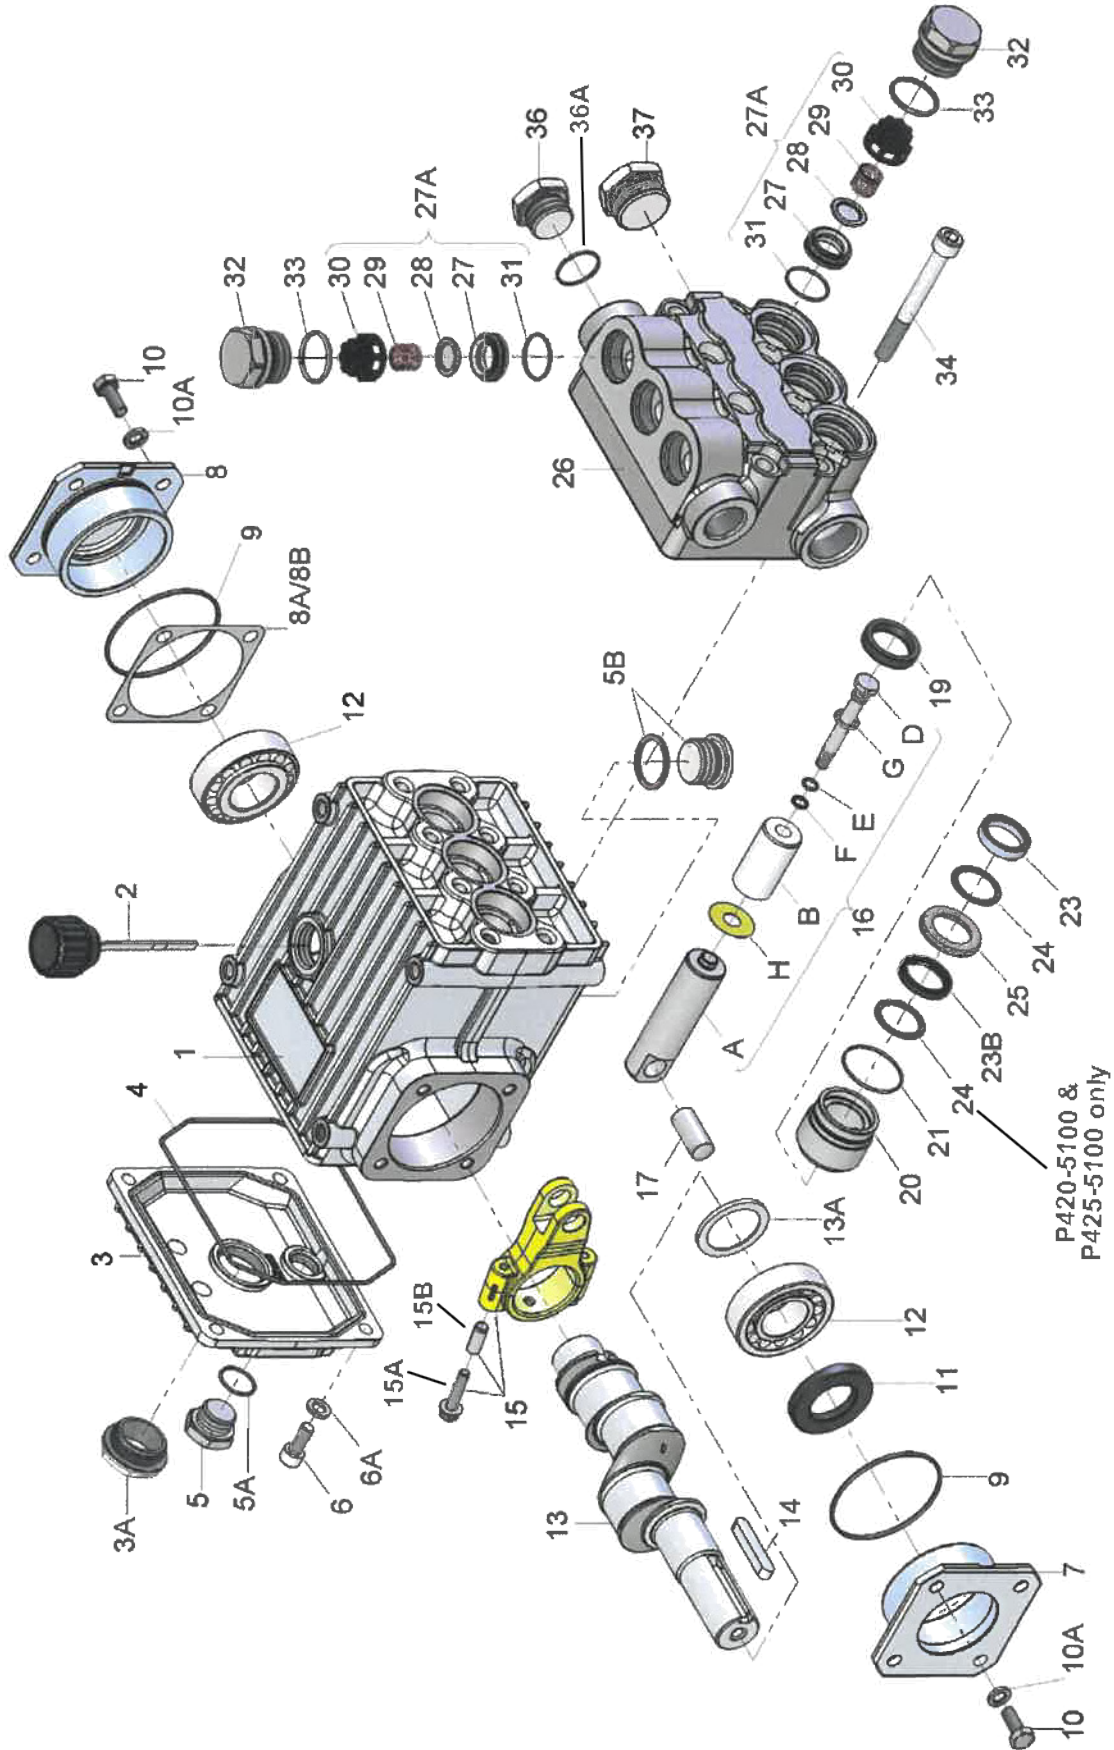

P420A-5100 / P422-5100 / P423-5100 and P425-5100 SPARE PARTS LIST

A = P420A-5100 B = P425-5100 C = P422-5100 D = P423-5100

<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>	<u>ITEM</u>	<u>PART</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
1	08377	Crankcase	1	16D	08399-0100	Tensioning Screw	3
2	08378	Oil Fill Plug with Gasket	1	16E	07023-0001	O-Ring, Viton	3
3	06479	Crankcase cover	1	16F	07203	Backup Ring	3
3A	07186	Oil Sight Glass w/ Gasket	1	16G	07161-0100	Seal Ring	3
4	08380	O-Ring	1	16H	06431	Flinger	3
5	07109-0400	Oil Drain Plug	1	17	06790	Crosshead Pin	3
5A	06015	O-Ring	1	19	05444	Oil Seal	3
5B	08092-0100	Plug with Gasket	1	20	05443-0100	Seal Case (A and B)	3
6	08093	Screw	4	20	05592-0100	Seal Case (C and D)	3
6A	01011-0400	Spring Washer	4	21	07266	O-Ring	3
7	04739	Bearing Cover, Open	1	23	12254	V-Sleeve, 25mm (A and B)	3
8	05291	Bearing Cover, Closed	1	23	06249	V-Sleeve with Support Ring, 22mm (C and D)	3
8A	05292	Shim	1-3				
8B	05293	Shim (May not be present)	1	23A	06251-0100	Spacer Ring (C and D)	3
8C	05764	Shim (May not be present)	1-2	23B	12255	Weep Seal (A and B)	3
9	01016	O-Ring	2	23B	13390	Weep Seal (C and D)	3
10	07114-0100	Screw with Washer	8	24	08376	Pressure Ring (A and B)	6
10A	01011-0400	Spring Washer	8	24	06252	Pressure Ring (C and D)	3
11	07459	Radial Shaft Seal	1	25	06373	Weep Return Ring (A and B)	3
12	05350	Taper Roller Bearing	2	25	06254-0100	Weep Return Ring (C and D)	3
13	04741	Crankshaft (A and C)	1	26	06255-5000	Manifold	1
13	04740	Crankshaft (B and D)	1	27A	08408-0100	Valve Assembly	6
13A	04742	Spacer Ring	1	27	08370-0100	Valve Seat	6
14	08091	Fitting Key	1	28	06791-0100	Valve Plate	6
15	08390	Connecting Rod Assembly	3	29	06377-0100	Valve Spring	6
15A	05349	Connecting Rod Screw	3	30	08372	Valve Spring Retainer	6
15B	05348	Adapter Sleeve	3	31	07212-0001	O-Ring, Viton	6
16	05351-0100	Plunger Assy., 25mm, (A and B) For items 16A-16H	3	32	08373-0600	Plug	6
16	05353-0100	Plunger Assy., 22mm, (C and D) For items 16A-16H	3	33	07214	O-Ring	6
16A	08384-0600	Plunger Base	3	34	08396-0100	Hexagon Screw	8
16B	08398	Plunger Pipe, 25mm (A and B)	3	36	13150-0100	Plug, 3/4" BSP	1
16B	06247	Plunger Pipe, 22mm (C and D)	3	36A	06808	Steel Seal Ring, 3/4"	1
				37	13321-0100	Plug, 1" BSP	1

P420A-5100 / P422-5100 / P423-5100 and P425-5100 Repair Kits

Plunger Packing Kits

P420-5100, P425-5100 - # 09653

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
21	07266	O-Ring	3
23	12254	V-Sleeve	3
23B	12255	Weep Seal	3
24	08376	Pressure Ring	6

P422-5100, P423-5100 - # 09654

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
21	07266	O-Ring	3
23	06249	V-Sleeve	3
23B	13390	Weep Seal	3
24	06252	Pressure Ring	3

Valve Assembly Kits

P400 Series - # 09655

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
27A	08408-0100	Valve Assembly, Complete	6
33	07214	O-Ring	6

Oil Seal Kit

P400 Series - # 09641

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
19	05444	Oil Seal	3

Optional Viton Plunger Packing Kit

P420A-5111, P425-5111 - # 09653-0011

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
21	07266-0001	O-Ring, Viton	3
23	12254-0010	V-Sleeve, Viton	3
23B	12255-0010	Weep Seal, Viton	3
24	08376	Pressure Ring	6

Optional Teflon Plunger Packing Kit

P420A-5121, P425-5121 - # 09653-0021

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
21	07266-0001	O-Ring, Viton	3
23	12254-0020	V-Sleeve, Teflon	3
23B	12255-0020	Weep Seal, Teflon	3
24	08376	Pressure Ring	6

Specifications

Model P425-5100

	<u>U.S.</u>	<u>(Metric)</u>
Volume.....	Up to 10.7 GPM	(40.4 LPM)
Discharge Pressure.....	Up to 2500 PSI	(170 bar)
Power Required.....	18.1 BHP.....	13.5 kW
Inlet Pressure	-4.35 to 145 PSI	(-0.3 to 10 bar)
Stroke	0.787"	(20mm)
Crankshaft Speed.....	Up to 1450 RPM	
Plunger Diameter.....	0.98"	(25mm)
Temperature of Pumped Fluids	Up to 160 °F	(70 °C)
Inlet Ports	(2) 1" BSP	
Discharge Ports.....	(2) 3/4" BSP	
Shaft Rotation.....	Top of pulley towards manifold	
Crankshaft Diameter.....	1.10"	(28mm)
Key Width	0.315"	(8mm)
Shaft Mounting	Either side ¹	
Weight	36.6 lbs.....	(16.6 kg)
Crankcase Capacity	30.4 fl.oz.	(0.9 liters)
Volumetric Efficiency @ 1450.....	(0.95)	
Mechanical Efficiency @ 1450	(0.83)	
NPSHR.....	26.2 ft. of head	8.0 mWs

Consult the factory for special requirements that must be met if the pump is to operate beyond one or more of the limits specified above.

¹NOTE:

In order to drive the pump from the side opposite the present shaft extension, simply remove the valve casing from the crankcase and rotate the pumps 180 degrees to the desired position. Be certain to rotate the seal case (item #20) as well, so that the weep holes are down at the six o'clock position. Exchange the oil fill and the oil drain plugs, also. Refer to the repair instructions as necessary for the proper assembly sequence.

P425-5100 Horsepower Requirements					
RPM	GPM	1000 PSI	1500 PSI	2000 PSI	2500 PSI
750	5.5	3.8	5.7	7.5	9.5
900	6.6	4.6	6.8	9.0	11.4
1010	7.5	5.2	7.7	10.2	12.9
1120	8.3	5.7	8.6	11.4	14.3
1240	9.2	6.3	9.5	12.6	15.9
1450	10.7	7.4	11.1	14.7	18.5

SPECIAL NOTE:
The theoretical gallons per revolution (gal/rev) is 0.00738. To find specific outputs at various RPM, use the formula: GPM = 0.00738 x RPM

HORSEPOWER RATINGS:


The rating shown are the power requirements for the pump. Gas engine power outputs must be approximately twice the pump power requirements shown above.

We recommend a 1.15 service factor be specified when selecting an electric motor as the power source. To compute specific pump horsepower requirements, use the following formula:


$$HP = (GPM \times PSI) / 1450$$

Repair Instructions - P420A-5100/P422-5100/P423-5100 and P425-5100


Note: Always take time to lubricate all metal and nonmetal parts with a light film of oil before reassembly. This step will ensure proper fit, at the same time protecting the pump nonmetal parts (i.e., the elastomers) from cutting and scoring.

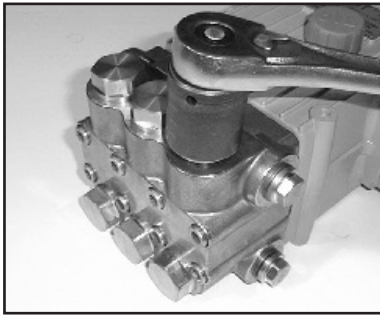


- 1) With a socket wrench, remove the three discharge valve plugs and three inlet valve plugs (32). Inspect the o-ring (33) for wear and replace if damaged.

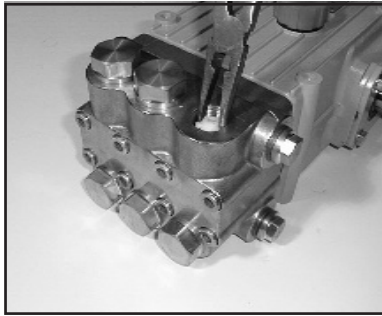


- 2) Using needle nose pliers, remove the inlet and discharge valve assemblies (27A). Note: It may become necessary to remove the valve seat (27) from the valve casing using a slidehammer.

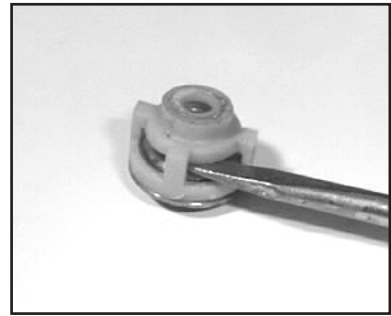

- 3) By inserting a small screw driver between the valve seat (27) and the valve spring retainer (30), the valve assembly can be separated.

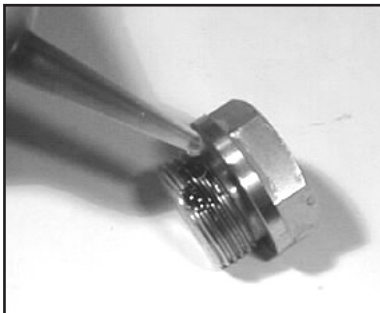

- 4) Remove the O-ring (31). Inspect all parts for wear and replace as necessary. Apply one drop of loctite 243 to the valve plugs (32) and tighten to 107 ft.-lbs. (145 NM).

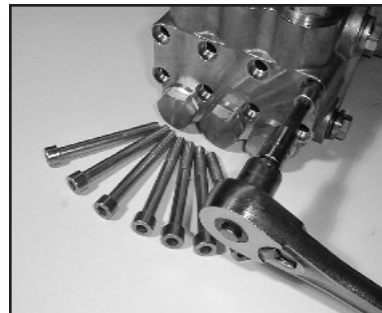

- 5) Use a 8mm allen wrench to remove the 8 socket head cap screws (34). Carefully slide the valve casing (26) out over the plungers.



- 6) Remove seal adapters (20) and weep return rings (25) from the valve casing.



- 7) Remove the pressure rings (24) and v-sleeves (23 - Note: P422 & P423 pumps have a support ring) from the valve casing (26).





- 8) Remove the weep grooved seal (23 or 23B) together with pressure ring (24 - P420 and P425 only) out of the seal case (20). Check O-rings (21).

IMPORTANT! The grooved seal (23) on the high-pressure side is to be fitted carefully into the valve casing (26) using a screwdriver. Under no circumstances must the seal surface in the valve casing or the seal lip be damaged.

Repair Instructions


P420A-5100 / P422-5100 / P423-5100 and P425-5100

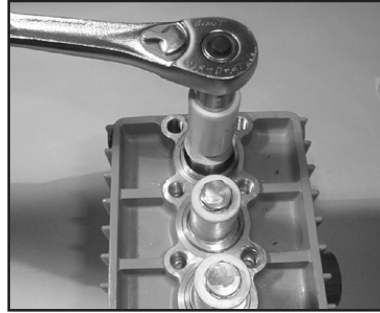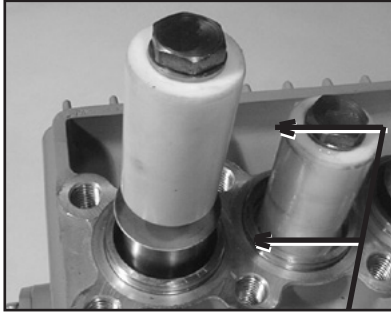

IMPORTANT!

Plunger surfaces are not to be damaged. If there are lime deposits in the pump, care must be taken that the drip-return bore in parts (25) and (26) ensure trouble-free drip-return.

- 9) Check surfaces of plunger (16). Damaged surfaces cause accelerated seal wear. Deposits of all kinds must be removed from the plungers.
- 10) If the plunger pipe (16B), is damaged or worn, remove tension screw (16D) and plunger pipe (16B). Check and clean plunger surface (16A) and check flinger (16H). Cover thread of tension screw (16D) with a thin film of Loctite 243 and tighten carefully to 22 ft.-lbs. (30NM).
- 11) If oil leaks under the plunger (16), the oil seals (19) need to be replaced. Remove oil plug (5) and drain oil. With the valve casing (26) and seal case (20) removed (ref. instructions #5 & 6), and plunger disassembled (ref. #10), carefully pry out the oil seal with a flat screwdriver and replace it with a new one. Make sure that the oil seal groove faces inward towards the oil.
NOTE: Be careful not to score the crankcase guides where the oil seal sits and where the plunger base (16A) moves through the crankcase (1).
- 12) After installation of high pressure seals (23), place seal case (20) with weep seals & pressure ring installed, weep return ring (25) and high pressure weep return ring (24) over plungers. Slide valve casing over plungers and seat firmly. Replace the 8 socket head cap screws (34) and tighten to 22 ft.-lbs.(40 NM) in a crossing pattern (as shown at right).

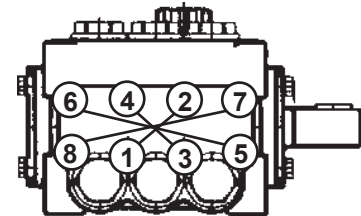

Pump Torque Specifications/Lubrication

<u>Position</u>	<u>Item#</u>	<u>Description</u>	<u>Lubrication Info</u>	<u>U.S (Metric)</u>
3A	07186	Oil Sight Glass	Loctite 5910	106 in.-lbs. (12 Nm)
5	07109-0400	Oil Drain Plug		59 ft.-lbs. (80 Nm)
5B	08092-0100	Plug with Gasket		59 ft.-lbs. (80 Nm)
6	08093	Screw		110 in.-lbs. (12.5 Nm)
10	07114-0100	Screw with Washer		132 in.-lbs. (15 Nm)
15A	05349	Connecting Rod Screw		97 in.-lbs. (11 Nm)
16D	08399-0100	Tensioning Screw	Loctite 243	22 ft.-lbs. (30 Nm)
32	08373-0600	Plug	Pro Pack White Assemble Paste 550	107 ft.-lbs. (145 Nm)
34	08396-0100	Cap Screw	Lightly Oil	22 ft.-lbs. (40 Nm)

PUMP SYSTEM MALFUNCTION


<u>MALFUNCTION</u>	<u>CAUSE</u>	<u>REMEDY</u>
The Pressure and/or the Delivery Drops	Worn packing seals Broken valve spring Belt slippage Worn or Damaged nozzle Fouled discharge valve Fouled inlet strainer Worn or Damaged hose Worn or Plugged relief valve on pump Cavitation Unloader	Replace packing seals Replace spring Tighten or Replace belt Replace nozzle Clean valve assembly Clean strainer Repair/Replace hose Clean, Reset, and Replace worn parts Check suction lines on inlet of pump for restrictions Check for proper operation
Water in crankcase	High humidity Worn seals	Reduce oil change interval Replace seals
Noisy Operation	Worn bearings Cavitation	Replace bearings, Refill crankcase oil with recommended lubricant Check inlet lines for restrictions and/or proper sizing
Rough/Pulsating Operation with Pressure Drop	Worn packing Inlet restriction Accumulator pressure Unloader Cavitation	Replace packing Check system for stoppage, air leaks, correctly sized inlet plumbing to pump Recharge/Replace accumulator Check for proper operation Check inlet lines for restrictions and/or proper size
Pressure Drop at Gun	Restricted discharge plumbing	Re-size discharge plumbing to flow rate of pump
Excessive Leakage	Worn plungers Worn packing/seals Excessive vacuum Cracked plungers Inlet pressure too high	Replace plungers Adjust or Replace packing seals Reduce suction vacuum Replace plungers Reduce inlet pressure
High Crankcase Temperature	Wrong Grade of oil Improper amount of oil in crankcase	Giant oil is recommended Adjust oil level to proper amount

Preventative Maintenance Check-List & Recommended Spare Parts List

Check	Daily	Weekly	50hrs	Every 500 hrs	Every 1500 hrs	Every 3000 hrs
Oil Level/Quality	X					
Oil Leaks	X					
Water Leaks	X					
Belts, Pulley		X				
Plumbing		X				
Recommended Spare Parts						
Oil Change (p/n 1154)			X	X		
Seal Spare Parts (1 kit/pump) (See page 7 for kit list)					X	
Oil Seal Kit (1 kit/pump) (See page 7 for kit list)					X	
Valve Spare Parts (1 kit/pump) (See page 7 for kit list)						X

Dimensions

P420A-5100/P422-5100/P423-5100 and P425-5100 - Inches (mm)

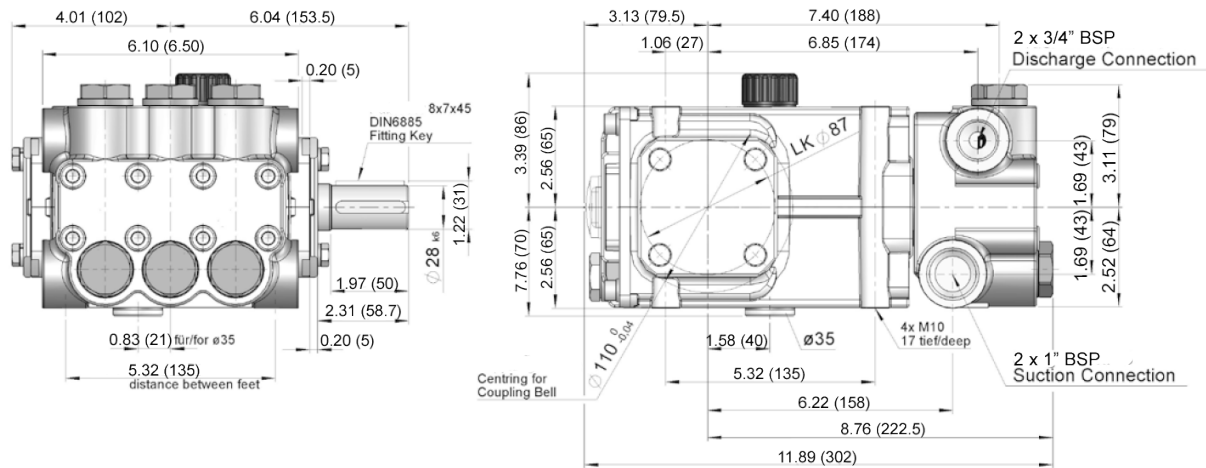

GIANT INDUSTRIES LIMITED WARRANTY

Giant Industries, Inc. pumps and accessories are warranted by the manufacturer to be free from defects in workmanship and material as follows:

1. Five (5) years from the date of shipment for all pumps used in portable pressure washers with NON-SALINE, clean water applications.
2. Two (2) years from the date of shipment for Giant pumps used in car wash applications.
3. One (1) year from the date of shipment for all other Giant industrial and consumer pumps.
4. Six (6) months from the date of shipment for all rebuilt pumps
5. Ninety (90) days from the date of shipment for all Giant accessories.

This warranty is limited to repair or replacement of pumps and accessories of which the manufacturer's evaluation shows were defective at the time of shipment by the manufacturer. The following items are NOT covered or will void the warranty:

1. Defects caused by negligence or fault of the buyer or third party.
2. Normal wear and tear to standard wear parts.
3. Use of repair parts other than those manufactured or authorized by Giant.
4. Improper use of the product as a component part.
5. Changes or modifications made by the customer or third party.
6. The operation of pumps and or accessories exceeding the specifications set forth in the Operations Manuals provided by Giant Industries, Inc.

Liability under this warranty is on all non-wear parts and limited to the replacement or repair of those products returned freight prepaid to Giant Industries which are deemed to be defective due to workmanship or failure of material. A Returned Goods Authorization (R.G.A.) number and completed warranty evaluation form is required prior to the return to Giant Industries of all products under warranty consideration. Call (419)-531-4600 or fax (419)-531-6836 to obtain an R.G.A. number.

Repair or replacement of defective products as provided is the sole and exclusive remedy provided hereunder and the MANUFACTURER SHALL NOT BE LIABLE FOR FURTHER LOSS, DAMAGES, OR EXPENSES, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGES DIRECTLY OR INDIRECTLY ARISING FROM THE SALE OR USE OF THIS PRODUCT.

THE LIMITED WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATION, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ALL SUCH WARRANTIES ARE HEREBY DISCLAIMED AND EXCLUDED BY THE MANUFACTURER.



WARNING: This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov

GIANT
Performance Under Pressure

GIANT INDUSTRIES, INC., 900 N. Westwood Ave., Toledo, Ohio 43607
PHONE (419) 531-4600, FAX (419) 531-6836
www.giantpumps.com
© Copyright 2018 Giant Industries, Inc.

06/18 P400-5100.indd