


Models

Triplex Ceramic
Plunger Pump
Operating Instructions/
Repair and Service Manual

LP122A-4000 & LP122A-5100

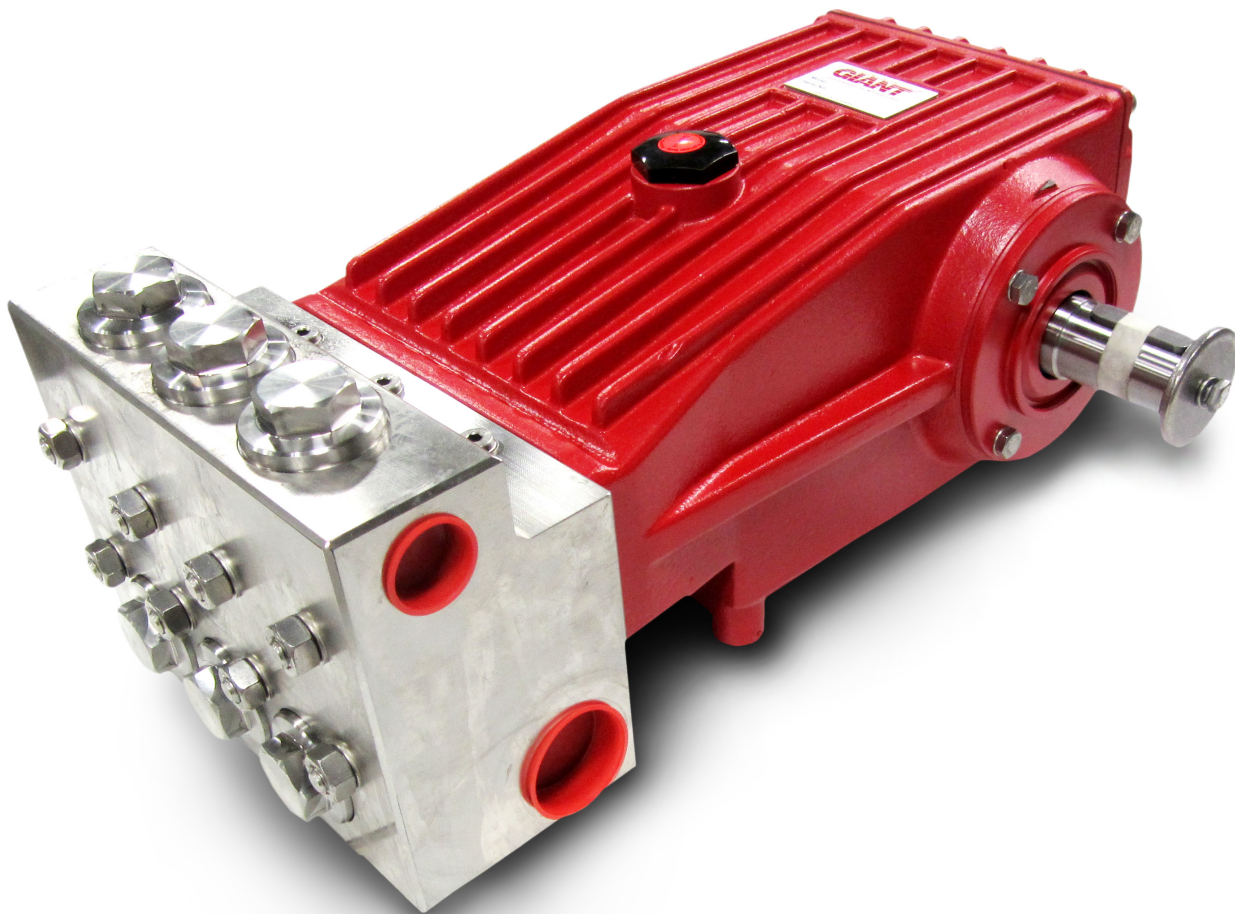

Contents:

Installation Instructions:	page 2
Pump Specifications:	page 3
Exploded View:	page 4
Spare Parts List:	page 5
Repair Kits	page 6
Suggested Maintenance Schedule:	page 6
Troubleshooting Guide:	page 7
Repair Instructions/Torque Specs.:	pages 8-10
Dimensions:	page 11
Warranty Information:	back page

Installation Instructions

Installation of the Giant Industries, Inc., pump is not a complicated procedure, but there are some basic steps common to all pumps. The following information is to be considered as a general outline for installation. If you have unique requirements, please contact Giant Industries, Inc. or your local distributor for assistance.

1. The pump should be installed flat on a base to a maximum of a 15 degree angle of inclination to ensure optimum lubrication.
2. The inlet to the pump should be sized for the flow rate of the pump with no unnecessary restrictions that can cause cavitation. Teflon tape should be used to seal all joints. If pumps are to be operated at temperatures in excess of 140 °F, it is important to insure a positive head to the pump to prevent cavitation.
3. The discharge plumbing from the pump should be properly sized to the flow rate to prevent line pressure loss to the work area. It is essential to provide a safety bypass valve between the pump and the work area to protect the pump from pressure spikes in the event of a blockage or the use of a shut-off gun.

4. Use of a dampener is necessary to minimize pulsation at drive elements, plumbing, connections, and other system areas. The use of a dampener with Giant Industries, Inc. pumps is optional, although recommended by Giant Industries, Inc. to further reduce system pulsation. Dampeners can also reduce the severity of pressure spikes that occur in systems using a shut-off gun. A dampener must be positioned downstream from the unloader.

5. Crankshaft rotation on Giant Industries, Inc. pumps should be made in the direction designated by the arrows on the pump crankcase. Reverse rotation may be safely achieved by following a few guidelines available upon request from Giant Industries, Inc. Required horsepower for system operation can be obtained from the chart on page 3.

6. Before beginning operation of your pumping system, remember: Check that the crankcase and seal areas have been properly lubricated per recommended schedules. Do not run the pump dry for extended periods of time. Cavitation will result in severe damage. Always remember to check that all plumbing valves are open and that pumped media can flow freely to the inlet of the pump.

Finally, remember that high pressure operation in a pump system has many advantages. But, if it is used carelessly and without regard to its potential hazard, it can cause serious injury.

IMPORTANT OPERATING CONDITIONS

Failure to comply with any of these conditions invalidates the warranty.

1. Prior to initial operation, add oil to the crankcase so that oil level is between the two lines on the oil dipstick. **DO NOT OVERFILL.**

Use SAE 80W-90 Industrial Gear Lube Oil (Giant p/n 01154)

Crankcase oil should be changed after the first 50 hours of operation, then at regular intervals of 500 hours or less depending on operating conditions.

2. Pump operation must not exceed rated pressure, volume, or RPM. A pressure relief device must be installed in the discharge of the system.

3. Acids, alkalines, or abrasive fluids cannot be pumped unless approval in writing is obtained before operation from Giant Industries, Inc.

4. Run the pump dry approximately 10 seconds to drain the water before exposure to freezing temperatures.

**NOTE: Contact Giant Industries for Service School Information.
Phone: (419)-531-4600**

LP122A-4000 & LP122A-5100 Specifications

	U.S.	Metric
Volume.....	35.4 GPM.....	134 L/min
Discharge Pressure	1300 PSI	90 Bar
Inlet Pressure.....	Up to 90 PSI.....	Up to 6.2 Bar
Speed		Up to 800 RPM*
Plunger Diameter.....	1.65".....	42 mm
Stroke	1.65".....	42 mm
Crankcase Oil Capacity	116 fl.oz.....	3.43 liters
Temperature of Pumped Fluids.....	Up to 140 °F	Up to 60 °C
Inlet Ports.....		2 x 1-1/2" NPT
Discharge Ports		2 x 1" NPT
Crankshaft Mounting.....		Either Side
Shaft Rotation	Top of Pulley Towards Fluid End	
Weight.....	126 lbs.	57 Kg
Crankshaft Diameter.....	1.38".....	35 mm
Valve Casing - LP122A-4000.....		303 Stainless Steel
Valve Casing - LP122A-5100.....		316 Stainless Steel

Consult the factory for special requirements that must be met if the pump is to operate beyond one or more of the limits specified above.

PULLEY INFORMATION

Pulley selection and pump speed are based on a 1725 RPM motor and "B" section belts. When selecting desired GPM, allow for a ±5% tolerance on pumps output due to variations in pulleys, belts and motors among manufacturers.

1. Select GPM required, then select appropriate motor and pump pulley from the same line.
2. The desired pressure is achieved by selecting the correct nozzle size that corresponds with the pump GPM.

HORSEPOWER INFORMATION

We recommend that a 1.1 service factor be specified when selecting an electric motor as the power source. To compute specific pump horsepower requirements, use the following formula:

$$HP = (GPM \times PSI) / 1450$$


Pump speeds of 640 RPM and above require a minimum inlet pressure of 12 psig.
Pump speeds of 805 RPM and above require a minimum inlet pressure of 14 psig.

LP122A-4000 & LP122A-5100								
PULLEY SELECTION AND HORSEPOWER REQUIREMENTS								
GPM	PUMP PULLEY	MOTOR PULLEY	RPM	600 PSI	800 PSI	1000 PSI	1300 PSI	2000 PSI*
22.3	12.75"	3.95"	500	9.6	12.7	15.9	20.7	31.9
24.7	12.75"	4.35"	555	10.6	14.1	17.6	22.9	35.3
28.5	12.75"	4.95"	640	12.2	16.3	20.4	26.5	40.7
30.9	12.75"	5.35"	695	13.2	17.7	22.1	28.7	44.1
33.4	12.75"	5.75"	750	14.3	19.1	23.9	31.0	47.7
35.6	12.75"	6.15"	800	15.3	20.3	25.4	33.1	50.9
39.4	12.75"	6.50"	885*	16.9	22.5	28.1	36.6	56.3

*Intermittent duty only - Consult factory

LP122A-4000 & LP122A-5100 Exploded View

Important! The stainless steel valve plugs (48) can seize when being screwed out of the casing. To release tension beforehand, strike the plugs 1-2 times with a steel hammer on the top before screwing them out. Coat threads with antiseize (e.g. Fel-Pro Nickel Anti-Seize 51119)

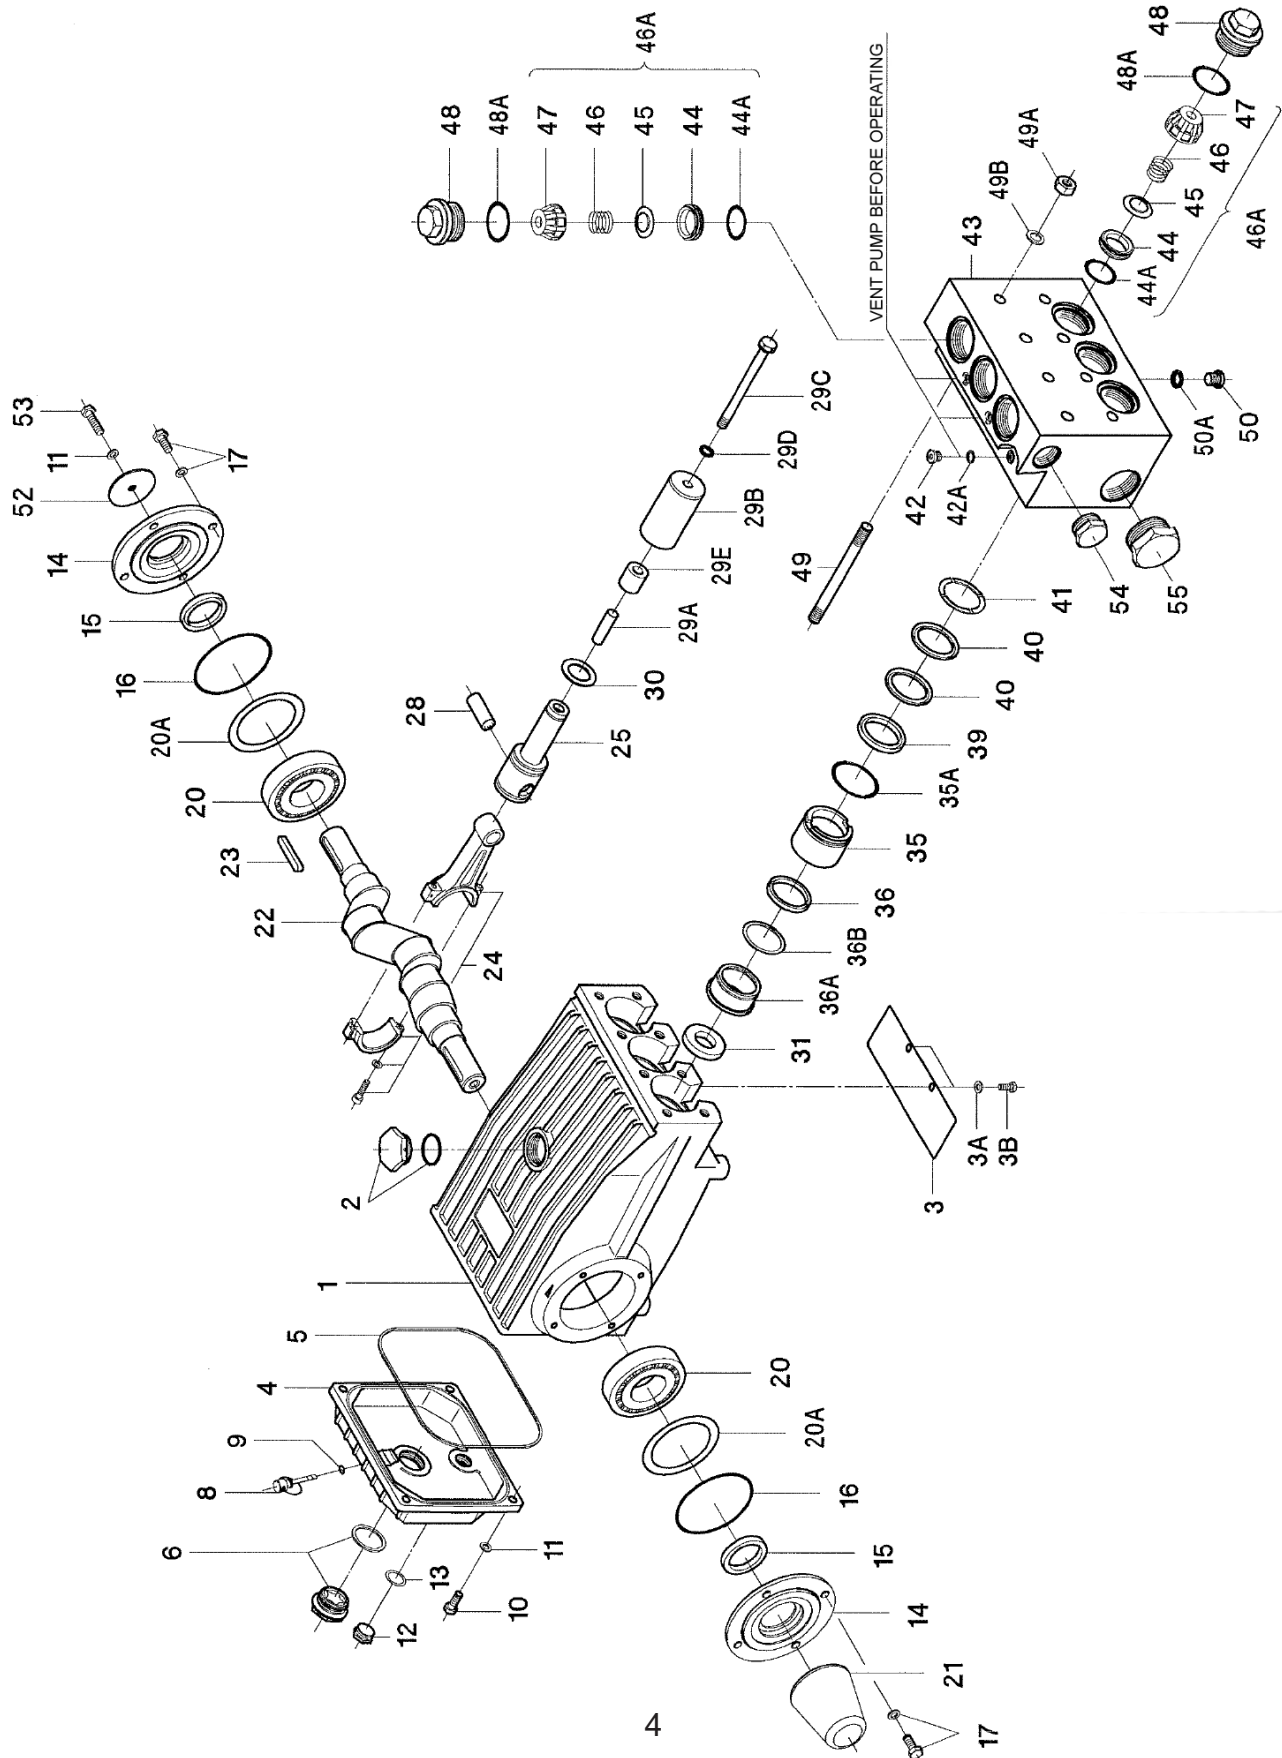

LP122A-4000 & LP122A-5100 PARTS LIST

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>	<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
1	07759	Crankcase	1	29D	07161A-0100	Steel Ring	3
2	13000	Oil Filler Plug	1	29E	06618	Spacer Pipe	3
3	05940	Cover Plate	1	30	07779	Oil Scraper	3
3A	07223-0100	Spring Washer	2	31	07133	Radial Shaft Seal	3
3B	05051-0100	Hexagon Screw	1	35	13342-0100	Seal Sleeve (LP122A-5100)	3
4	06085	Crankcase Cover	1	35	13342	Seal Sleeve (LP122A-4000)	3
5	07104	O-Ring	1	35A	07740	O-Ring	3
6	05943	Oil Sight Glass W/Gasket	1	36	13415	V-Sleeve, Weep	3
8	06086	Oil Dipstick	1	36A	13416A-0100	Pressure Ring, Weep (LP122A-5100)	3
9	01009	O-Ring	1	36A	13416A	Pressure Ring, Weep (LP122A-4000)	3
10	01010-0100	Screw (LP122A-4000)	4	36B	06174	Drip Shield	3
10	01010	Screw (LP122A-5100)	4	39	07744-0100	Pressure Ring	3
11	01011-0400	Spring Washer	5	40	07745	V-Sleeve	6
12	07109-0400	Plug, 1/2" BSP (LP122A-4000)	1	41	07746-0100	Support Ring (LP122A-5100)	3
12	07109	Plug, 1/2" BSP (LP122A-5100)	1	41	07746	Support Ring (LP122A-4000)	3
13	07182	Gasket	1	42	06589	Plug, 1/8" BSP	3
14	07111	Bearing Cover	2	42A	07204-0100	Steel Ring	3
15	07112	Crankshaft Seal	2	43	13343-4000	Valve Casing	1
16	07113	O-Ring	2	44	07748-0100	Valve Seat (LP122A-5100)	6
17	07114-0100	Hex Screw (LP122A-4000)	8	44	07748	Valve Seat (LP122A-4000)	6
17	07114	Hex Screw (LP122A-5100)	8	44A	07150-0001	O-Ring (LP122A-5100)	6
20	07116	Taper Roller Bearing	2	44A	07150	O-Ring (LP122A-4000)	6
20A	07117	Fitting Disc, 0.1mm	1	45	07749-0100	Valve Plate (LP122A-5100)	6
20B	13001	Fitting Disc, 0.15mm	2	45	07749	Valve Plate (LP122A-4000)	6
20C	04055	Shim (LP122A-4000)	3	46	07750	Valve Spring	6
21	05376	Shaft Protector	1	46A	07751-0100	Valve Assembly (LP122A-5100)	6
21A	05377	Shaft Guard Holder	1	46A	07751	Valve Assembly (LP122A-4000)	6
22	13242	Crankshaft	1	47	07752	Spring Retainer	6
23	13243	Key	1	48	06089	Plug	6
24	13340	Connecting Rod Assy.	3	48A	12055	O-Ring	6
24A	13277	Hex Screw	6	49	07157	Stud Bolt	8
24B	13278	Spring Washer	6	49A	07158	Nut	8
25	13341	Crosshead Plunger Base Assembly	3	49B	07159	Washer	8
28	13232	Crosshead Pin	3	50	07423-0100	Plug	1
29A	07735	Centering Sleeve	3	50A	07755-0100	Steel Ring (LP122A-5100)	1
29B	07736	Plunger Pipe	3	50A	07161	Copper Ring (LP122A-4000)	1
29C	07737-0100	Tension Screw (LP122A-5100)	3	52	13020	Disk for Crankshaft	1
29C	07737	Tension Screw (LP122A-4000)	3	53	06607	Hexagon Screw	1
				54	07756	Plug 1" NPT	1
				55	06982	Plug 1-1/2" NPT	1

NOTE: For LP122 pumps manufactured prior to 5/94, which need weep seal replacement, change the pressure ring (36) to the newer style (p/n 13416) and use the new style weep seal (p/n 13415) in your pumps.

LP122A-4000 & LP122A-5100 PUMP REPAIR KITS

Plunger Packing Kit - # 09477

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
35A	07740	O-Ring	3
36	13415	V-Sleeve, Weep	3
40	07745	V-Sleeve	6

Oil Seal Kit - #09577

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
31	07133	Radial Shaft Seal	3

Valve Assembly Kit - #09136 (LP122A-4000)

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
46A	07751	Valve Assembly	6
48A	12055	O-Ring	6

Valve Assembly Kit - #09136-0100 (LP122A-5100)

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty.</u>
46A	07751-0100	Valve Assembly	6
48A	12055	O-Ring	6

Preventative Maintenance Check List & Recommended Spare Parts List						
Check	Daily	Weekly	50 hrs	Every 500 hrs	Every 1500 hrs	Every 3000 hrs
Oil Level/Quality	X					
Oil Leaks	X					
Water Leaks	X					
Belts, Pulley		X				
Plumbing		X				
Recommended Spare Parts						
Oil Change p/n 01154			X	X		
Seal Spare Parts (1 kit/pump)					X	
Oil Seal Kit (1 kit/pump)					X	
Valve Spare Parts (1 kit/pump)						X


LP122A-4000 & LP122A-5100 PUMP SYSTEM MALFUNCTION

<u>MALFUNCTION</u>	<u>CAUSE</u>	<u>REMEDY</u>
The Pressure and/ or the Delivery Drops	Worn packing seals Broken valve spring Belt slippage Worn or Damaged nozzle Fouled discharge valve Fouled inlet strainer Worn or Damaged hose Worn or Plugged relief valve on pump Cavitation Unloader	Replace packing seals Replace spring Tighten or Replace belt Replace nozzle Clean valve assembly Clean strainer Repair/Replace hose Clean, Reset, and Replace worn parts Check suction lines on inlet of pump for restrictions Check for proper operation
Water in crankcase	High humidity Worn seals	Reduce oil change interval Replace seals
Noisy Operation	Worn bearings Cavitation	Replace bearings, Refill crankcase oil with recommended lubricant Check inlet lines for restrictions and/or proper sizing
Rough/Pulsating Operation with sure Drop	Worn packing Inlet restriction Accumulator pressure Unloader Cavitation	Replace packing Check system for stoppage, air Pres- leaks, correctly sized inlet plumbing to pump Recharge/Replace accumulator Check for proper operation Check inlet lines for restrictions and/or proper size
Pump Pressure as Rated, Pressure Drop at gun	Restricted discharge plumbing	Re-size discharge plumbing to flow rate of pump
Excessive Leakage	Worn plungers Worn packing/seals Excessive vacuum Cracked plungers Inlet pressure too high	Replace plungers Adjust or Replace packing seals Reduce suction vacuum Replace plungers Reduce inlet pressure
High Crankcase Temperature	Wrong Grade of oil Improper amount of oil in crankcase	Giant oil is recommended Adjust oil level to proper amount


LP122A-4000 & LP122A-5100 - Repair Instructions




1. With a 30mm wrench, remove the six (6) plugs (48) from the valve casing (43). Inspect the O-rings (48A) and replace if necessary. Remove the complete valve assembly (46A) by threading a 12mm bolt into the spring retainer and pulling straight out.

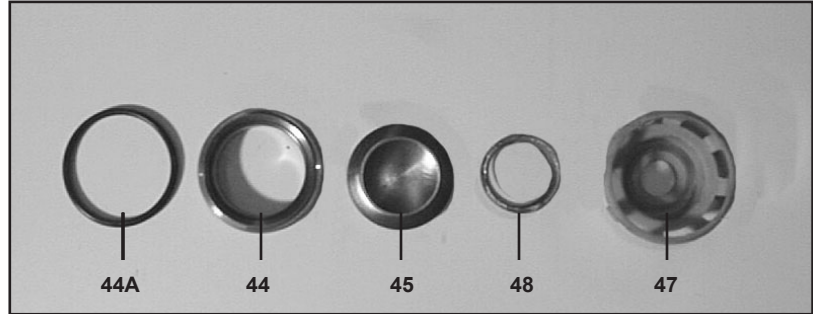


2. To disassemble the valve, screw the bolt into the retainer until the valve plate (45) presses the valve seat (44) out of the spring retainer. Examine all parts and replace if necessary. If the seat doesn't come out, use a valve puller to remove.

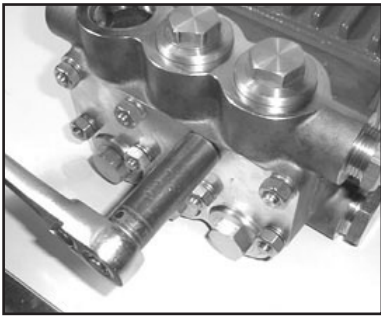

3. Remove the eight (8) hex nuts (49A) with a 19mm wrench. Tap the back of the manifold (43) with a rubber mallet to dislodge and slide off the studs.
5. If there are signs of oil leaking through the plunger oil seals, then replacement is necessary. Disassemble the gear end and push out the seals from the back of the pump.

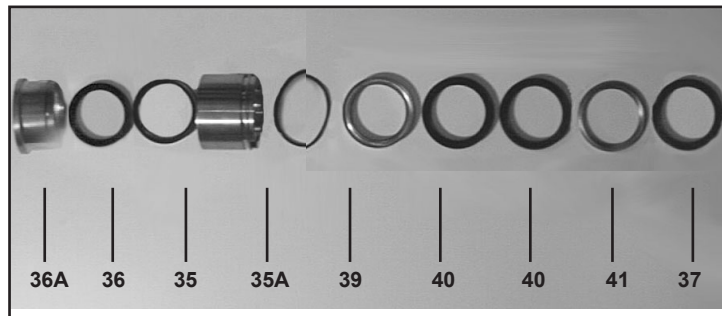


4. Remove the seal sleeve (35) from the manifold and/or crankcase. Remove the pressure rings (39&36A), v-sleeves (40&36), support ring (41) and O-rings from the manifold and seal sleeve, respectively. Examine seals carefully and replace if worn. Clean all parts.

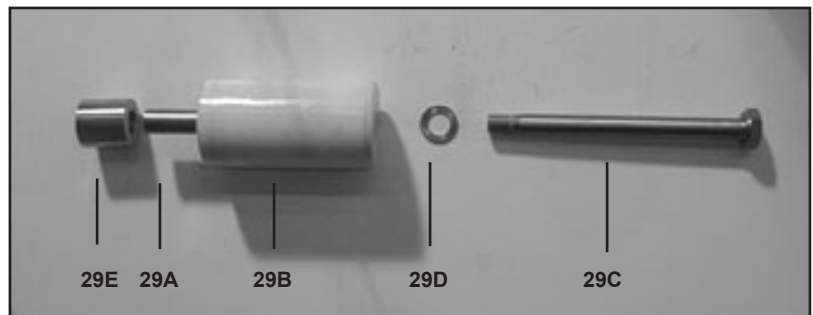


6. Inspect surface of plunger pipe (29B) carefully. Remove any chemical or mineral deposits taking care not to damage the surface of the plunger. If plunger pipe is worn, remove the plunger bolt (29C), plunger pipe (29B) and spacer (29E). Replace worn parts necessary. **Note: Always use a new copper gasket (29) when repairing the plunger assembly.**

LP122A-4000 & LP122A-5100 - Repair Instructions

TO REASSEMBLE PROCEED AS FOLLOWS:

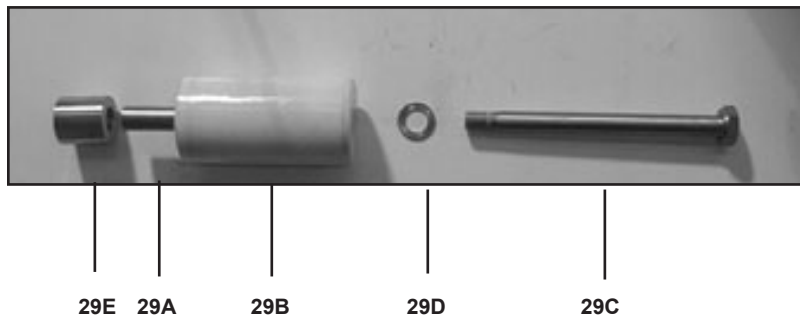

7. If previously disassembled thoroughly clean all exposed surfaces on the spacer (29E) and all exposed threads on the plunger bolt (29C) and the steel plunger base (25). Threads **MUST** be free of old loc-tite and any other material such as oil, grease, etc. This is necessary to ensure proper curing of new loc-tite. Giant recommends cleaning the threads with acetone or other suitable cleaner. Reassemble plunger assembly parts (29A, 29B, & 29E) using a new copper gasket (29D) and the cleaned plunger bolt (29C). Slide the bolt through the center of the four (4) pieces so that the threaded end is exposed. Apply several drops of loc-tite 243 (or equivalent) adhesive to the threads. Thread into steel plunger base and tighten to 26 ft.-lbs. (35 NM). **BE CERTAIN ALL PARTS ARE CENTERED WITH THE BOLT!**

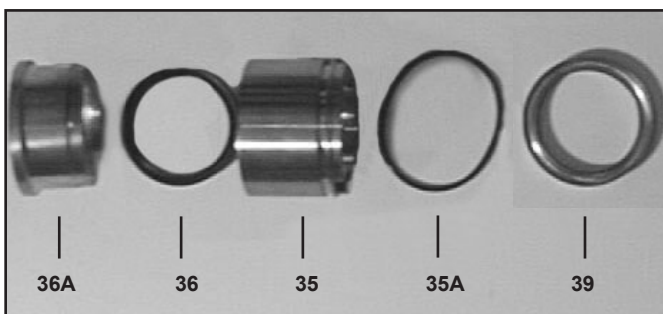


8. Lubricate weep seal (36). Place, weep seal (36), and pressure rings (36A & 39) into the seal sleeve (35). Assemble the O-ring (35A) onto seal sleeve and lubricate.



9. Place support ring (41) and v-sleeves (40) into valve casing.



10. Place entire manifold/seal sleeve assembly over the studs and push firmly until seated against the crank-case.

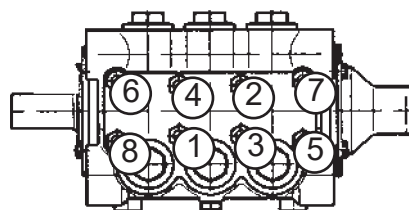


11. Tighten hex nuts (49A) in a crosswise pattern (shown above) to 60 ft.-lbs. (80 NM)

LP122A-4000 & LP122A-5100 - Repair Instructions



12. Next, place valve assemblies (46A) into manifold after first lubricating the O-ring (44A). Seat firmly into manifold.

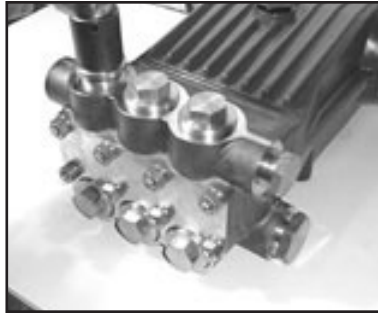

13. Replace plug with O-ring (48, & 48A) and tighten to 160 ft.-lbs. (217 NM).

14. Fill crankcase with approximately 116 fluid ounces of Giant oil or equivalent SAE 90 industrial gear oil and check oil level of the crankcase with the dipstick. Proper level is center of two lines. Reinstall your Giant LP pump into your system.


LP122A-4000 & LP122A-5100 TORQUE SPECIFICATIONS

<u>Item #</u>	<u>Part #</u>	<u>Description</u>	<u>Torque Amount</u>
10	01010 / 01010-0100	Screw, Cover	125 in.-lbs. (14 NM)
17	07114 / 07114-0100	Hex Screw, Bearing Cover	125 in.-lbs. (14 NM)
24A	13277	Hex Screw, Connecting Rod	250 in.-lbs. (28 NM)
29C	07737 / 07737-0100	Plunger Bolt	26 ft.-lbs. (35 NM)
48	06089	Plug, Valve	160 ft.-lbs. (217 NM)
49A	07158	Nut, Stud Bolt	60 ft.-lbs. (81 NM)

Contact Giant Industries or your local distributor for maintenance of the gear end of your pump. Phone: 419/531-4600

***Contact Giant Industries for service school information.
Phone: (419) 531-4600***

LP122A-4000 & LP122A-5100 Dimensions (mm)

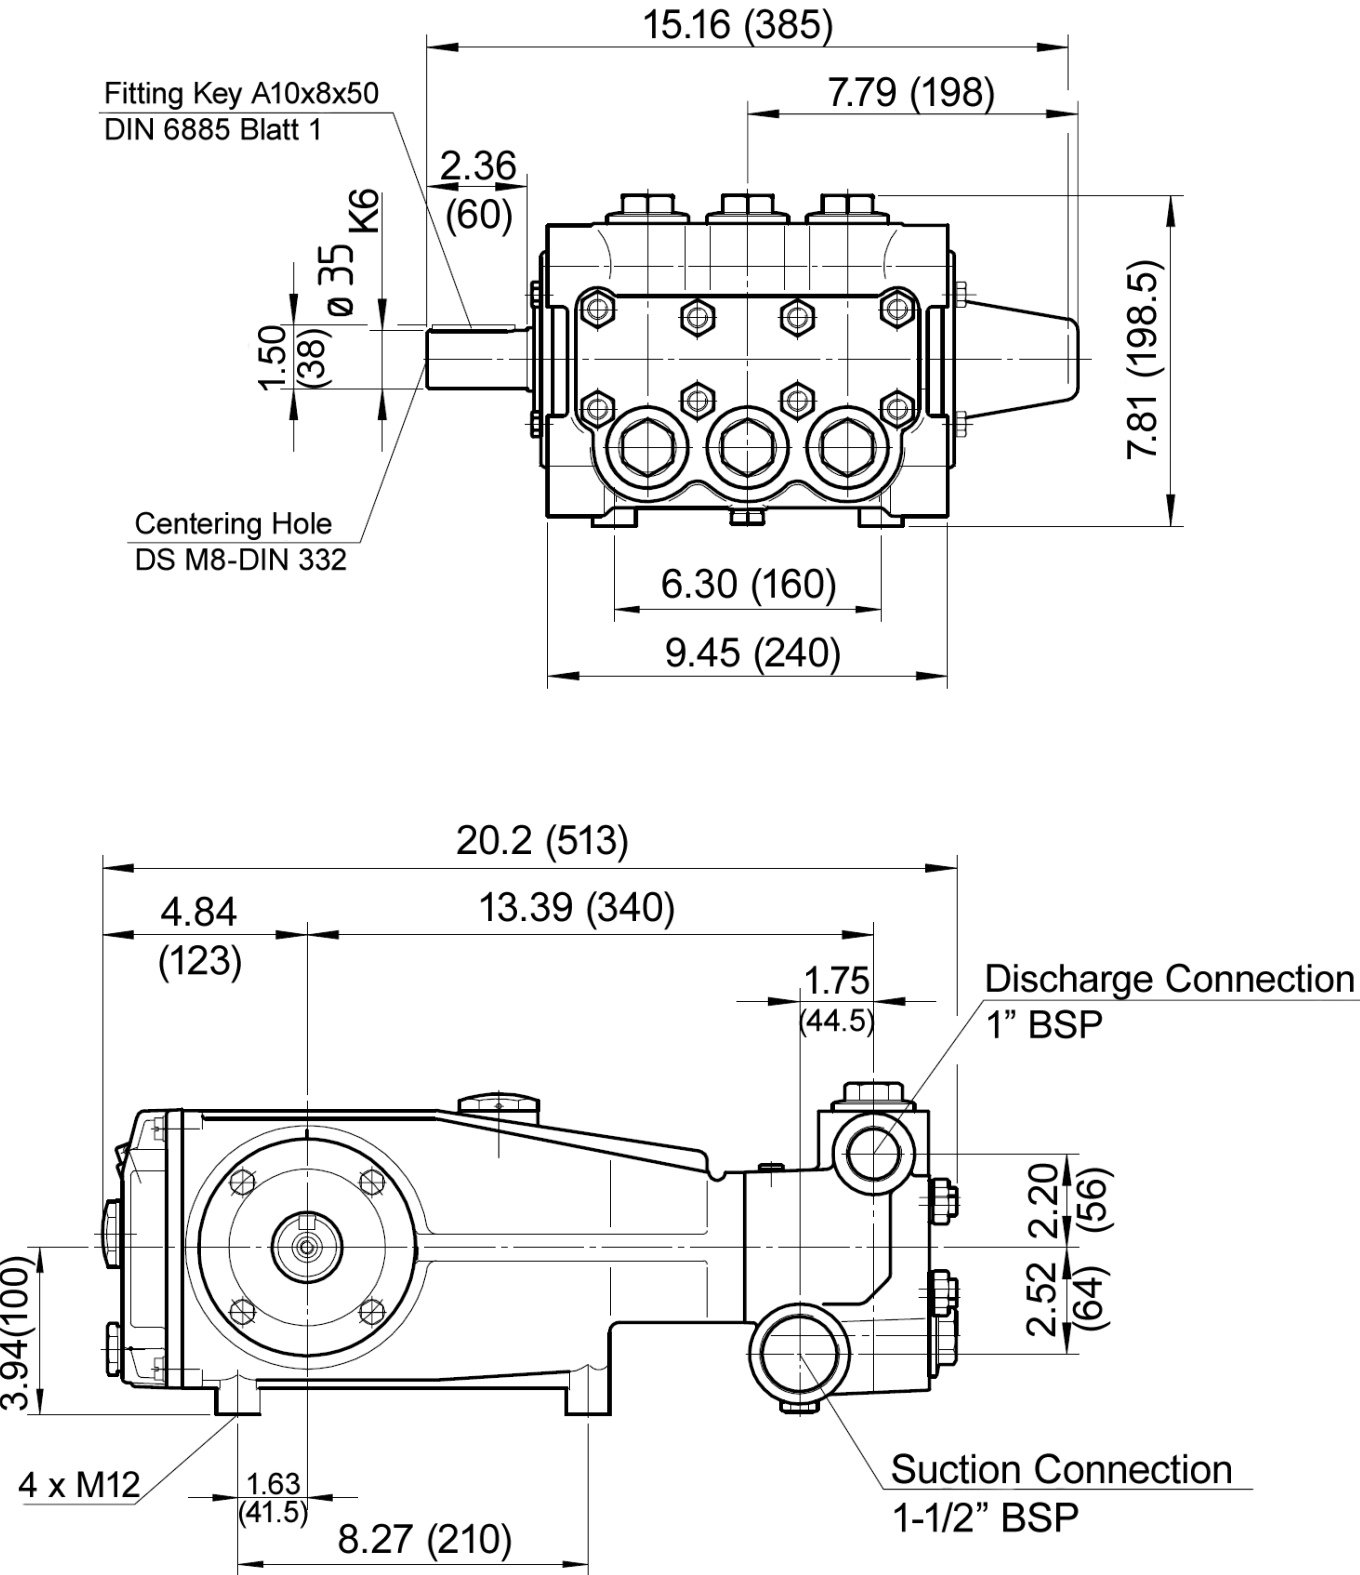

GIANT INDUSTRIES LIMITED WARRANTY

Giant Industries, Inc. pumps and accessories are warranted by the manufacturer to be free from defects in workmanship and material as follows:

1. Five (5) years from the date of shipment for all pumps used in portable pressure washers with NON-SALINE, clean water applications.
2. Two (2) years from the date of shipment for Giant pumps used in car wash applications.
3. One (1) year from the date of shipment for all other Giant industrial and consumer pumps.
4. Six (6) months from the date of shipment for all rebuilt pumps
5. Ninety (90) days from the date of shipment for all Giant accessories.

This warranty is limited to repair or replacement of pumps and accessories of which the manufacturer's evaluation shows were defective at the time of shipment by the manufacturer. The following items are NOT covered or will void the warranty:

1. Defects caused by negligence or fault of the buyer or third party.
2. Normal wear and tear to standard wear parts.
3. Use of repair parts other than those manufactured or authorized by Giant.
4. Improper use of the product as a component part.
5. Changes or modifications made by the customer or third party.
6. The operation of pumps and or accessories exceeding the specifications set forth in the Operations Manuals provided by Giant Industries, Inc.

Liability under this warranty is on all non-wear parts and limited to the replacement or repair of those products returned freight prepaid to Giant Industries which are deemed to be defective due to workmanship or failure of material. A Returned Goods Authorization (R.G.A.) number and completed warranty evaluation form is required prior to the return to Giant Industries of all products under warranty consideration. Call (419)-531-4600 or fax (419)-531-6836 to obtain an R.G.A. number.

Repair or replacement of defective products as provided is the sole and exclusive remedy provided hereunder and the MANUFACTURER SHALL NOT BE LIABLE FOR FURTHER LOSS, DAMAGES, OR EXPENSES, INCLUDING INCIDENTAL AND CONSEQUENTIAL DAMAGES DIRECTLY OR INDIRECTLY ARISING FROM THE SALE OR USE OF THIS PRODUCT.

THE LIMITED WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES OR REPRESENTATION, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AND ALL SUCH WARRANTIES ARE HEREBY DISCLAIMED AND EXCLUDED BY THE MANUFACTURER.



WARNING: This product might contain a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.

For more information go to www.P65Warnings.ca.gov



GIANT INDUSTRIES, INC., 900 N. Westwood Avenue, P.O. Box 3187, Toledo, OH 43607
PHONE: (419) 531-4600, FAX: (419) 531-6836, www.giantpumps.com

© Copyright 2012 Giant Industries, Inc.